

GPON OLT WEB USER MANUAL

Version：V1.5
Release Date 2024-04-24

Contents

Chapter 1 Monitor 1
1.1 System Information 1
1.1.1 Login OLT 1
1.1.2 Device Information 1
1.2 Port Information 2
1.2.1 Basic Information 2
1.2.2 Basic Statistics 2
1.2.3 Detail Statistics 3
1.2.4 Optical Module 3
1.3 MAC Address Table 4
1.4 ONT Status 4
1.4.1 Overview 5
1.4.2 Capability 5
1.4.3 Optical 5
1.4.4 Port Status 6
1.4.5 Statistics 6
1.4.6 MAC Address 7
1.4.7 Multicast Group 7
1.4.8 WAN 8
1.4.9 WLAN 8
1.5 ONT Optical 9
1.6 ONT Auto Find 9
1.6.1 ONT Auto Find List 9
1.6.2 ONT Auto Find Information 10
1.7 ONT Silent 10
1.8 DBA Map 11
1.9 Syslog Information 11
Chapter 2 System Management 13
2.1 System Information 13
2.2 Web Timeout 13
2.3 User Management 13

2.3.1 User Overview 14
2.3.2 User Add 14
2.3.3 User Modify 14
2.3.4 User Delete 15
Chapter 3 Port Management 16
3.1 Basic Configuration 16
3.2 Port Mirror 16
3.3 Port Isolation 17
3.4 Storm Control 17
3.5 Bandwidth Control 18
Chapter 4 Basic Service 19
4.1 VLAN Configuration 19
4.1.1 Static VLAN 19
4.1.2 VLAN Port 19
4.2 IP and Route Configuration 20
4.2.1 MGMT IP Configuration 20
4.2.2 VLAN IP Configuration 20
4.2.3 Static Route Configuration 21
4.2.4 RIP Configuration 21
4.2.5 OSPF Configuration 22
4.3 Multicast 23
4.3.1 Multicast Configuration 23
4.3.2 IGMP Configuration 23
4.4 STP Configuration 24
4.4.1 Global Configuration 24
4.4.2 Port Configuration 25
4.5 LACP Configuration 25
4.5.1 Status Display 26
4.5.2 LACP Configuration 26
4.5.3 Protocol Control 26
4.6 MAC Configuration 27
4.6.1 Port Binding Display 27

4.6.2 Port Binding Configuration 27
4.7 SNMP Configuration 28
4.7.1 Commutity Configuration 28
4.7.2 Trap Configuration 28
4.8 DHCP Configuration 29
4.8.1 DHCP Snooping 29
4.8.2 IP-MAC Binding 30
4.8.3 DHCP Server&Relay 30
4.8.4 IP Pool 31
Chapter 5 Advance Service 32
5.1 System Time 32
5.2 DNS Client 32
5.3 SNTP 33
5.4 Access List 33
5.4.1 Classifier 33
5.4.2 Policy 34
5.5 Service Access Control 35
5.6 Login Access Control 35
Chapter 6 ONT Management 36
6.1 Auto Find 36
6.2 Auto Config 36
6.3 Silent 37
6.4 FEC 37
6.5 Deactive/Active 37
6.6 Protect Switch 38
6.7 Alarm 38
6.7.1 RSSI alarm 38
6.7.2 CPU alarm 39
6.7.3 Temperature alarm 39
Chapter 7 ONT Profile Management 41
7.1 DBA Profile 41
7.2 Upstream Profile 41

7.3 Downstream Profile 41
7.4 VLAN Profile 42
7.4.1 Create VLAN Profile 42
7.4.2 Configure VLAN Profile 42
7.5 Line Profile 43
7.5.1 Create Line Profile 43
7.5.2 Configure T-CONT 43
7.5.3 Configure GEMPORT 44
7.5.4 Mapping Configuration 44
7.5.5 Configure Flow 45
7.6 Rule Profile 45
7.7 Specific Profile 46
7.7.1 T-CONT 47
7.7.2 GEM Port 47
7.7.3 SIP 48
7.7.4 WAN 51
7.7.5 WLAN 52
7.7.6 TR069 52
7.7.7 CATV 53
7.7.8 Ring Check 54
7.8 Alarm Profile 54
7.9 Multicast Profile 55
7.9.1 Create Multicast Profile 55
7.9.2 Configure Multicast Profile Configuration 55
Chapter 8 Maintain 56
8.1 Software Upgrading 56
8.2 Configuration Operation 56
8.2.1 Configuration Update 56
8.2.2 Configuration Save 57
8.3 Device Reboot 57
8.4 ONT Operation 57
8.4.1 Software Upgrade 58

8.4.2 Upgrade Progress 58
8.4.3 Configuration Load 59
8.4.4 Load Progress 59
8.4.5 ONT Reboot 60
8.4.6 ONT Auto Reboot 60
8.5 Diagnose Operation 60
8.5.1 PING Test 61
8.5.2 TRACERT Test 61

Chapter 1 Monitor

1.1 System Information

1.1.1 Login OLT

The default management address of the OLT is 192.168.168.1, the PC is configured as the address of the 192.168.168.X, and the network cable is connected to the MGMT port to access the OLT. The default user name and password are admin/admin.



Figure 1-1

1.1.2 Device Information

1. Click Monitor-> System Information-> Device Information
2. This page displays information such as product description, hardware version, software version, and MAC address.



Figure 1-2

1.2 Port Information

Port information displays device port status, port traffic statistics, and uplink optical module information.

1.2.1 Basic Information

1. Click Monitor-> Port Information-> Basic Information
2. This page displays the port status, priority, speed, MTU, description and other information.

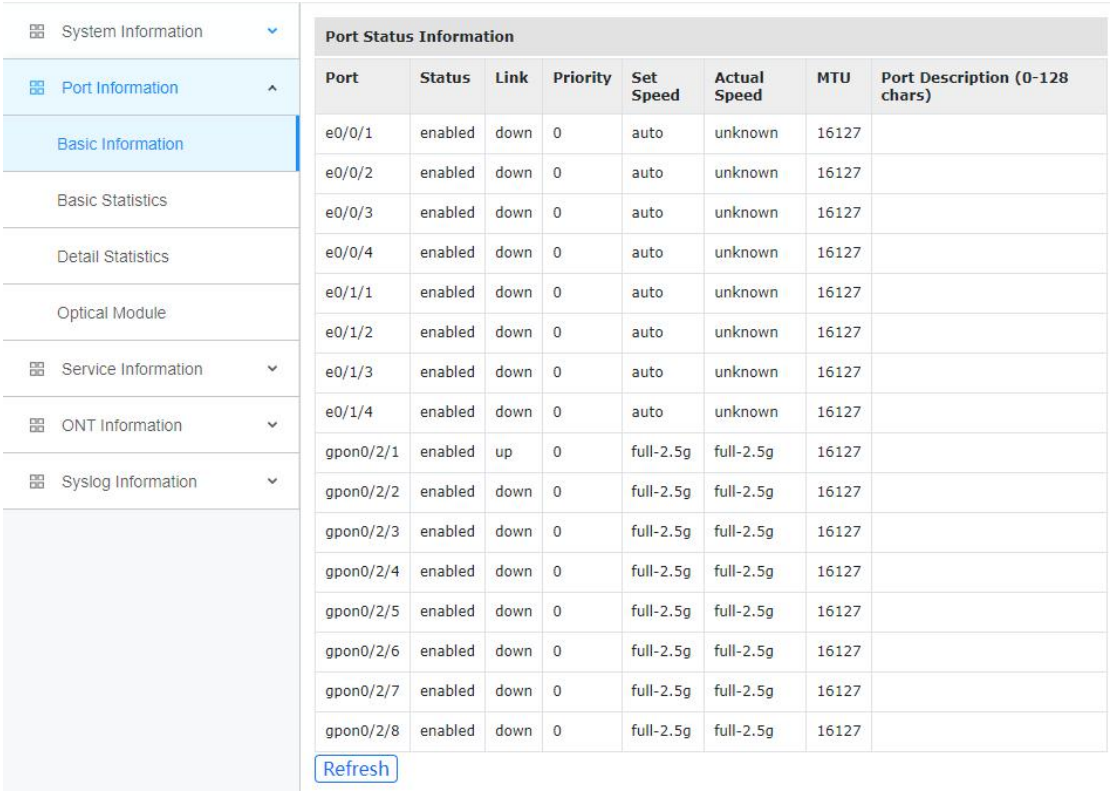


Figure 1-3

1.2.2 Basic Statistics

1. Click Monitor-> Port Information-> Basic Statistics
2. This page displays simple statistics about packets transmit and receive by the port.

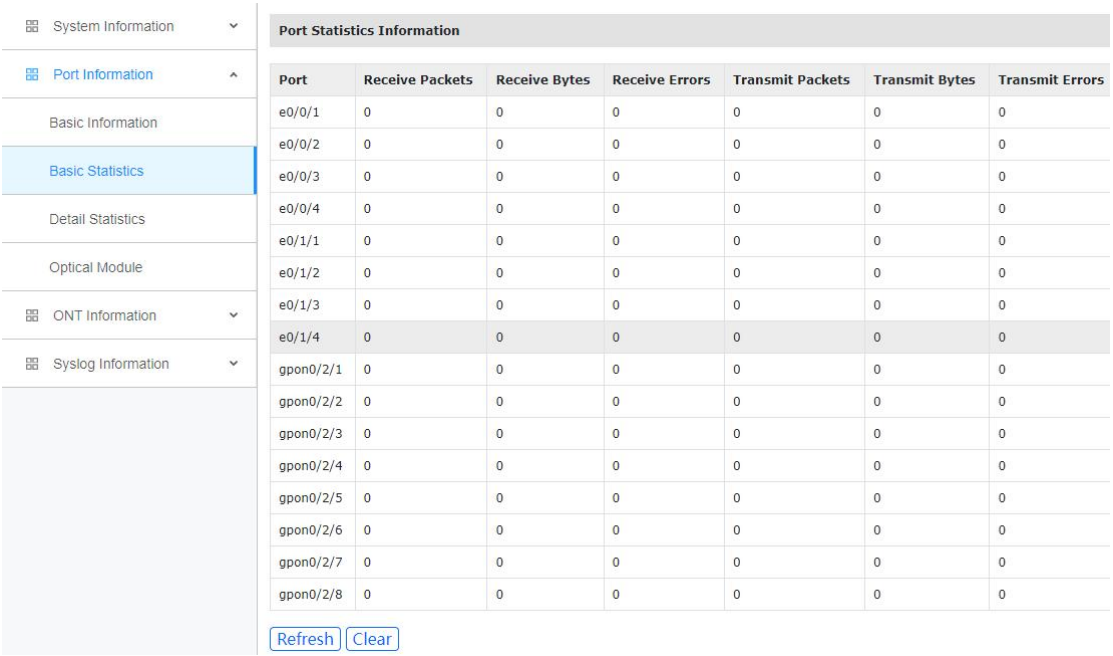


Figure 1-4

1.2.3 Detail Statistics

1. Click Monitor->Port Information->Detail Statistics
2. This page displays detailed statistics about the received and transmit packets on the port.

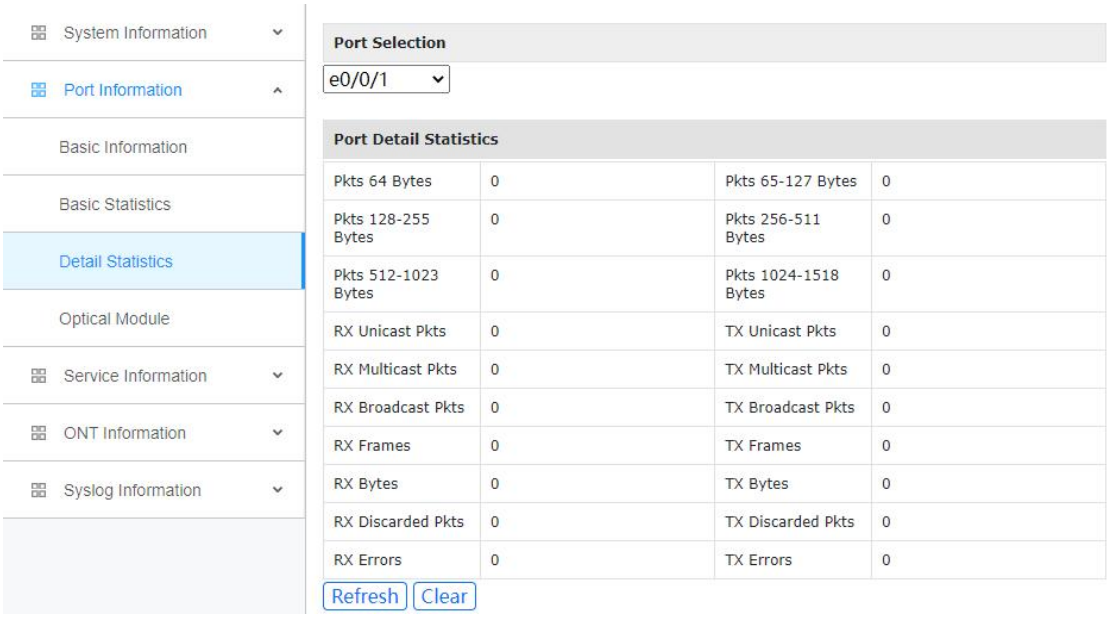


Figure 1-5

1.2.4 Optical Module

1. Click Monitor->Port Information->Optical Module

2. This page displays the basic information and DDM information of the optical module.

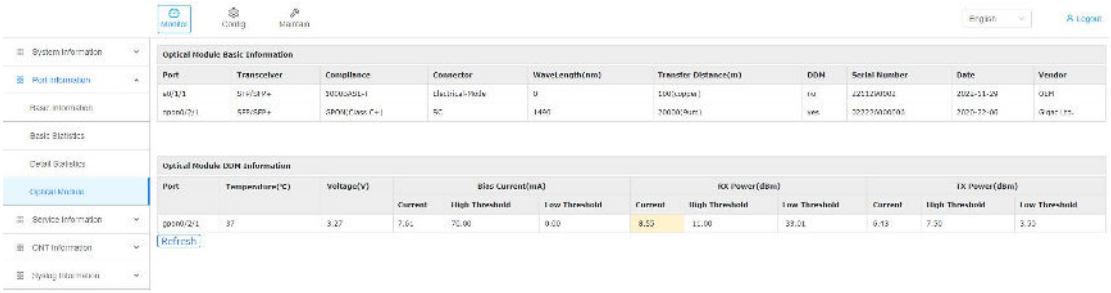


Figure 1-6

1.3 MAC Address Table

1. Click Monitor->Service Information->MAC Address Table
2. This page is used to view the MAC address information in OLT.

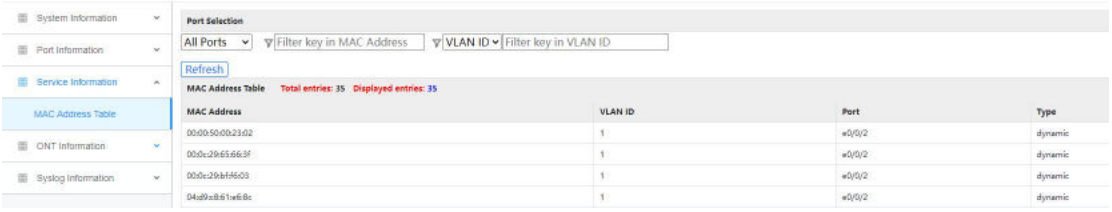


Figure 1-7

1.4 ONT Status

1. Click Monitor->ONT information->ONT Status
2. This page displays ONT's SN, model, Up Duration, run state and member state, etc.

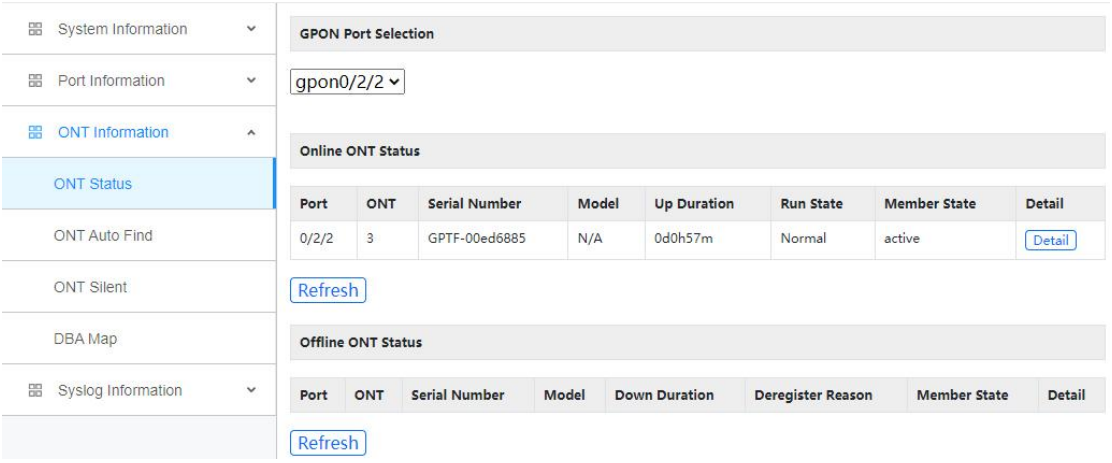


Figure 1-8

1.4.1 Overview

1. Click Monitor->ONT information->ONT Status->Detail->Overview
2. This page displays ONT's Description, Run state and Distance, etc.

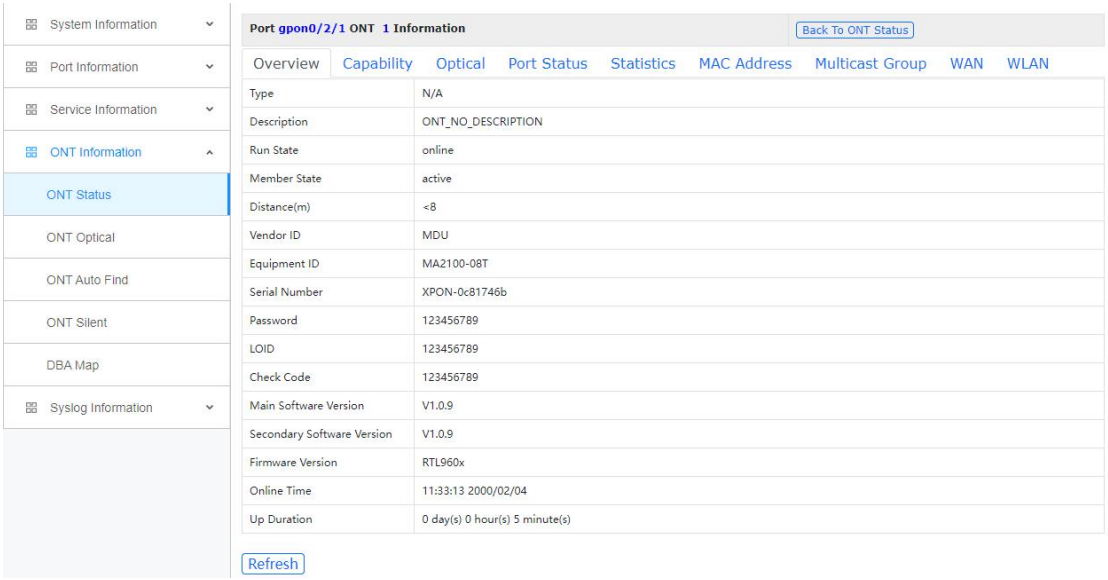


Figure 1-9

1.4.2 Capability

1. Click Monitor->ONT information->ONT Status->Detail->Capability
2. This page displays ONT's capability information.

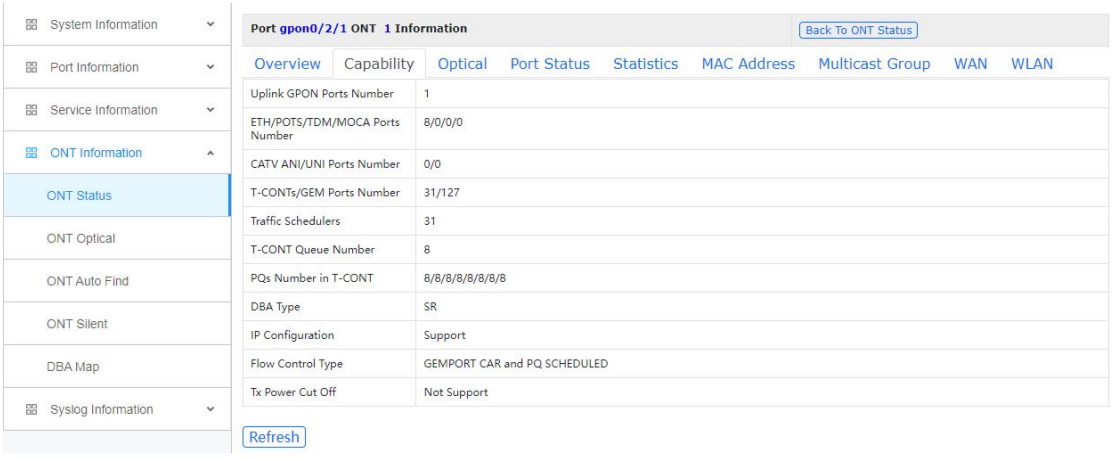


Figure 1-10

1.4.3 Optical

1. Click Monitor->ONT information->ONT Status->Detail->Optical
2. This page displays ONT's optical module power information.

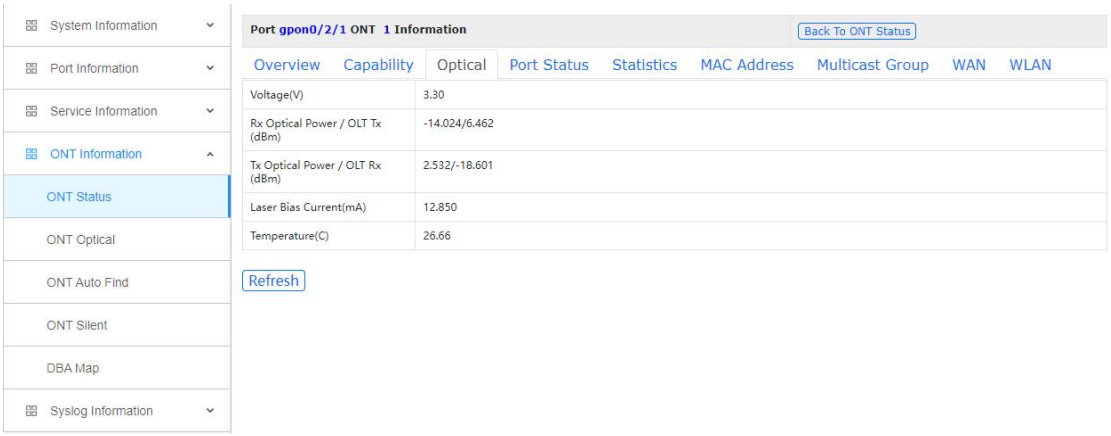


Figure 1-11

1.4.4 Port Status

1. Click Monitor->ONT information->ONT Status->Detail->Port Status
2. This page displays ONT's ethernet port operation state and link state, etc.

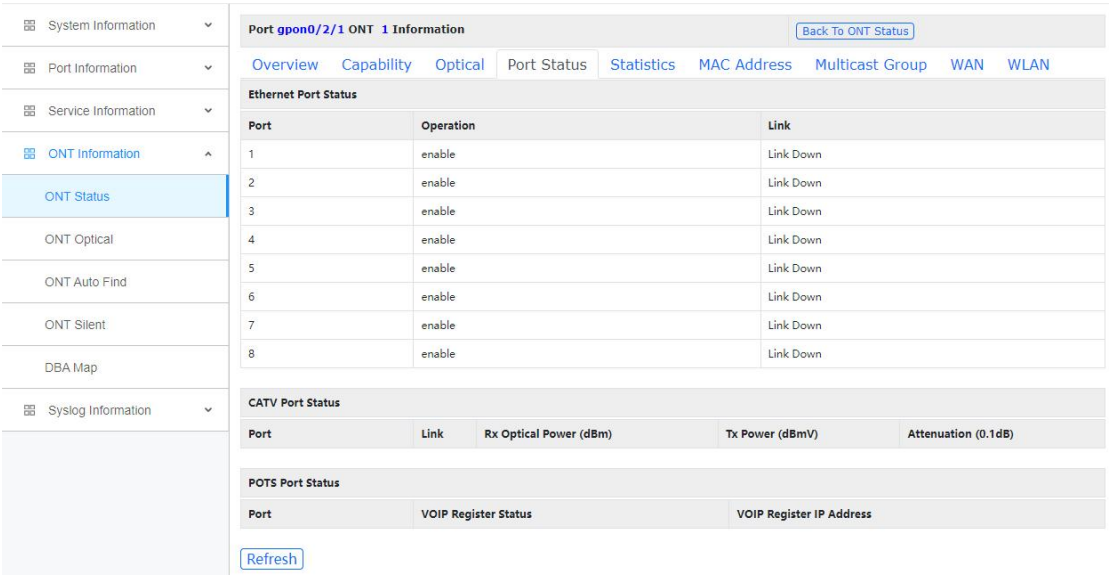


Figure 1-12

1.4.5 Statistics

1. Click Monitor->ONT information->ONT Status->Detail->Statistics
2. This page displays ONT's ethernet and GEM traffic statistics.

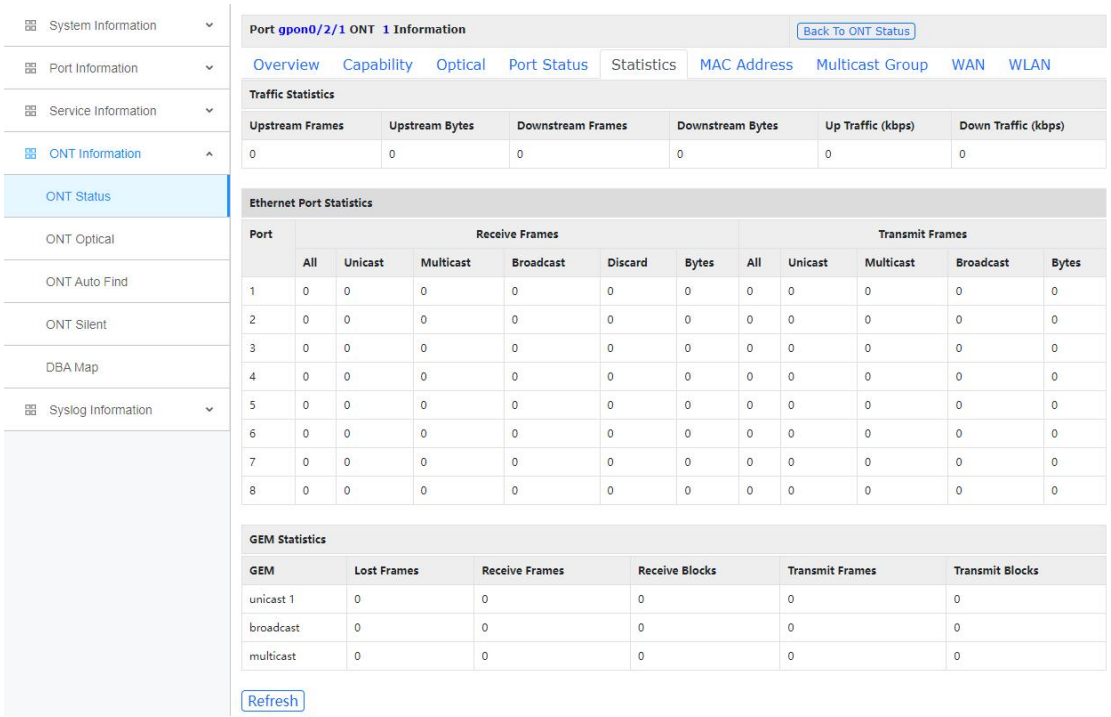


Figure 1-13

1.4.6 MAC Address

1. Click Monitor->ONT information->ONT Status->Detail->Mac Address
2. This page displays ONT's MAC address learned by ONT.

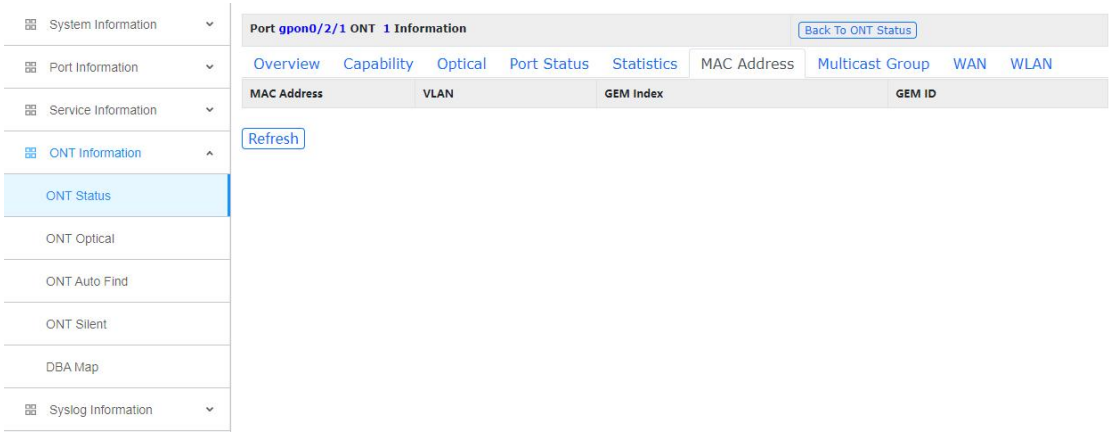


Figure 1-14

1.4.7 Multicast Group

1. Click Monitor->ONT information->ONT Status->Detail->Multicast Group
2. This page displays ONT's multicast group learned by ONT.

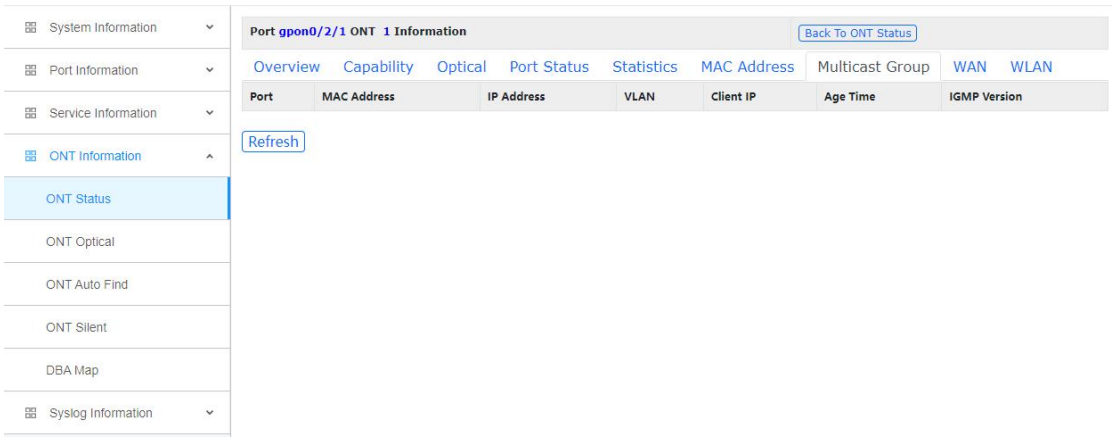


Figure 1-15

1.4.8 WAN

1. Click Monitor->ONT information->ONT Status->Detail->WAN
2. This page views the WAN configuration information (private protocol) that the OLT sends to the ONU under OMCI.



Figure 1-16

1.4.9 WLAN

1. Click Monitor->ONT information->ONT Status->Detail->WLAN
2. This page displays the WLAN configuration information (private protocol) that the OLT sends to the ONU under OMCI.

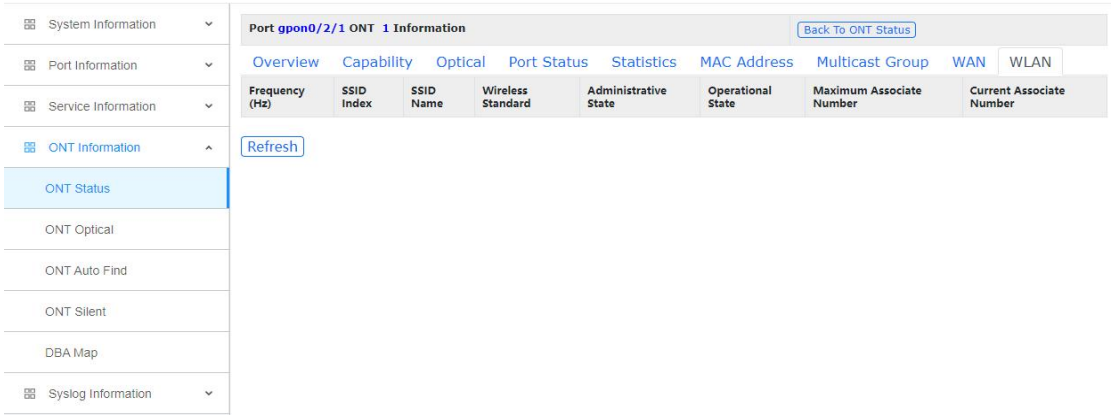


Figure 1-17

1.5 ONT Optical

1. Click Monitor->ONT information->ONT Optical
2. This page displays the optical power information of the registered ONT.

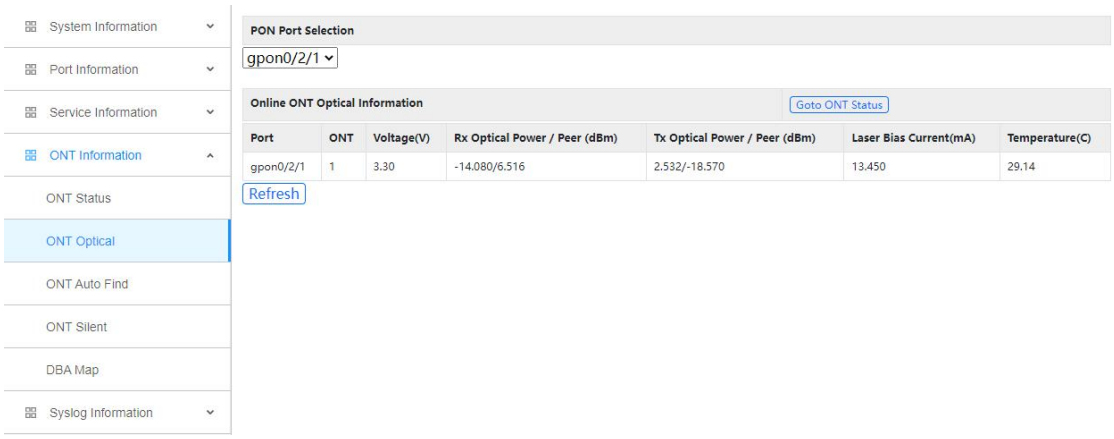


Figure 1-18

1.6 ONT Auto Find

1.6.1 ONT Auto Find List

1. Click Monitor->ONT information->ONT Auto Find
2. This page displays information about ONTs that have failed authentication.

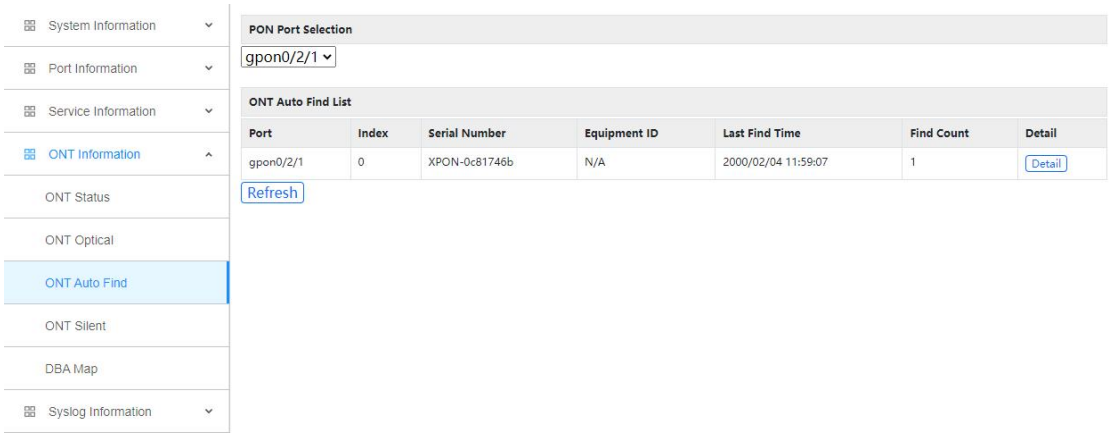


Figure 1-19

1.6.2 ONT Auto Find Information

1. Click Monitor->ONT information->ONT Auto Find->Detail
2. This page displays ONT's auto find detail information by find list index.

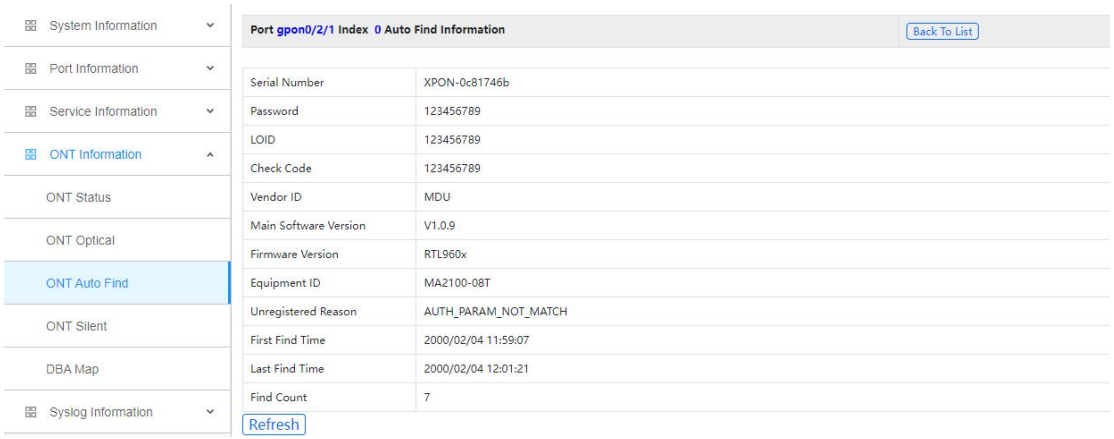


Figure 1-20

1.7 ONT Silent

1. Click Monitor->ONT information->ONT Silent
2. This page displays the ONU's configuration of failed authentication silent and offline silent.

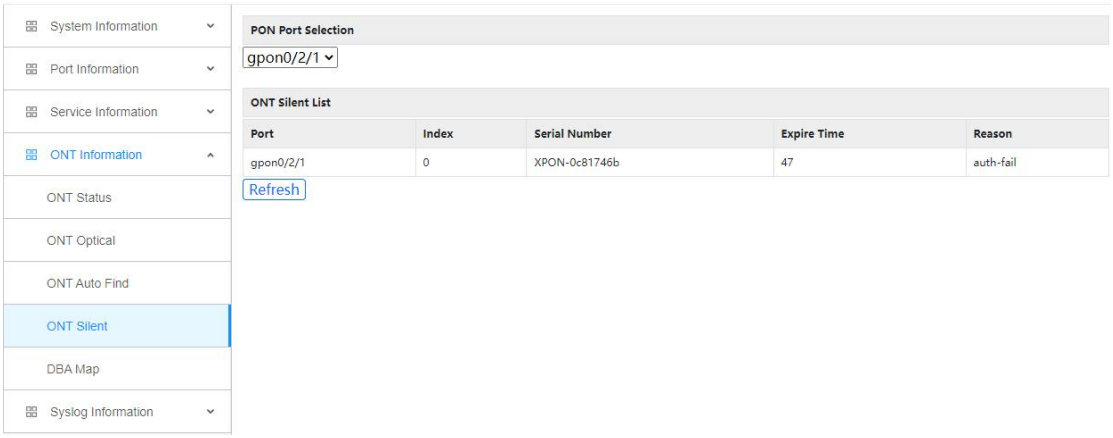


Figure 1-21

1.8 DBA Map

1. Click Monitor->ONT information->DBA Map
2. This page displays ONT DBA assignment information of GPON interface.

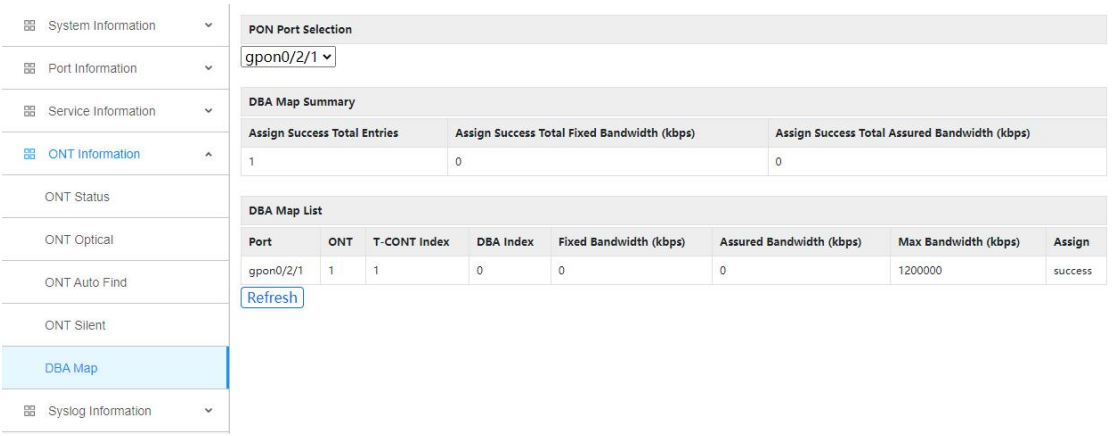


Figure 1-22

1.9 Syslog Information

1. Click Monitor->Syslog Information
2. This page displays the system log. The log records up to 10,000 entries, and it will be automatically overwritten when exceeded.

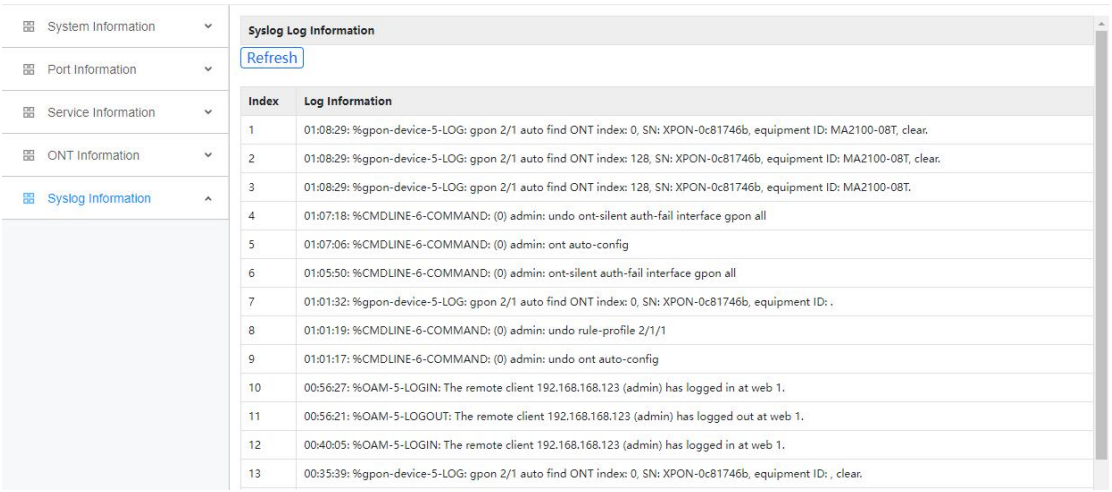

System Information
Port Information
Service Information
ONT Information
Syslog Information
Syslog Log Information
Refresh
Index
Log Information
1 01:08:29: %gpon-device-5-LOG: gpon 2/1 auto find ONT index: 0, SN: XPON-0c81746b, equipment ID: MA2100-08T, clear.
2 01:08:29: %gpon-device-5-LOG: gpon 2/1 auto find ONT index: 128, SN: XPON-0c81746b, equipment ID: MA2100-08T, clear.
3 01:08:29: %gpon-device-5-LOG: gpon 2/1 auto find ONT index: 128, SN: XPON-0c81746b, equipment ID: MA2100-08T.
4 01:07:18: %CMDLINE-6-COMMAND: (0) admin: undo ont-silent auth-fail interface gpon all
5 01:07:06: %CMDLINE-6-COMMAND: (0) admin: ont auto-config
6 01:05:50: %CMDLINE-6-COMMAND: (0) admin: ont-silent auth-fail interface gpon all
7 01:01:32: %gpon-device-5-LOG: gpon 2/1 auto find ONT index: 0, SN: XPON-0c81746b, equipment ID: .
8 01:01:19: %CMDLINE-6-COMMAND: (0) admin: undo rule-profile 2/1/1
9 01:01:17: %CMDLINE-6-COMMAND: (0) admin: undo ont auto-config
10 00:56:27: %OAM-5-LOGIN: The remote client 192.168.168.123 (admin) has logged in at web 1.
11 00:56:21: %OAM-5-LOGOUT: The remote client 192.168.168.123 (admin) has logged out at web 1.
12 00:40:05: %OAM-5-LOGIN: The remote client 192.168.168.123 (admin) has logged in at web 1.
13 00:35:39: %gpon-device-5-LOG: gpon 2/1 auto find ONT index: 0, SN: XPON-0c81746b, equipment ID: , clear.

Figure 1-23

Chapter 2 System Management

System OEM information modification and user management, etc.

2.1 System Information

1. Click Config->System Management->System Information Settings
2. This page is configure and display the system information of OLT.

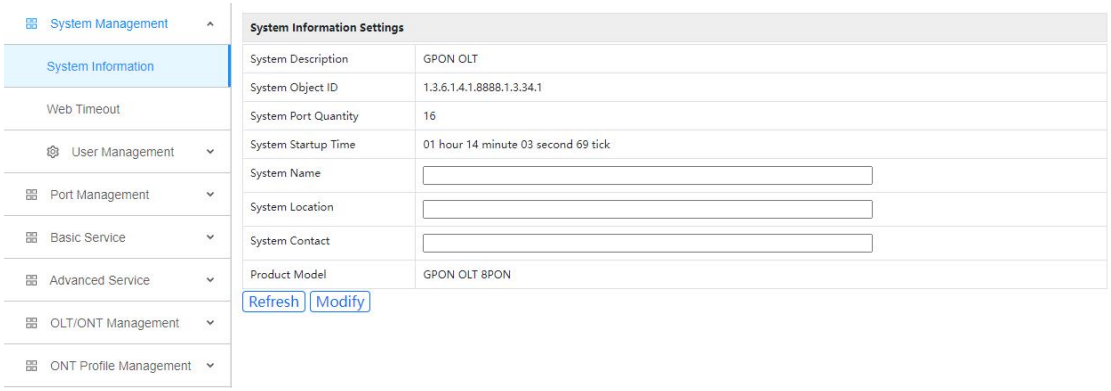


Figure 2-1

2.2 Web Timeout

1. Click Config->System Management->Web Timeout
2. This page configures the web timeout time, which can be 5, 10, 15 and 20 minutes.

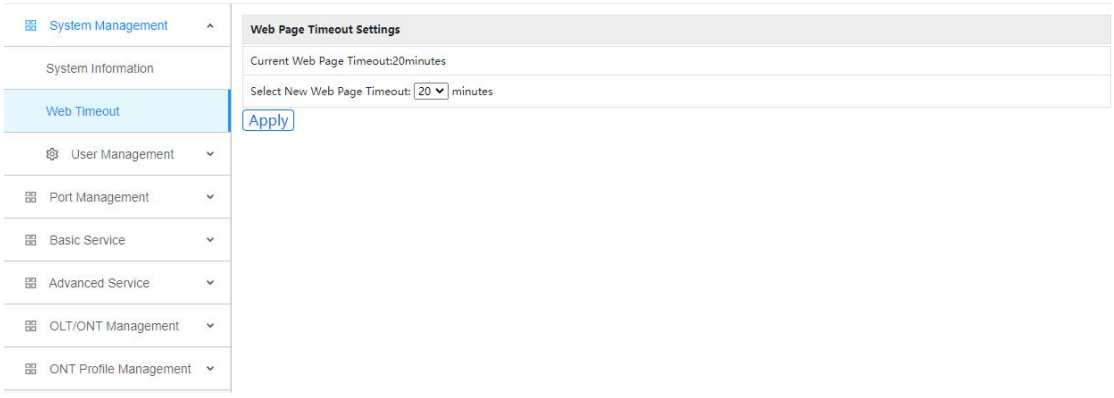


Figure 2-2

2.3 User Management

User management is used to modify, add and delete new users. The system administrator account cannot be deleted, and the user administrator account cannot modify user permissions, and cannot add user accounts.

2.3.1 User Overview

1. Click Config->System Management->User Management->User Overview
2. This page displays all the accounts and privilege of the device.

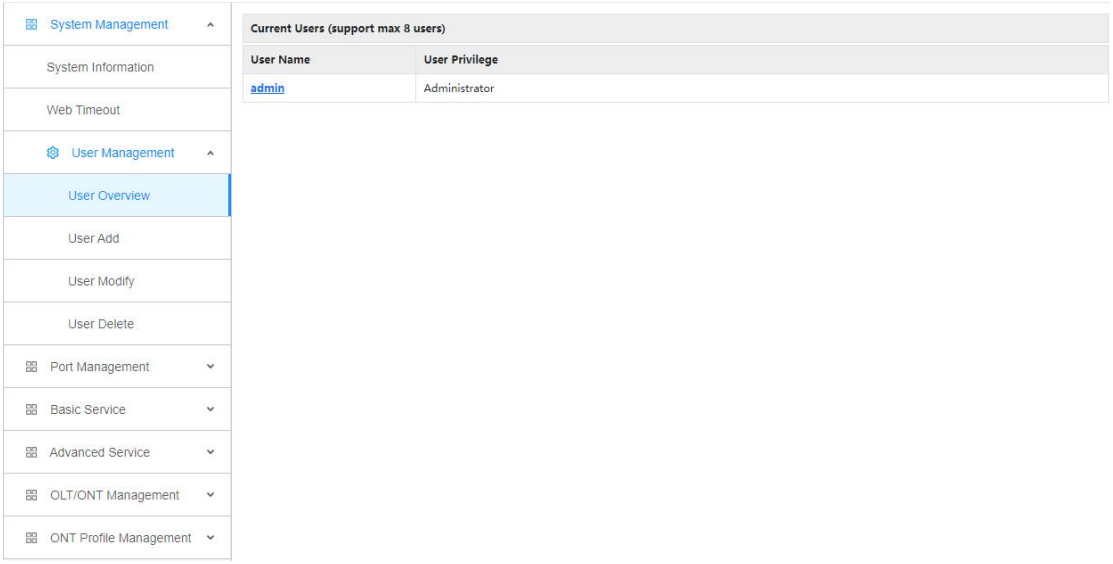


Figure 2-3

2.3.2 User Add

1. Click Config->System Management->User Management->User Add
2. This page is used to add user account and password.

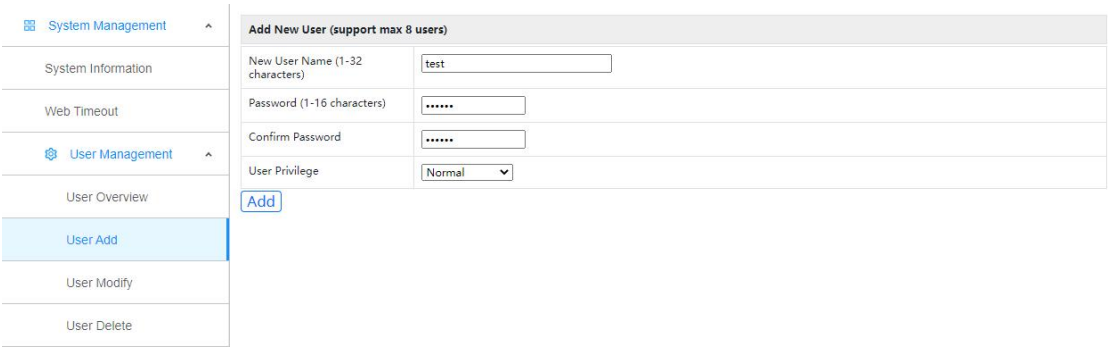


Figure 2-4

2.3.3 User Modify

1. Click Config->System Management->User Management->User Modify
2. This page is used to modify user password and user privilege. The admin account privilege cannot be modified. Only the admin account can modify the privilege of other users.

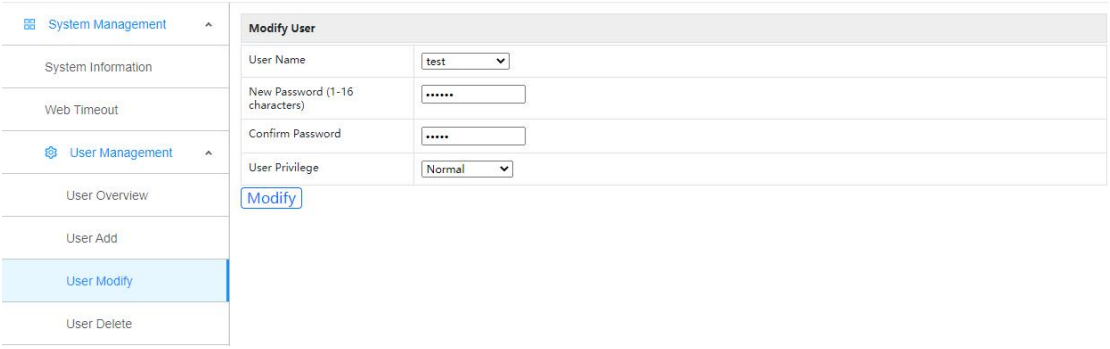


Figure 2-5

2.3.4 User Delete

1. Click Config->System Management->User Management->User Delete
2. This page is used to delete user accounts. Only admin user can perform this operation.

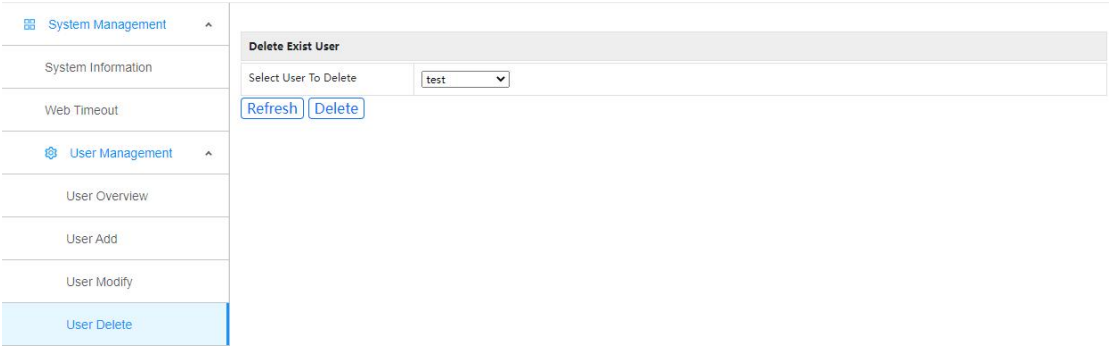


Figure 2-6

Chapter 3 Port Management

Port management configures port mirror, port isolation, storm control and bandwidth control.

3.1 Basic Configuration

1. Click Config->Port Management->Basic Configuration
2. This page configures the OLT port status, priority, rate, MTU, and port description information.

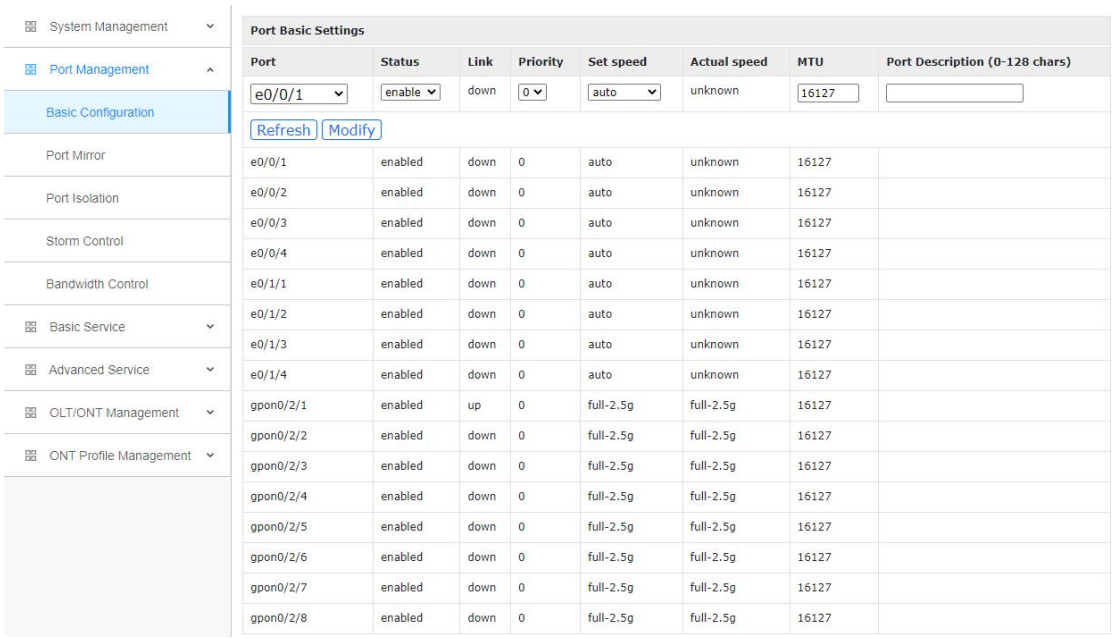


Figure 3-1

3.2 Port Mirror

1. Click Config->Port Management->Port Mirror
2. This page configures the port mirror function.

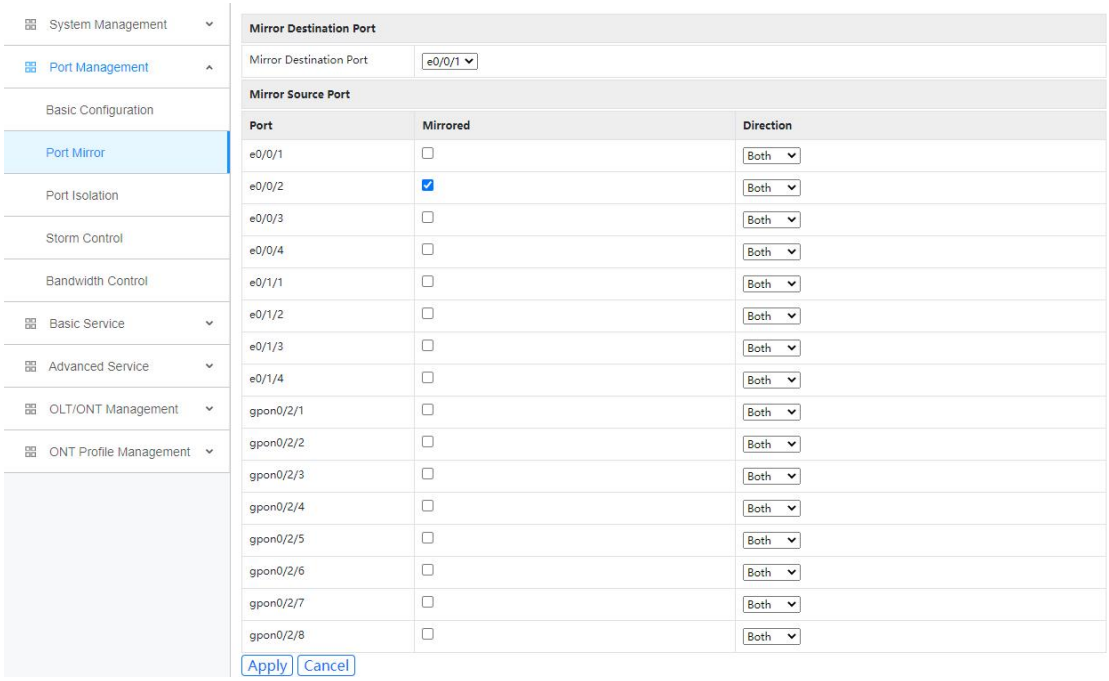


Figure 3-2

3.3 Port Isolation

1. Click Config->Port Management->Port Isolation
2. This page configures the port isolation function. The ports in the isolation group are isolated from each other and can only communicate with the uplink port, cannot communicate with other ports.

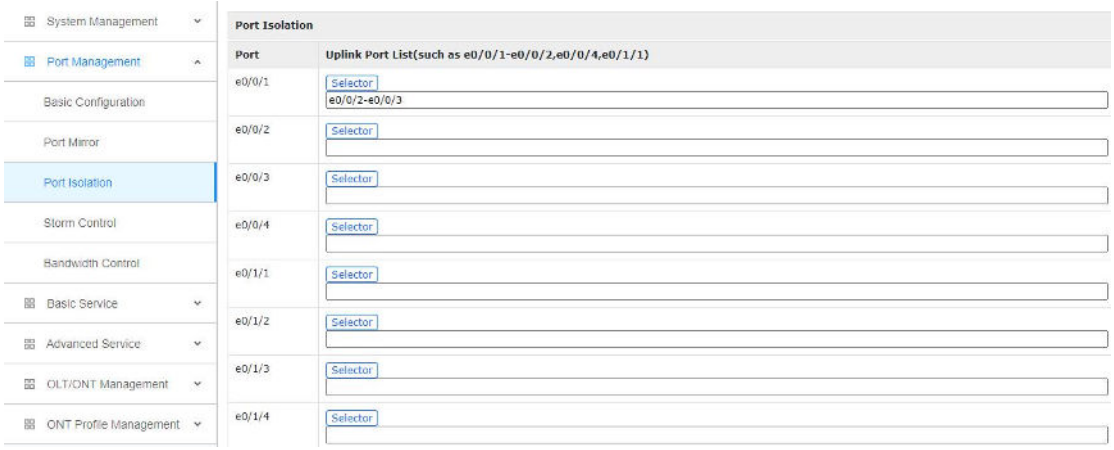


Figure 3-3

3.4 Storm Control

1. Click Config->Port Management->Storm Control
2. This page configures the storm control function, packets exceeding the configured speed will be discarded

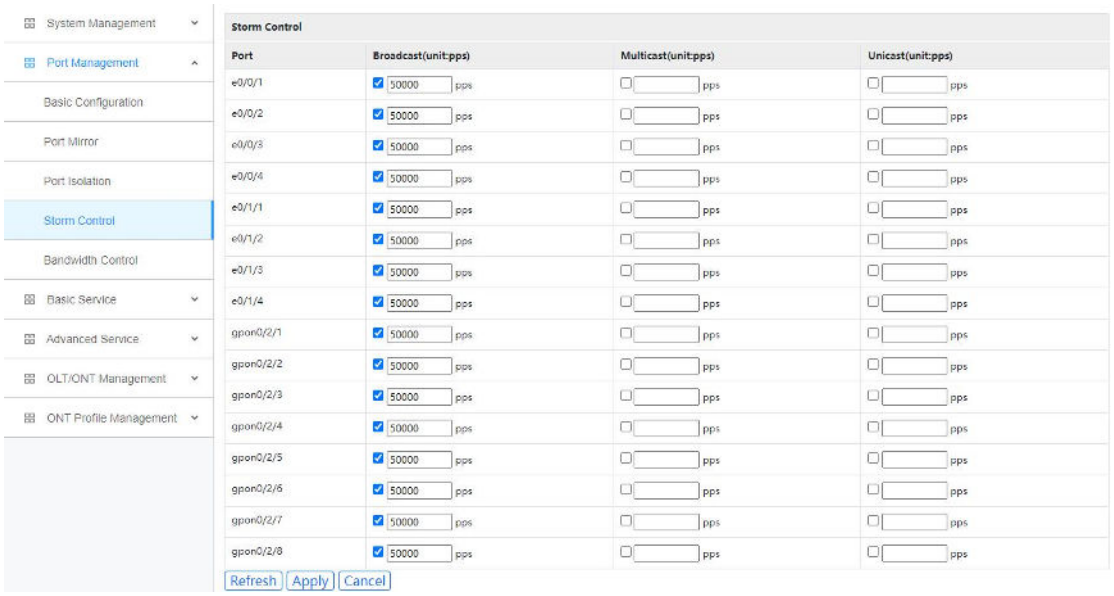


Figure 3-4

3.5 Bandwidth Control

1. Click Config->Port Management->Bandwidth Control
2. This page configures the ingress and egress rate of the OLT port, and the bandwidth is limited to an integer multiple of 64

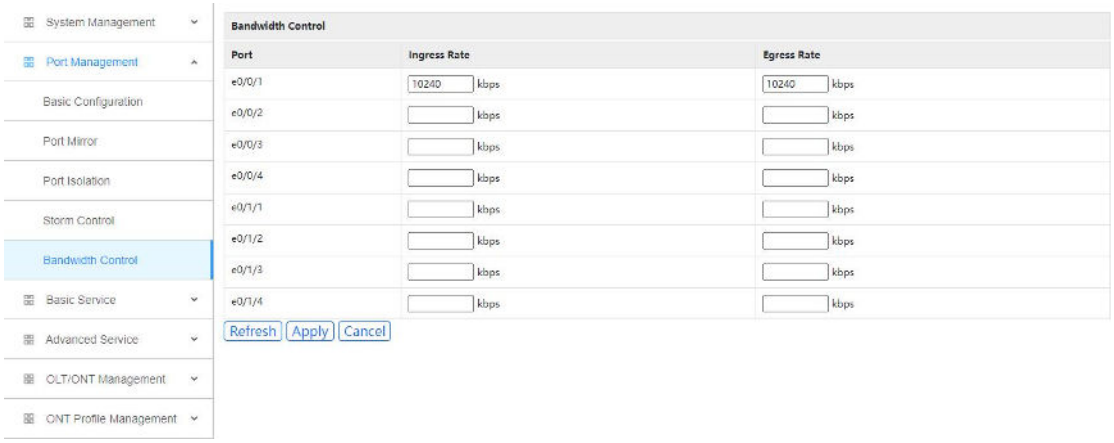


Figure 3-5

Chapter 4 Basic Service

Basic services include VLAN, management IP, Layer 2 multicast, STP, LACP and other functions.

4.1 VLAN Configuration

VLAN configuration can create VLANs and bind ports

4.1.1 Static VLAN

1. Click Config->Basic Service->VLAN Configuration->Static VLAN
2. This page can add, modify, delete, and add description information for VLANs.

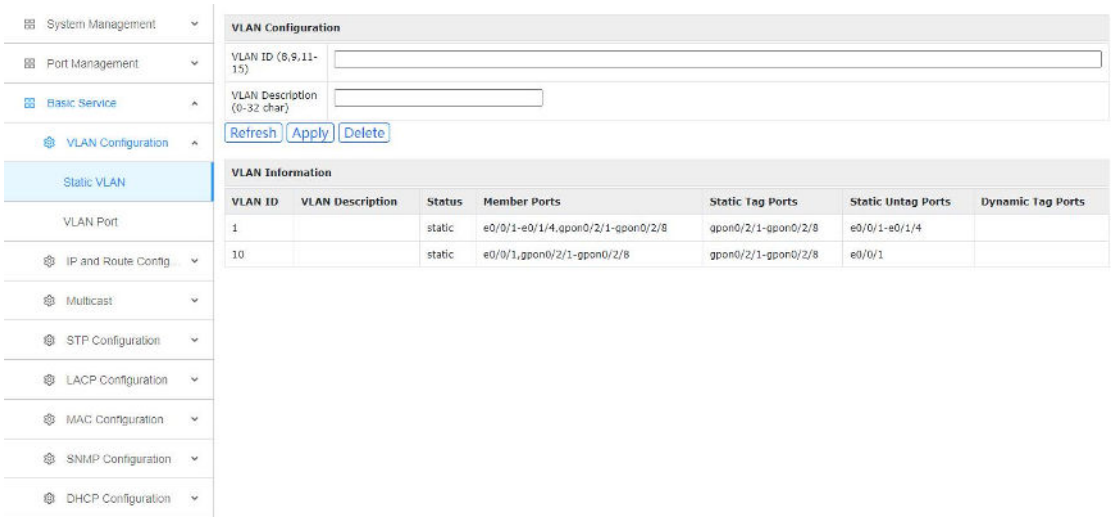


Figure 4-1

4.1.2 VLAN Port

1. Click Config->Basic Service->VLAN Configuration->VLAN Port
2. This page configures the default VLAN and mode of the port.

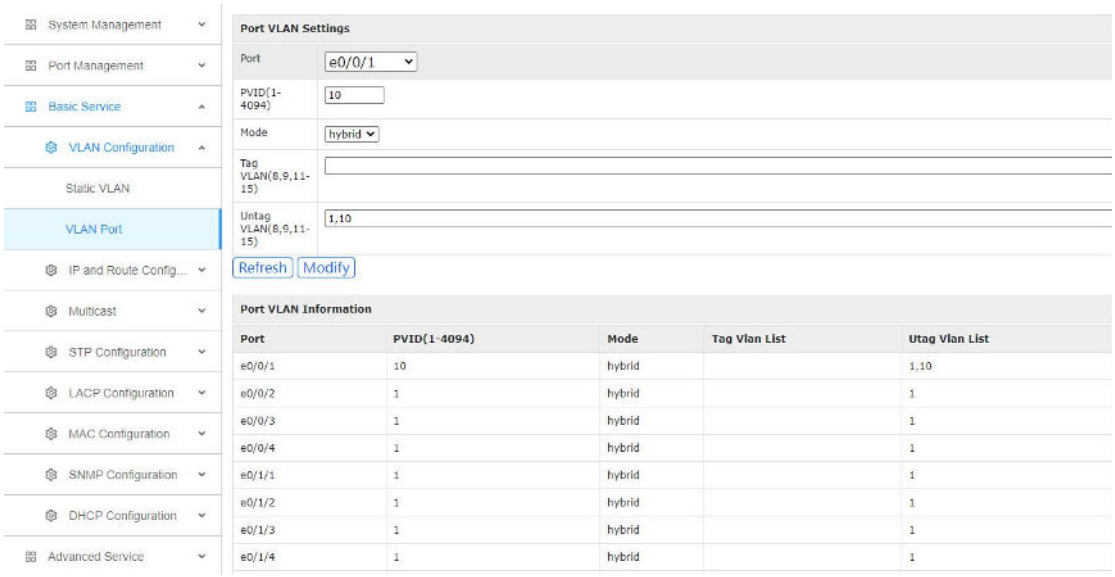


Figure 4-2

4.2 IP and Route Configuration

IP and route configuration include VLAN interface and static route.

4.2.1 MGMT IP Configuration

1. Click Config->Basic Service->IP and Route Configuration->MGMT IP Configuration
2. This page configures the management IP of the OLT. The default management IP is 192.168.168.1.



Figure 4-3

4.2.2 VLAN IP Configuration

1. Click Config->Basic Service->IP and Route Configuration->VLAN IP Configuration
2. This page can add, modify and delete VLAN interface.

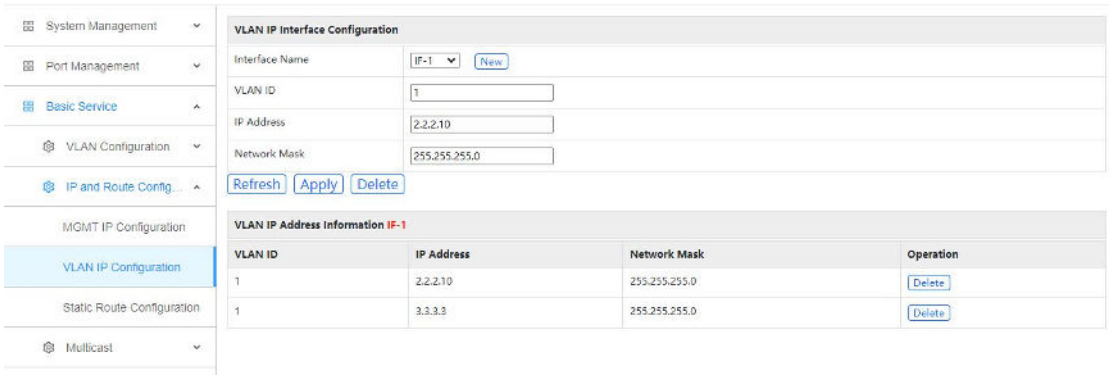


Figure 4-4

4. 2. 3 Static Route Configuration

1. Click Config->Basic Service->IP and Route Configuration->Static Route Configuration
2. This page displays, adds and deletes static routes.

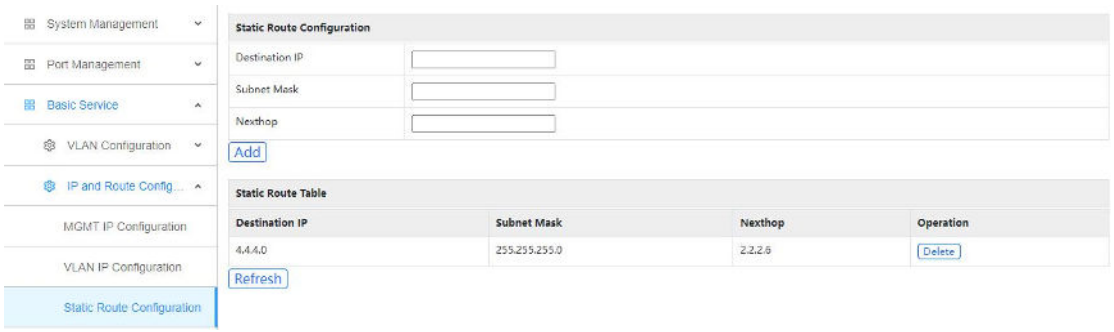


Figure 4-5

4. 2. 4 RIP Configuration

4. 2. 4. 1 RIP General

1. Click Config->Basic Service->IP and Route Configuration->RIP Configuration
2. This page is used to configure RIP.

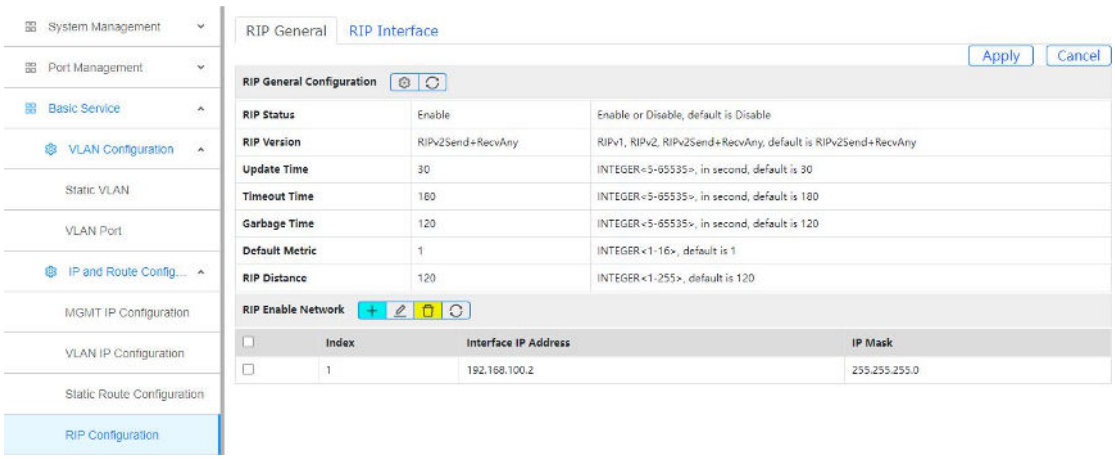


Figure 4-6

4.2.4.2 RIP Interface

1. Click Config->Basic Service->IP and Route Configuration->RIP Configuration
2. This page is used to configure RIP interface.

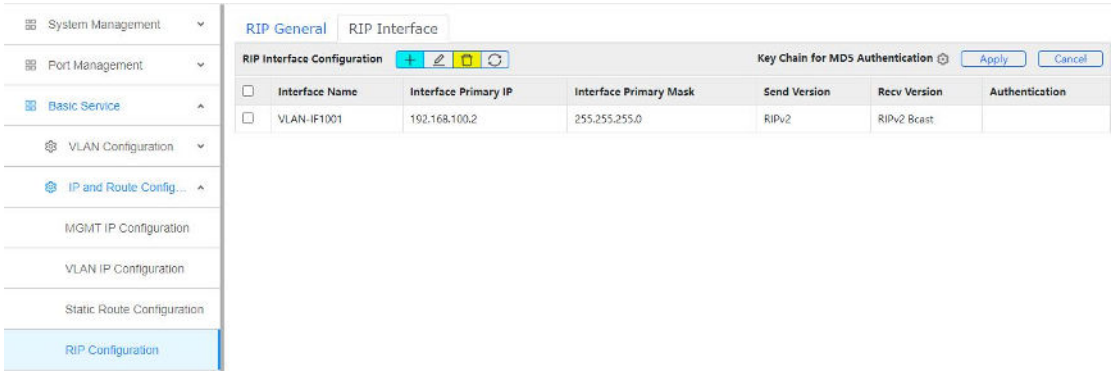


Figure 4-7

4.2.5 OSPF Configuration

1. Click Config->Basic Service->IP and Route Configuration->OSPF Configuration
2. This page used to configure OSPF.

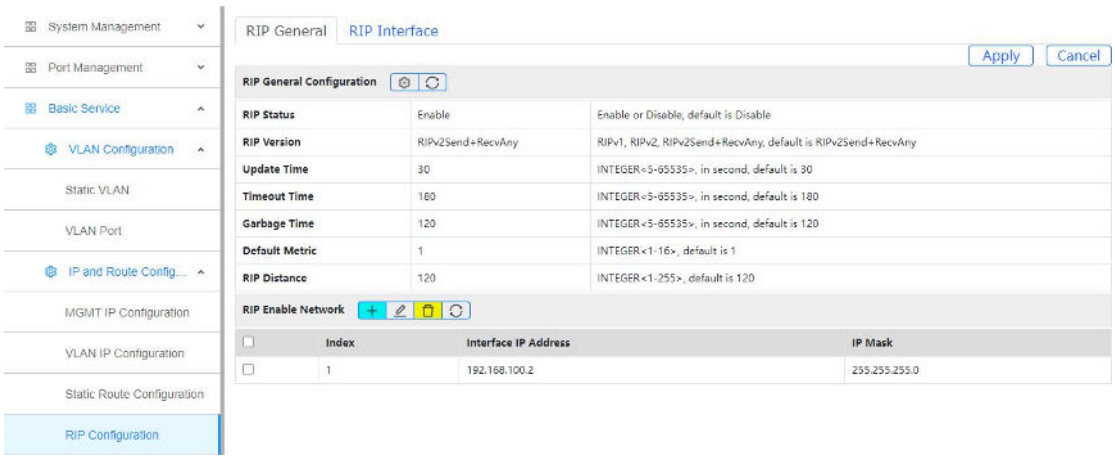


Figure 4-8

4. 3 Multicast

4. 3. 1 Multicast Configuration

1. Click Config->Basic Service->Multicast->Multicast Configuration
2. This page can add, modify and delete static multicast groups.

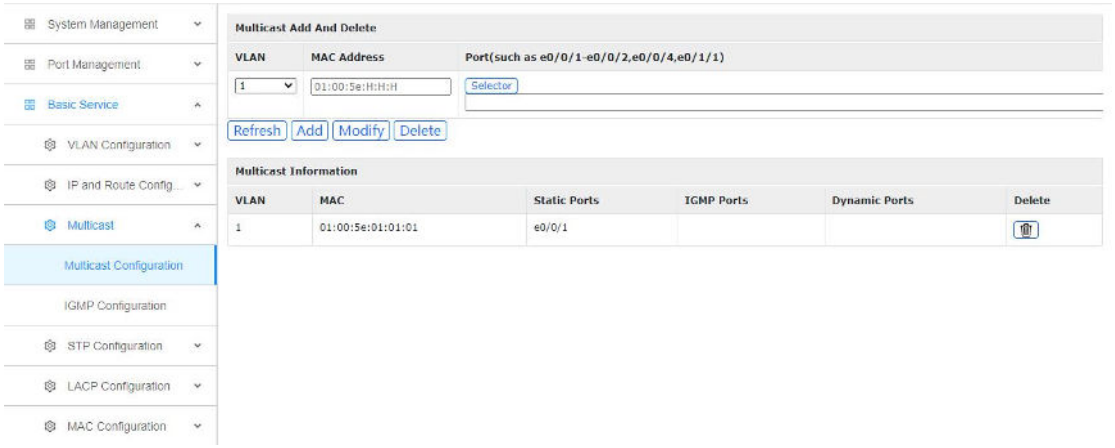


Figure 4-9

4. 3. 2 IGMP Configuration

1. Click Config->Basic Service->Multicast->IGMP Configuration
2. This page configures IGMP snooping.

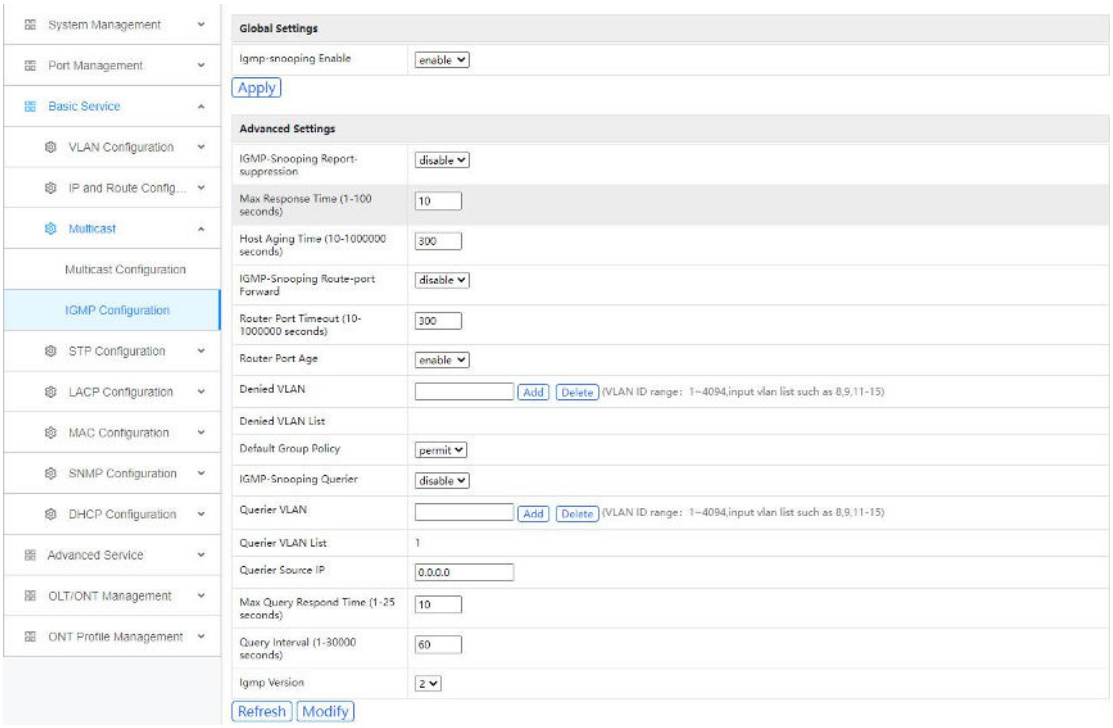


Figure 4-10

4.4 STP Configuration

STP (Spanning Tree Protocol) is a part of the IEEE 802.1D bridge protocol. The standard STP implementation can eliminate network broadcast storms caused by network cyclic connections, eliminate cyclic connections caused by mistakes or accidents, and also provide network services. Possibility of backup connection.

4.4.1 Global Configuration

1. Click Config->Basic Service->Stp Configuration->Global Configuration
2. This page is used to configure remote loop detection. The ONU that detects a loop is automatically added to the blacklist.

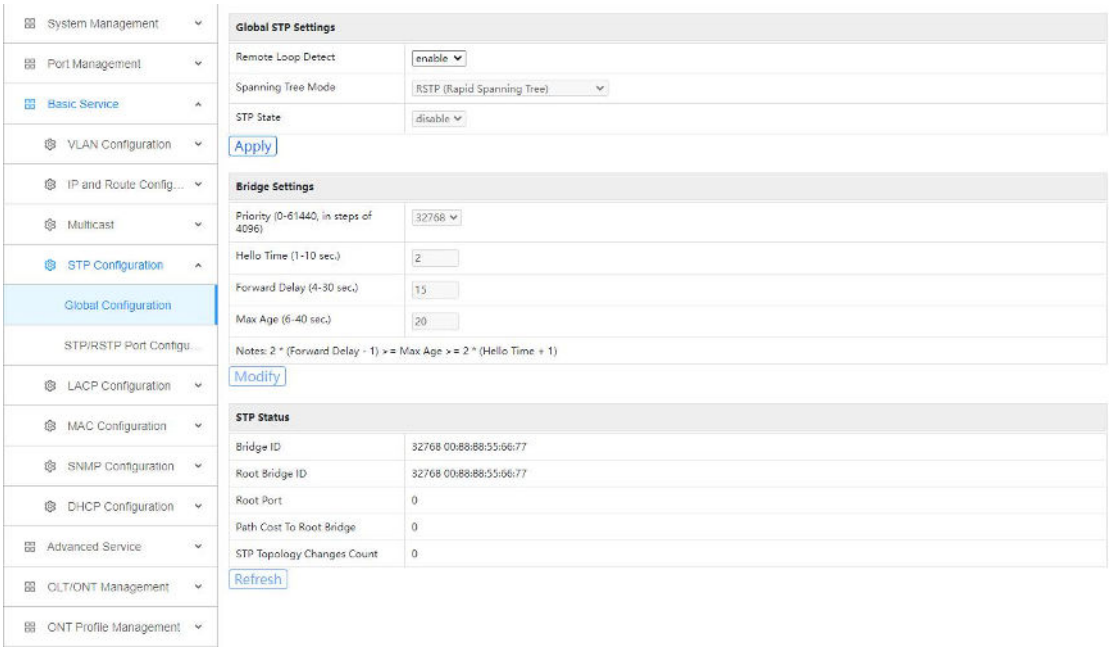


Figure 4-11

4.4.2 Port Configuration

1. Click Config->Basic Service->STP Configuration->Port Configuration
2. This page configures the STP status, path cost, and priority. The priority of the port must be an integer multiple of 16.

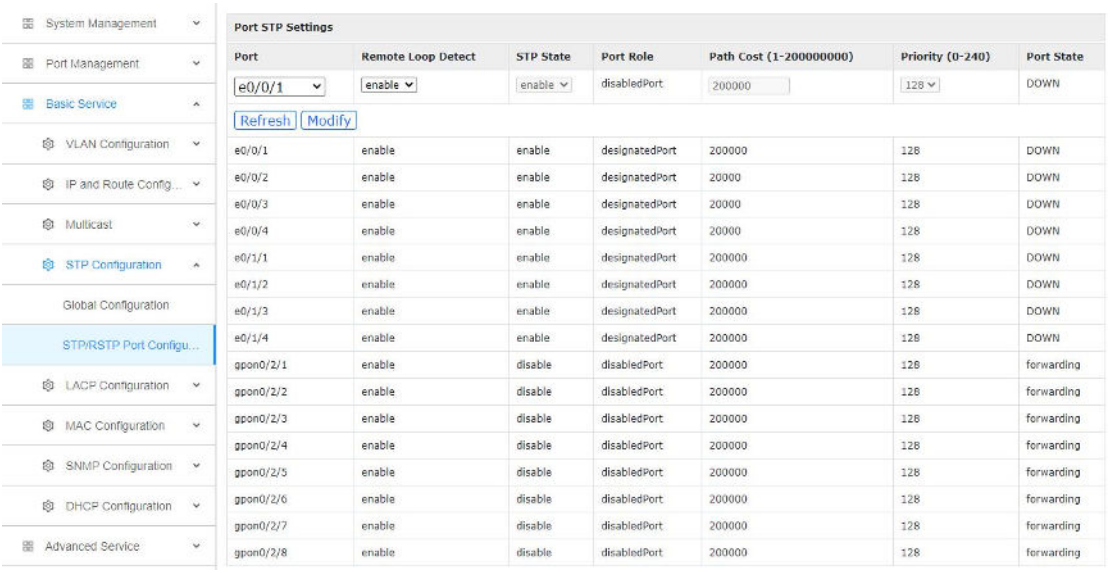


Figure 4-12

4.5 LACP Configuration

LACP is the aggregation of multiple ports together to form an aggregation group to achieve traffic load sharing among member ports. When a link is unavailable, the link traffic will

automatically switch to another link to ensure uninterrupted business traffic. An aggregation group is like a port.

4.5.1 Status Display

1. Click Config->Basic Service->LACP Configuration->Status Display
2. This page displays LACP configuration information.

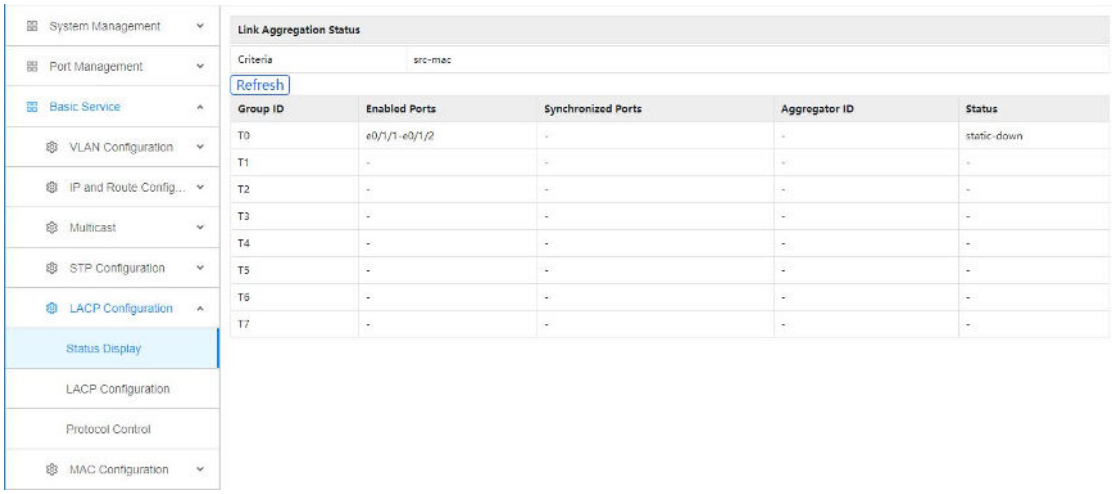


Figure 4-13

4.5.2 LACP Configuration

1. Click Config->Basic Service->LACP Configuration->LACP Configuration
2. This page configures LACP. Only ports with the same VLAN can be configured in the same group.

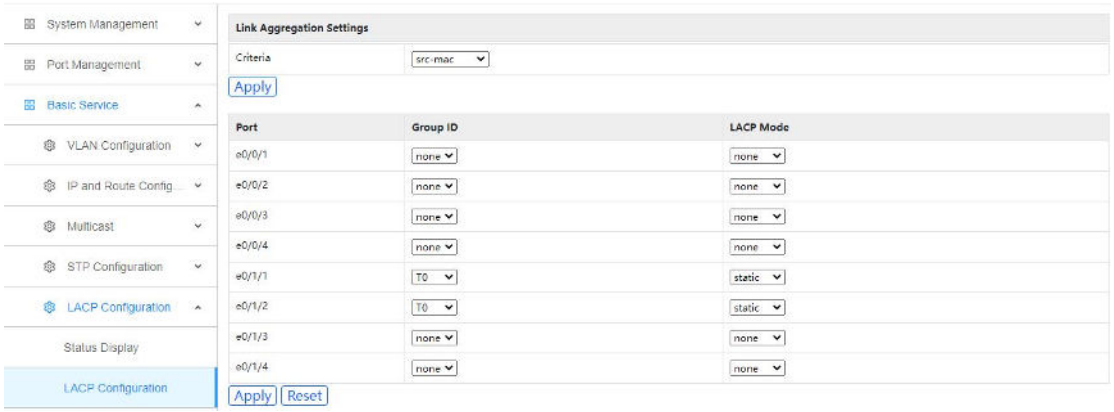


Figure 4-14

4.5.3 Protocol Control

1. Click Config->Basic Service->LACP Configuration->Protocol Control
2. This page activates the LACP group and configures the port priority.

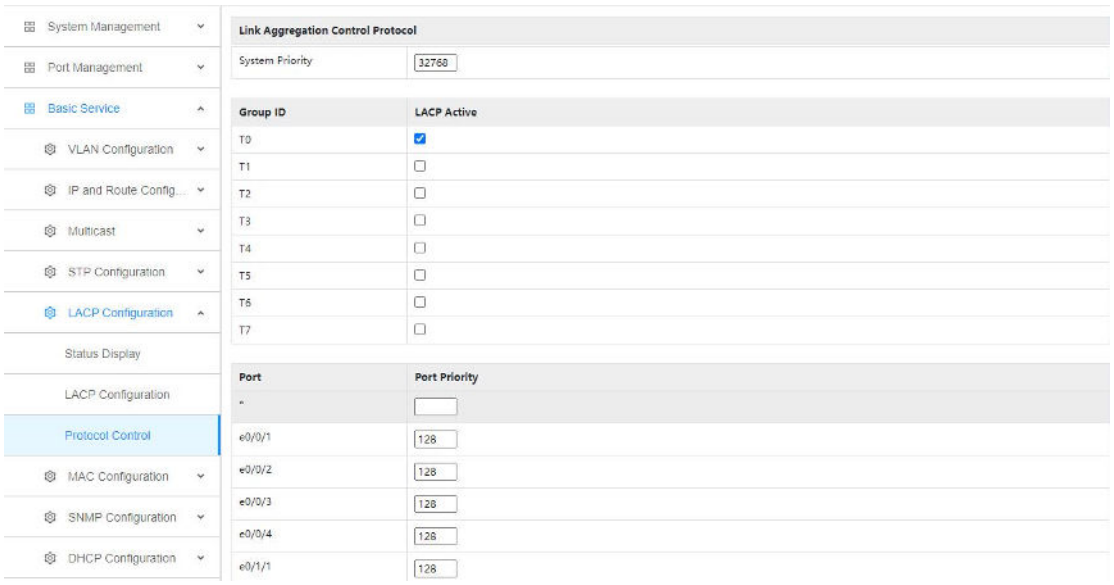


Figure 4-15

4.6 MAC Configuration

MAC configuration is used to add and delete port-MAC bind.

4.6.1 Port Binding Display

1. Click Config->Basic Service->MAC Configuration->Port Binding Dispaly
2. This page displays port-MAC binding status information.

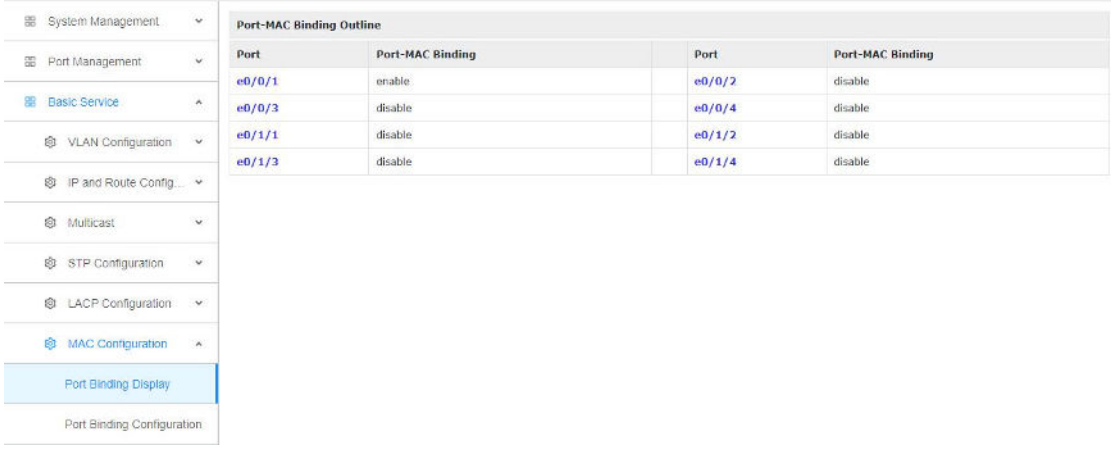


Figure 4-16

4.6.2 Port Binding Configuration

1. Click Config->Basic Service->MAC Configuration->Port Binding Configuration
2. This page can configure port-MAC binding

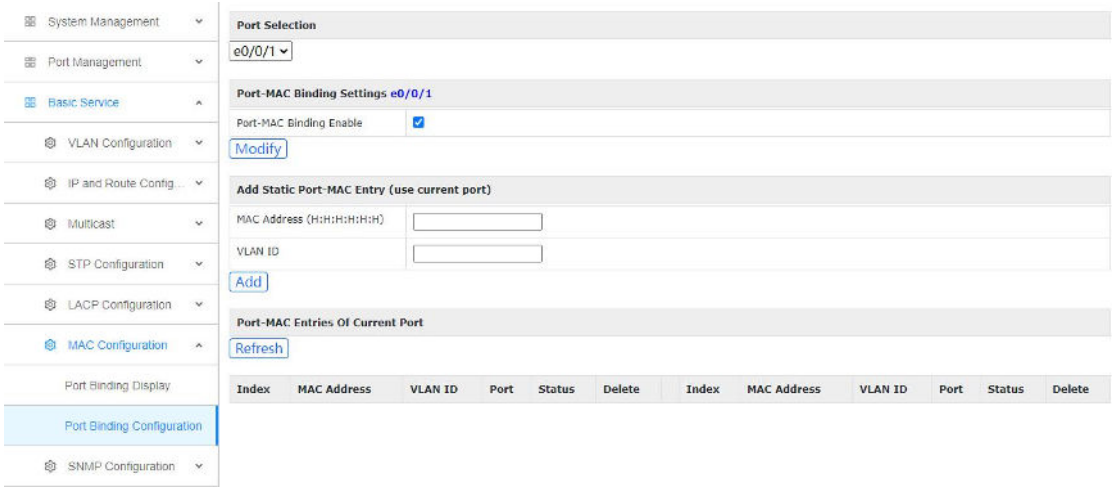


Figure 4-17

4.7 SNMP Configuration

SNMP (Simple Network Management Protocol) is a network management standard based on the TCP/IP protocol suite, and is a standard protocol for managing network nodes in an IP network.

4.7.1 Commutity Configuration

1. Click Config->Basic Service->MAC Configuration->Port Binding Configuration
2. This page configures the SNMP community name (the default is iso).

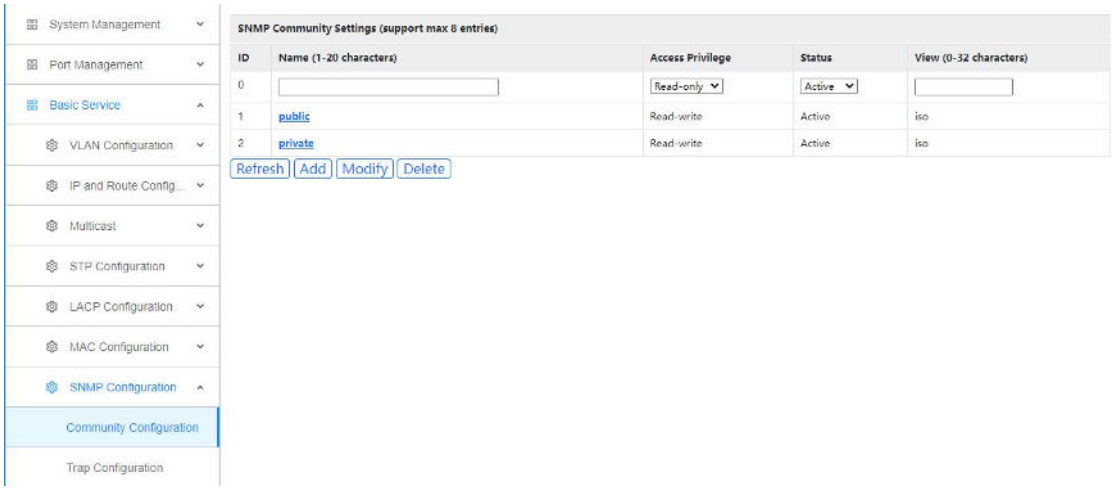


Figure 4-18

4.7.2 Trap Configuration

1. Click Config->Basic Service->SNMP Configuration->Trap Configuration
2. This page configures the Trap.

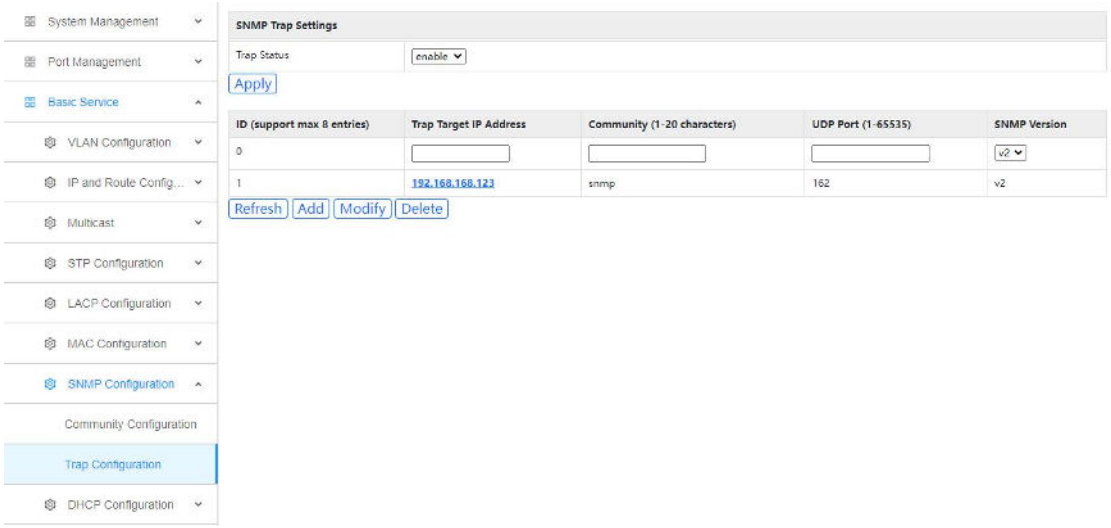


Figure 4-19

4.8 DHCP Configuration

4.8.1 DHCP Snooping

1. Click Config->Basic Service->DHCP Configuration->DHCP Snooping->DHCP snooping Setting
2. This page configures DHCP snooping, option82, trust port, etc. After enabling DHCP snooping, the trust port must be configured.

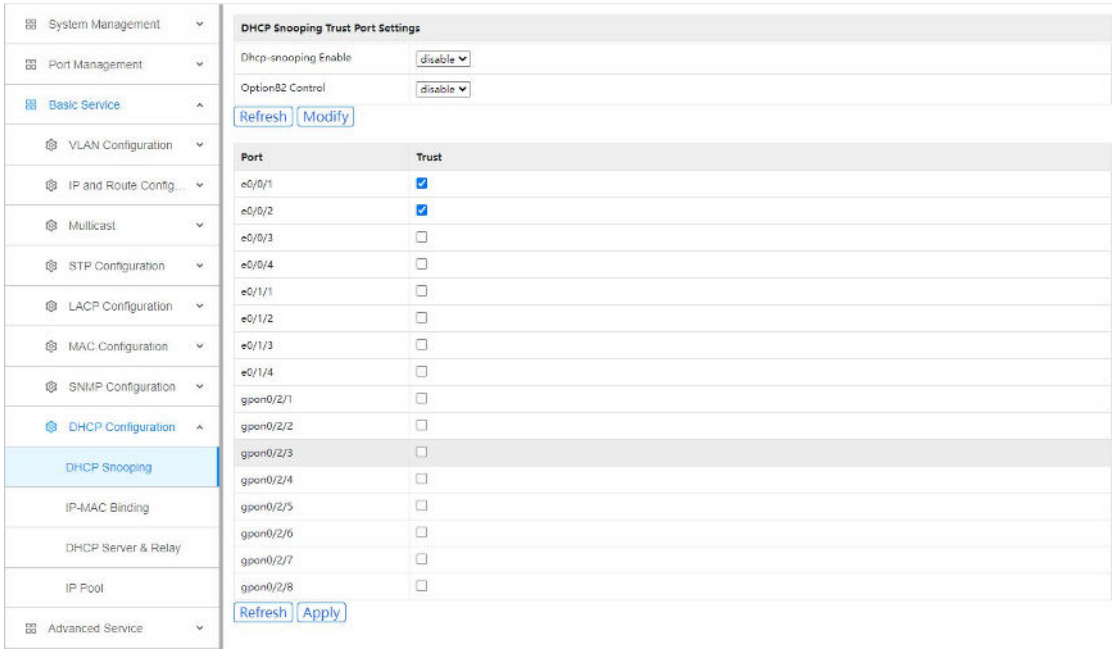


Figure 4-20

4.8.2 IP-MAC Binding

1. Click Config->Basic Service->DHCP Configuration->IP-Mac Binding
2. This page configures the IP and MAC binding function, this function needs to be used with DHCP snooping.

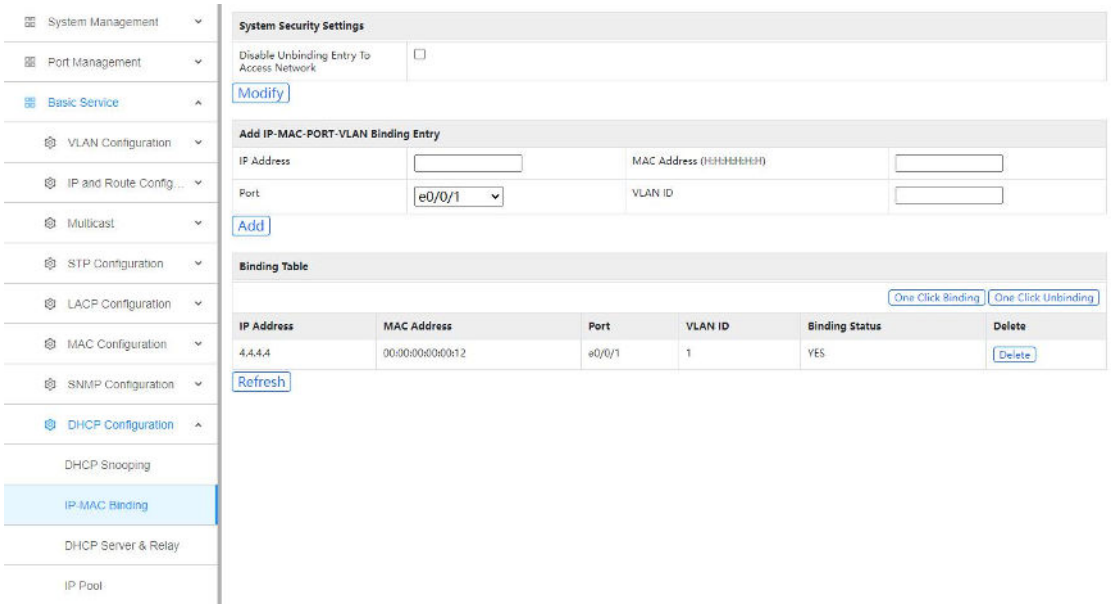


Figure 4-21

4.8.3 DHCP Server&Relay

1. Click Config->Basic Service->DHCP configuration->DHCP Server&Relay
2. This page configures DHCP server and relay.

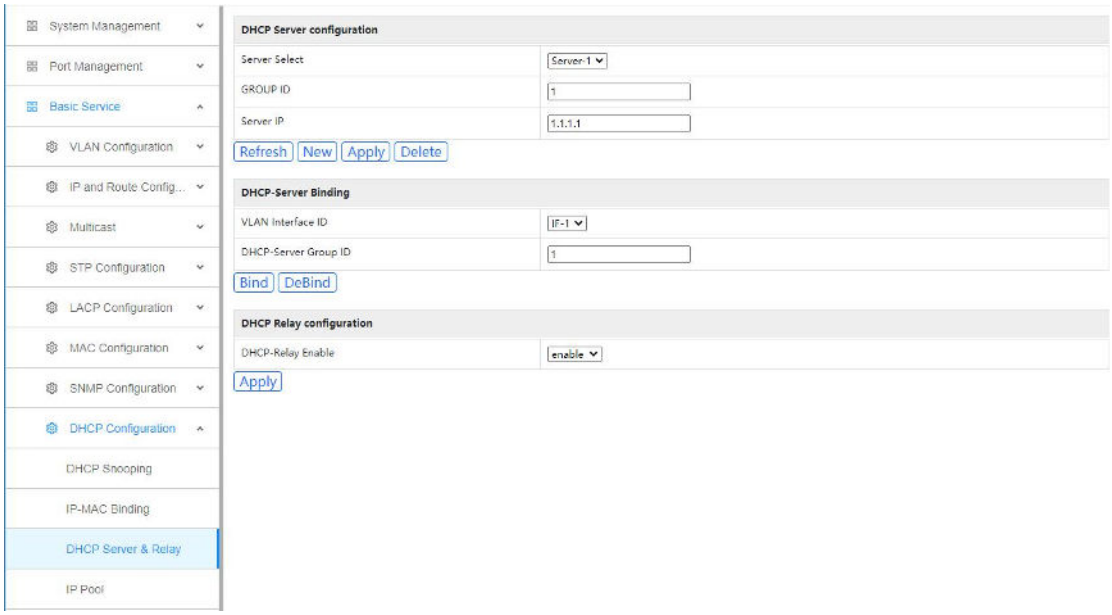


Figure 4-22

4.8.4 IP Pool

1. Click Config->Basic Service->DHCP configuration->IP Pool
2. This page configures IP pool.

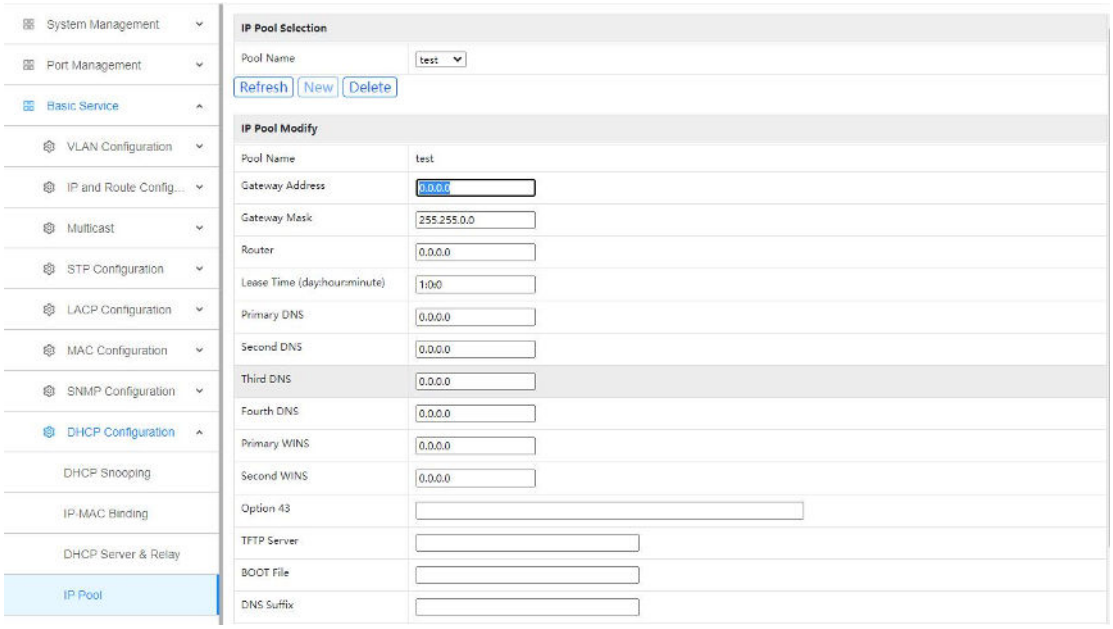


Figure 4-23

Chapter 5 Advance Service

Advanced services include configuration of system time and time server.

5.1 System Time

1. Click Config->Advance Service->System Time
2. This page configures the system time and time zone, you can synchronize the local computer time

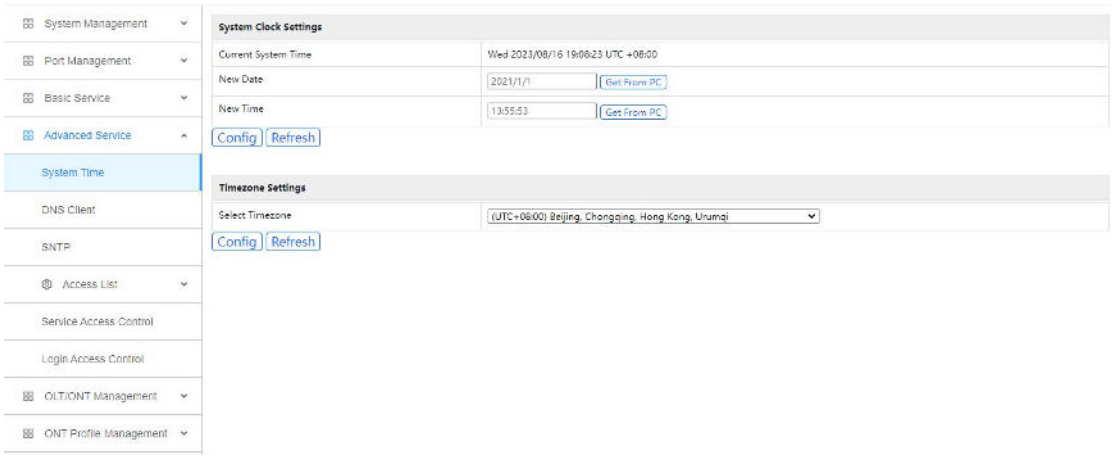


Figure 5-1

5.2 DNS Client

1. Click Config->Advance Service->DNS Client
2. This page configures the IP and domain name of the time server (need to be configured in unicast mode)。

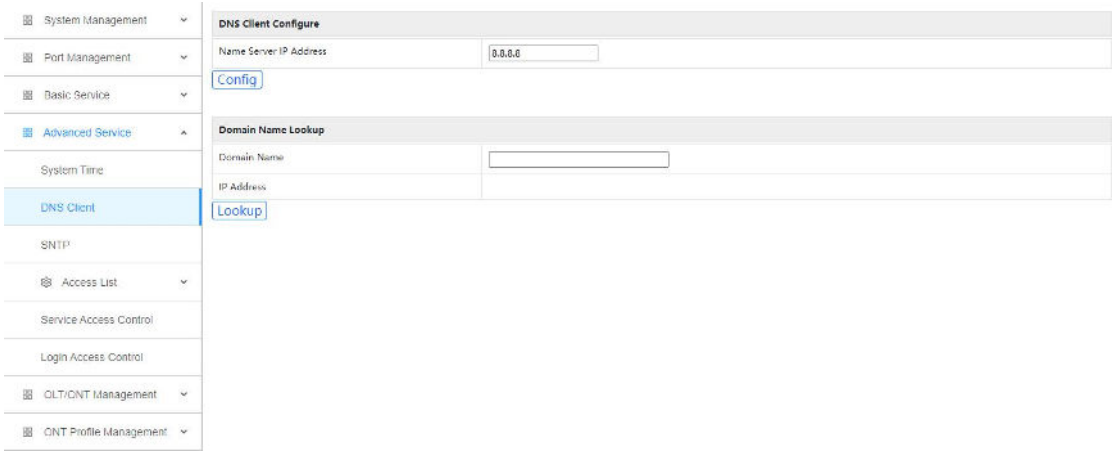


Figure 5-2

5.3 SNTP

1. Click Config->Advance Service->SNTP
2. This page configures the SNTP.

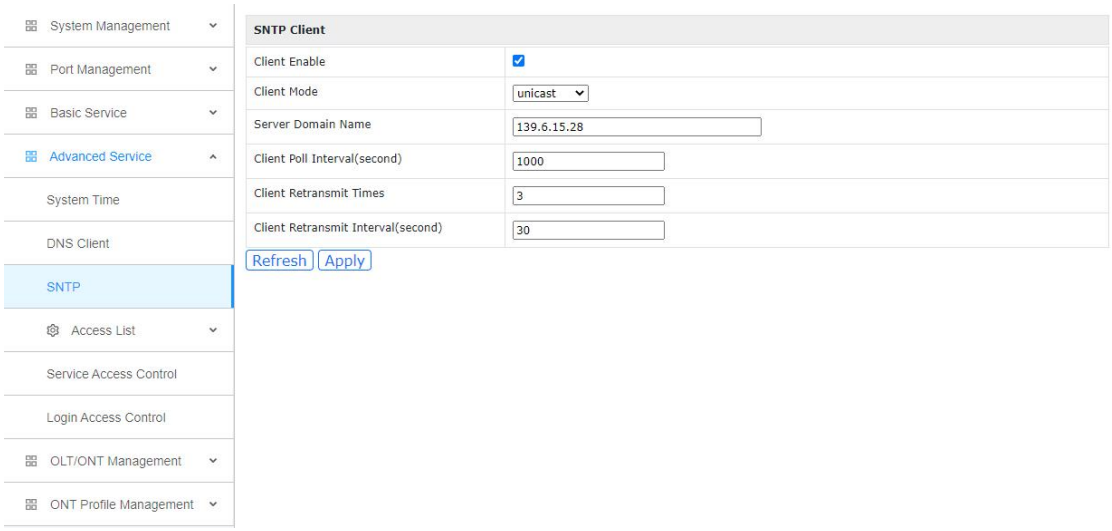


Figure 5-3

5.4 Access List

5.4.1 Classifier

1. Click Config->Advance Service->Access List->Classifier
2. This page configures the ACL Classifier.

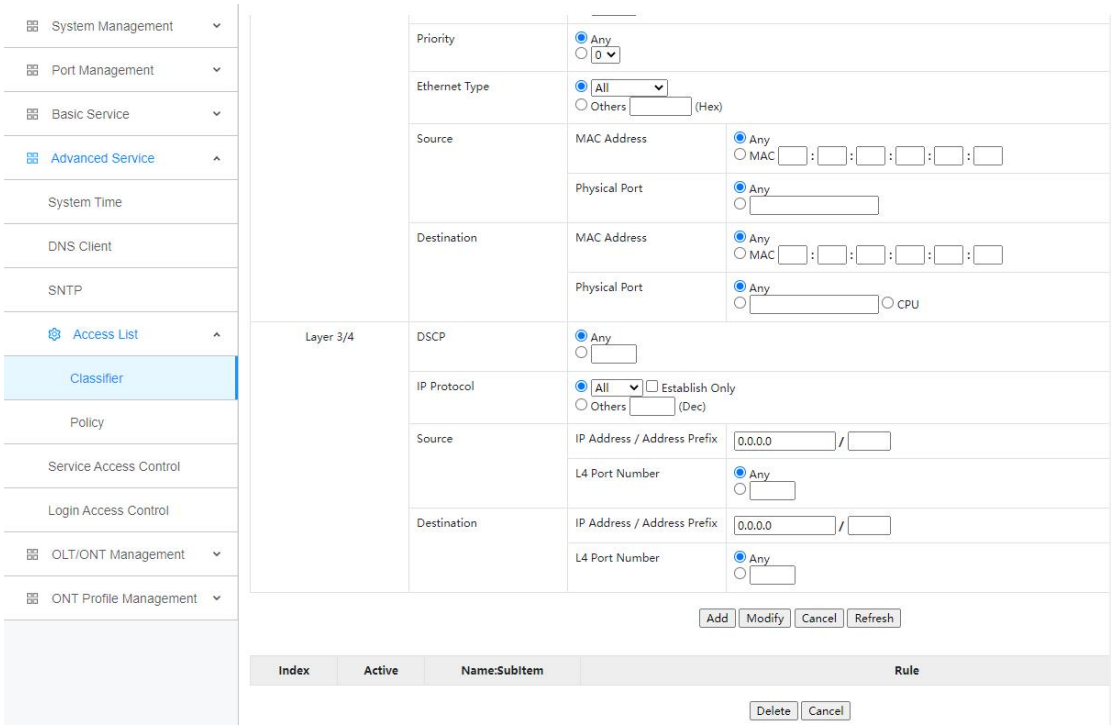


Figure 5-4

5.4.2 Policy

1. Click Config->Advance Service->Access List->Policy
2. This page configures the ACL Policy.

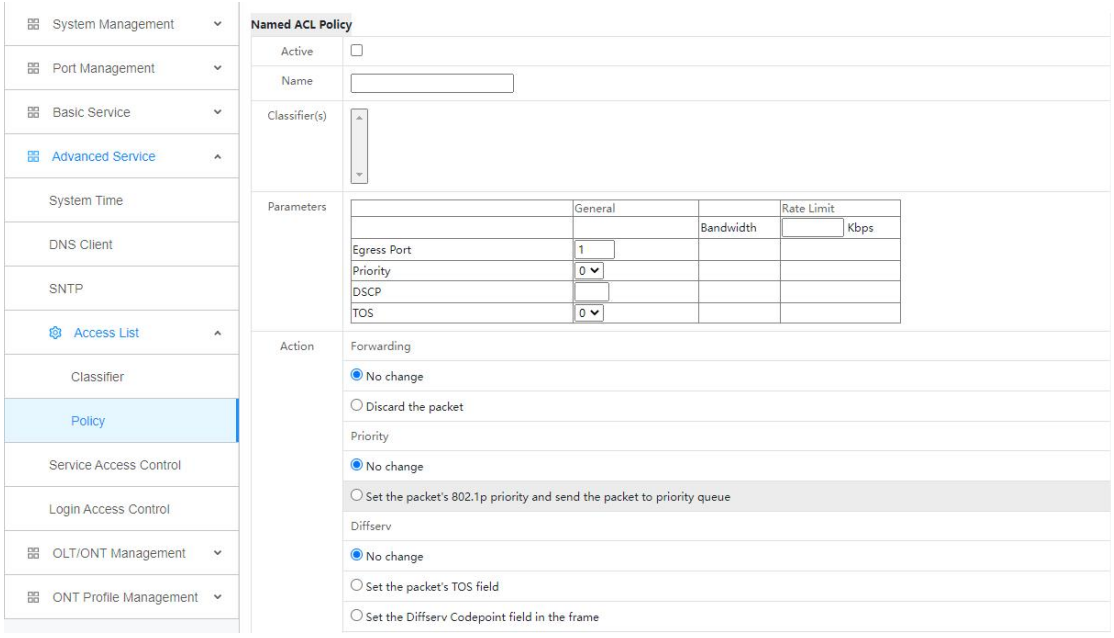


Figure 5-5

5.5 Service Access Control

1. Click Config->Advance Service->Service Access Control
2. This page configures the service access control.

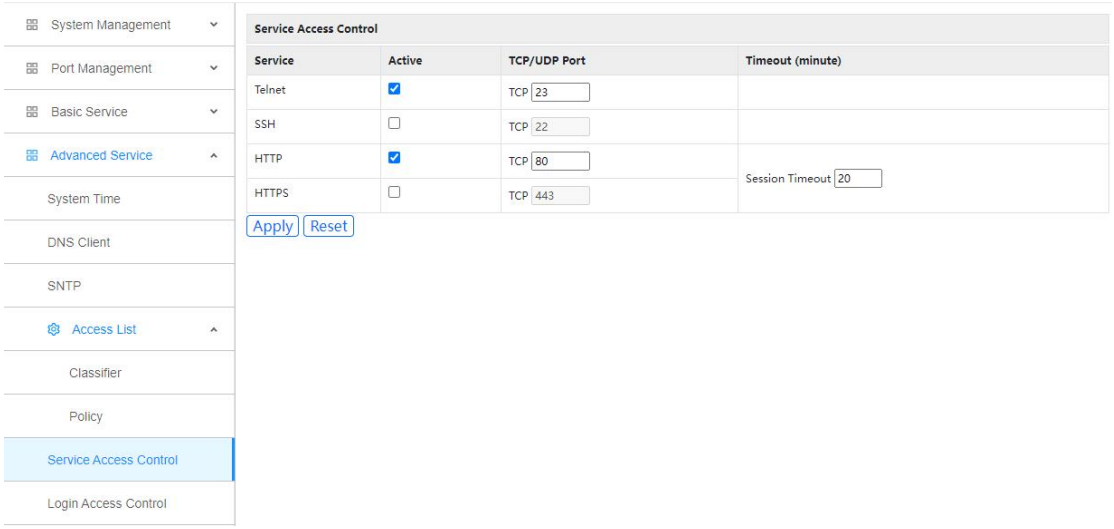


Figure 5-6

5.6 Login Access Control

1. Click Config->Advance Service->Login Access Control
2. This page configures the login access control.Only matching rules can access the device.

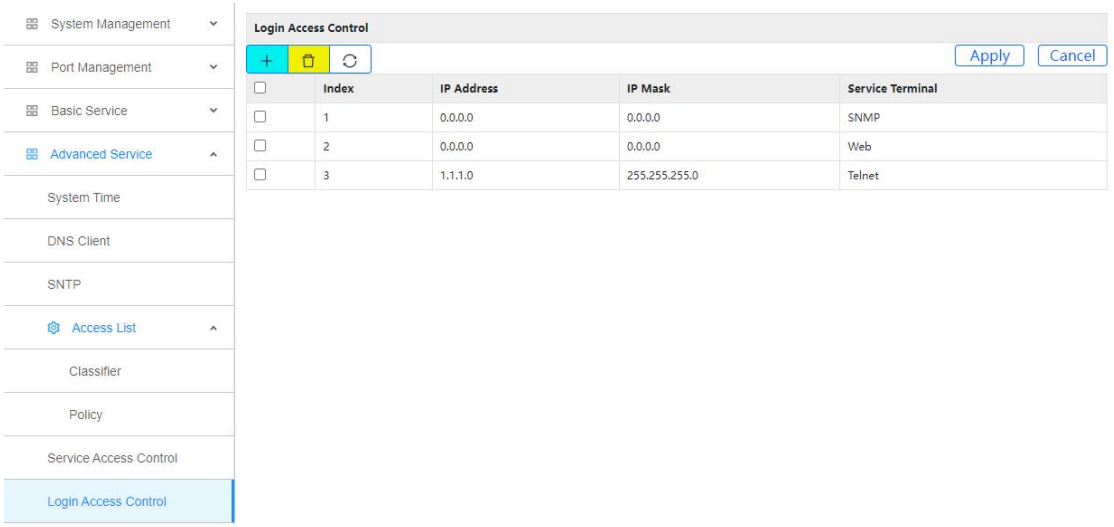


Figure 5-7

Chapter 6 ONT Management

6.1 Auto Find

1. Click Config->ONT Management->ONT Find
2. This page configures the ONT auto find function.

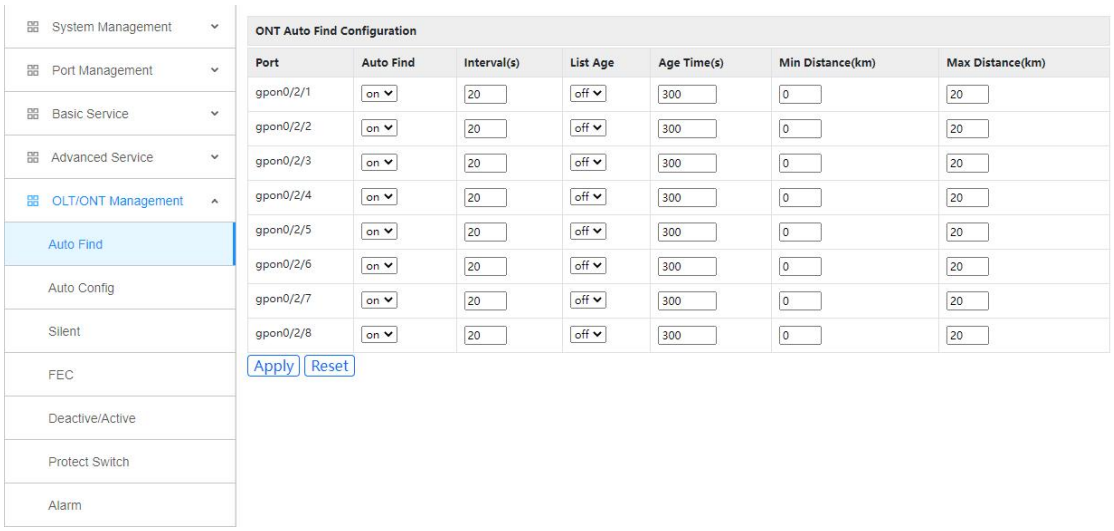


Figure 6-1

6.2 Auto Config

1. Click Config->ONT Management->Auto Config
2. This page configures the ONT auto create rule profile and registration.

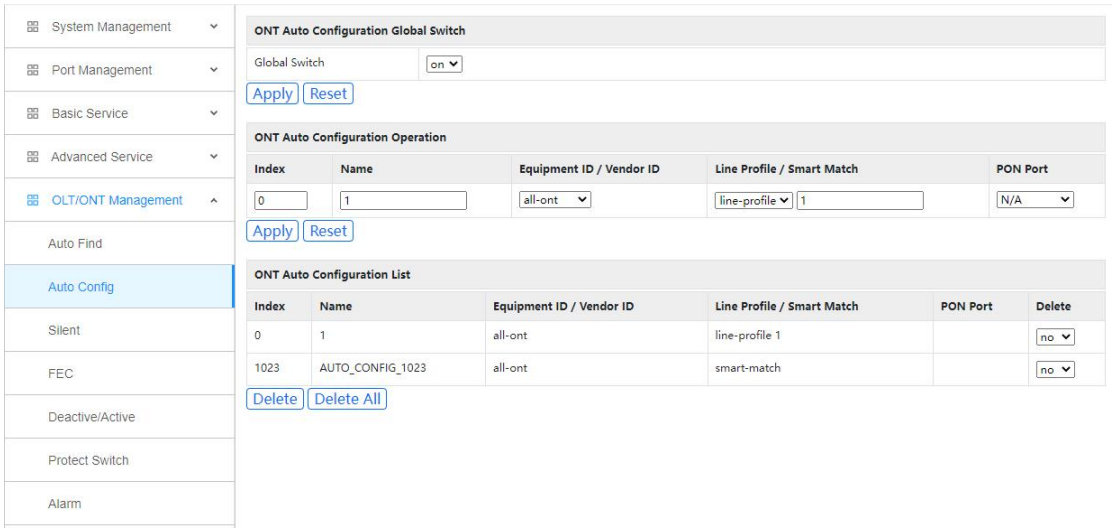


Figure 6-2

6.3 Silent

1. Click Config->ONT Management->Silent
2. This page configures the ONT silent function of failed authentication and offline.

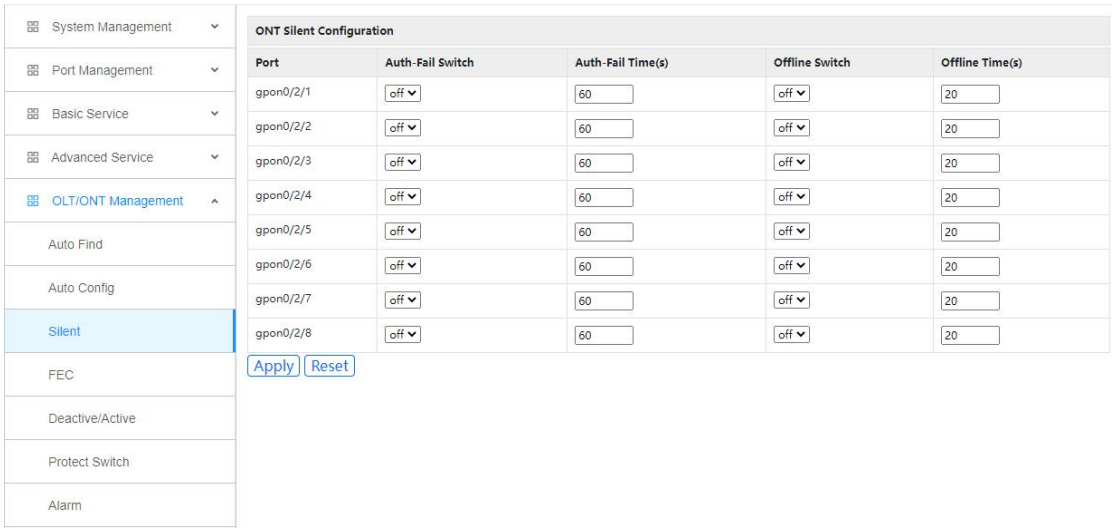


Figure 6-3

6.4 FEC

1. Click Config->ONT Management->FEC
2. This page configures the GPON port downstream FEC switch.

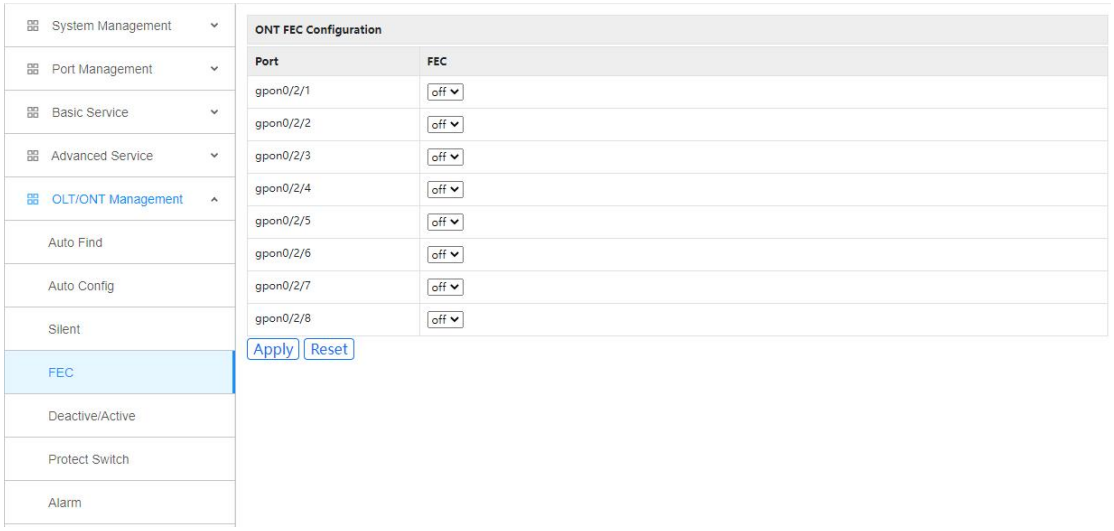


Figure 6-4

6.5 Deactive/Active

1. Click Config->ONT Management->Deactive
2. This page configures batch deactive the ONTs.

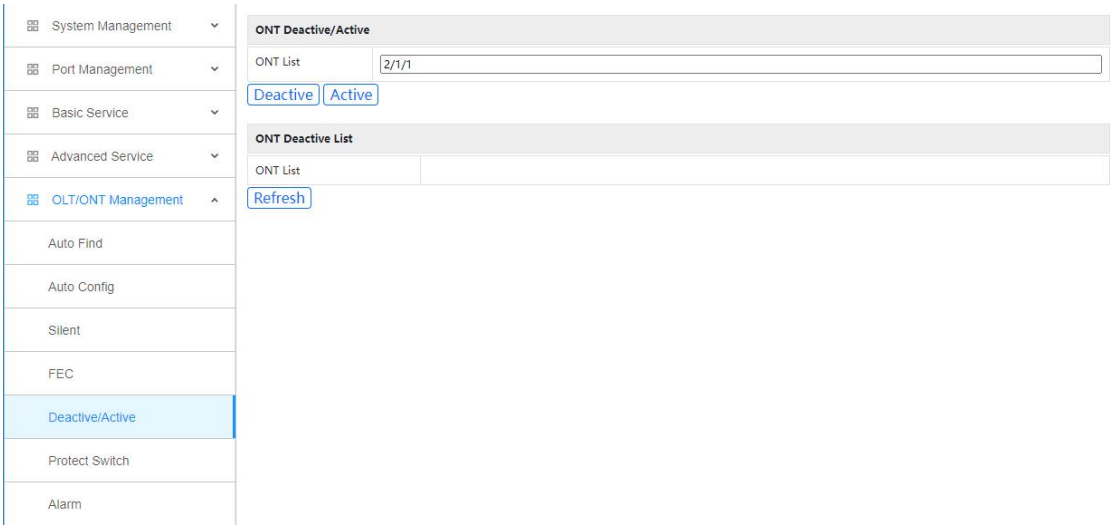


Figure 6-5

6.6 Protect Switch

1. Click Config->ONT Management->Protect Switch
2. This page configures pon protect function, and only support type B.

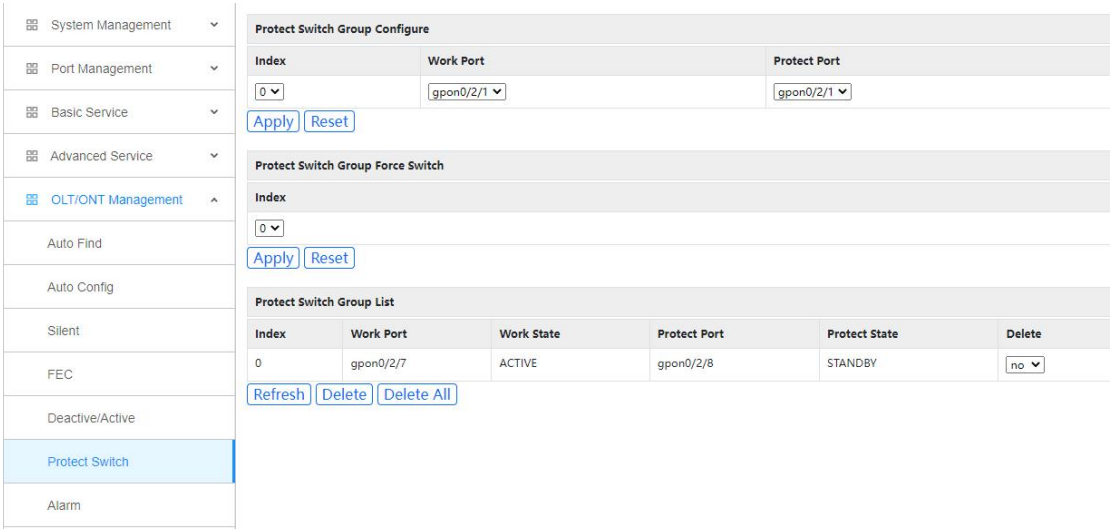


Figure 6-6

6.7 Alarm

6.7.1 RSSI alarm

1. Click Config->Advance Service->Alarm->RSSI
2. This page configures the RSSI alarm.

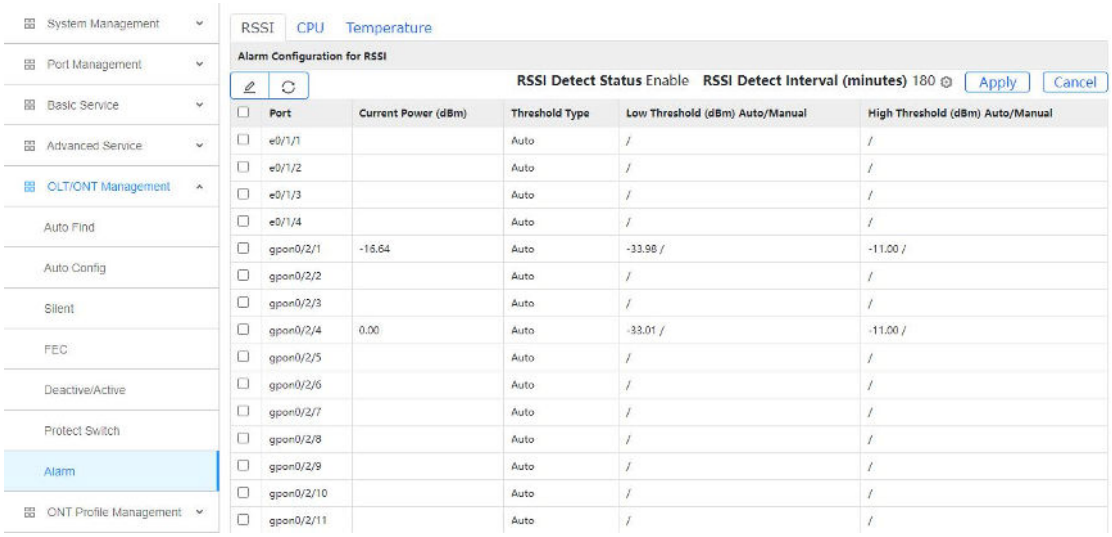


Figure 6-7

6.7.2 CPU alarm

1. Click Config->Advance Service->Alarm->CPU
2. This page configures the CPU alarm.

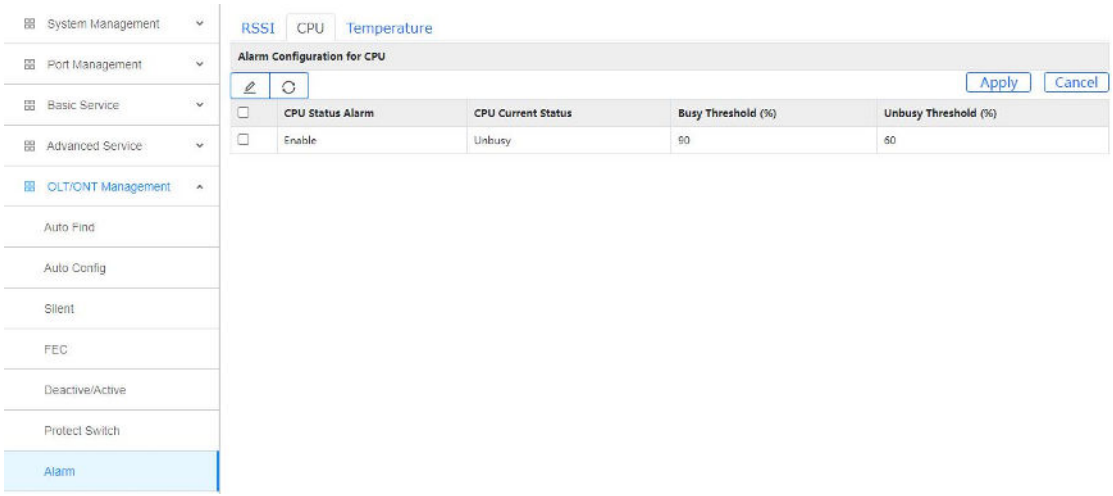


Figure 6-8

6.7.3 Temperature alarm

1. Click Config->Advance Service->Alarm->RSSI
2. This page configures the RSSI alarm.

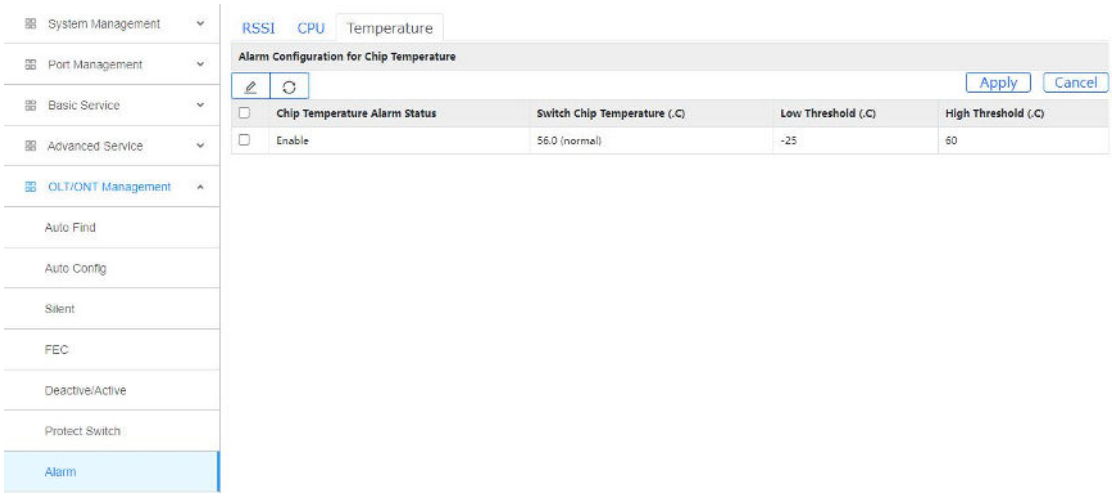

System Management
Port Management
Basic Service
Advanced Service
OLT/ONT Management
Auto Find
Auto Config
Silent
FEC
Deactive/Active
Protect Switch
Alarm
RSSI
CPU
Temperature
Alarm Configuration for Chip Temperature
Apply
Cancel
Chip Temperature Alarm Status
Switch Chip Temperature (.C)
Low Threshold (.C)
High Threshold (.C)
Enable
56.0 (normal)
-25
60

Figure 6-9

Chapter 7 ONT Profile Management

7.1 DBA Profile

1. Click Config->ONT Profile Management->DBA Profile
2. This page configures the DBA profile.

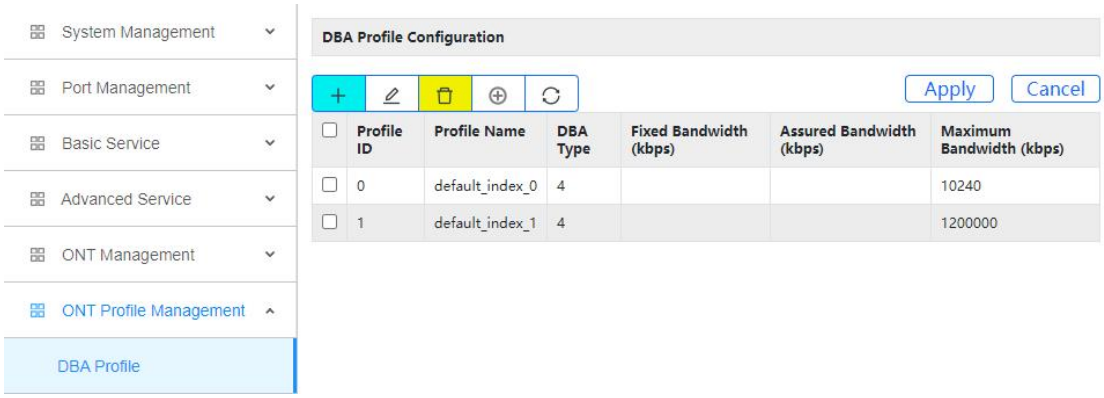


Figure 7-1

7.2 Upstream Profile

1. Click Config->ONT Profile Management->Upstream Profile
2. This page configures the upstream profile.

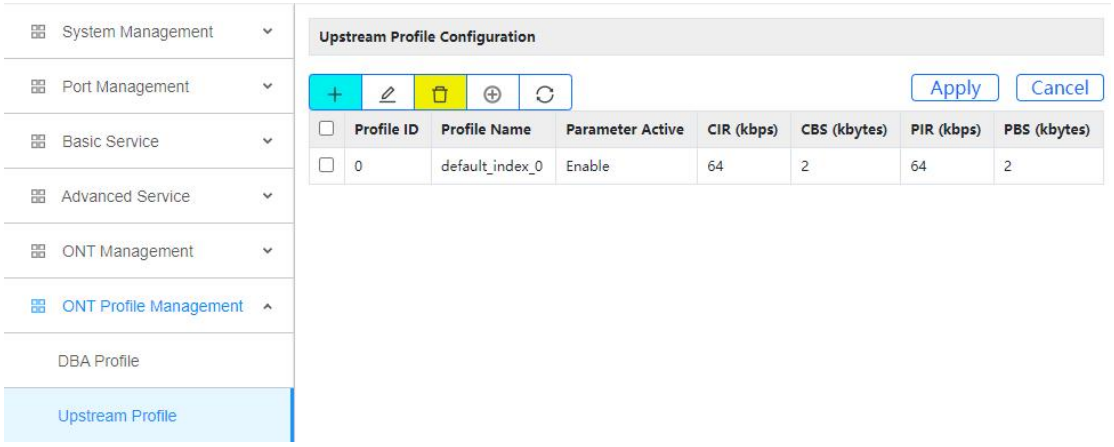


Figure 7-2

7.3 Downstream Profile

1. Click Config->ONT Profile Management->Downstream Profile
2. This page configures the downstream profile.

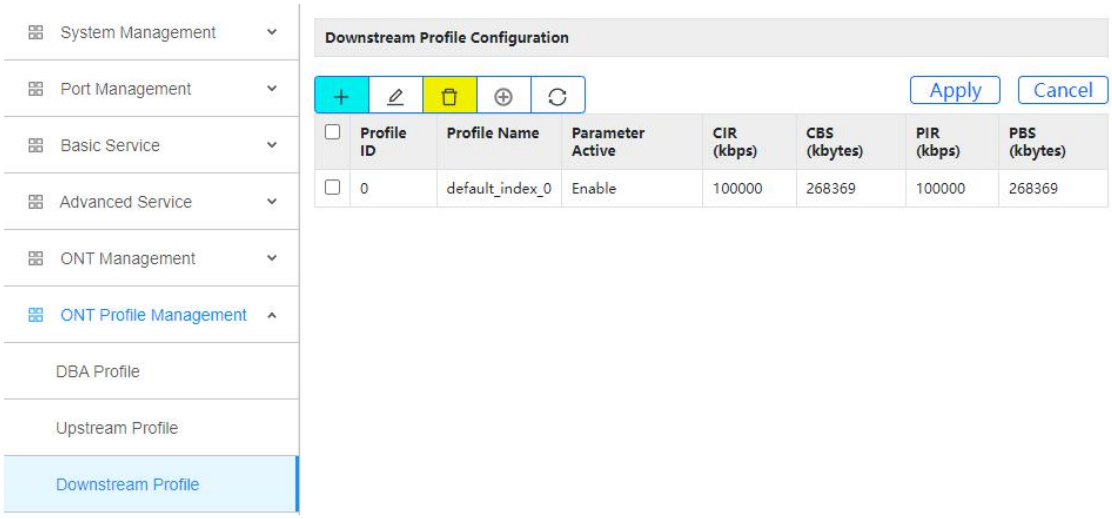


Figure 7-3

7.4 VLAN Profile

7.4.1 Create VLAN Profile

1. Click Config->ONT Profile Management->VLAN Profile
2. This page configures add, modify and delete VLAN profile.

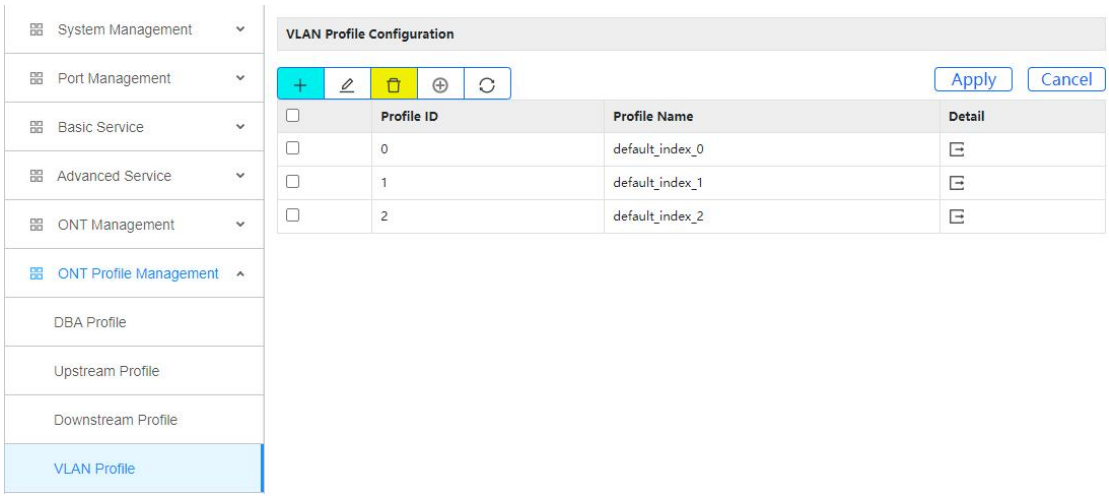


Figure 7-4

7.4.2 Configure VLAN Profile

1. Click Config->ONT Profile Management->VLAN Profile->Detail
2. This page configures the VLAN profile.

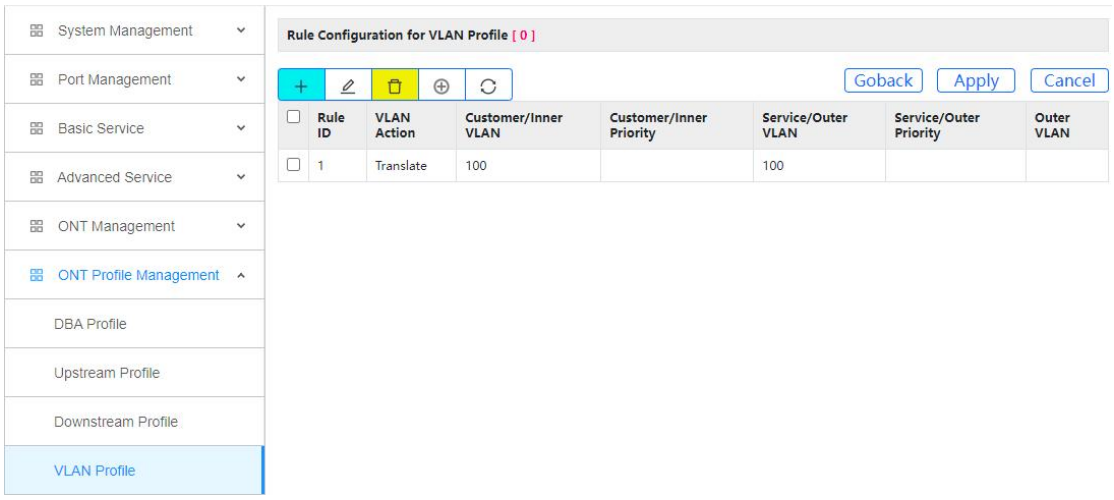


Figure 7-5

7.5 Line Profile

7.5.1 Create Line Profile

1. Click Config->ONT Profile Management->Line Profile
2. This page configures add, modify and delete line profile.

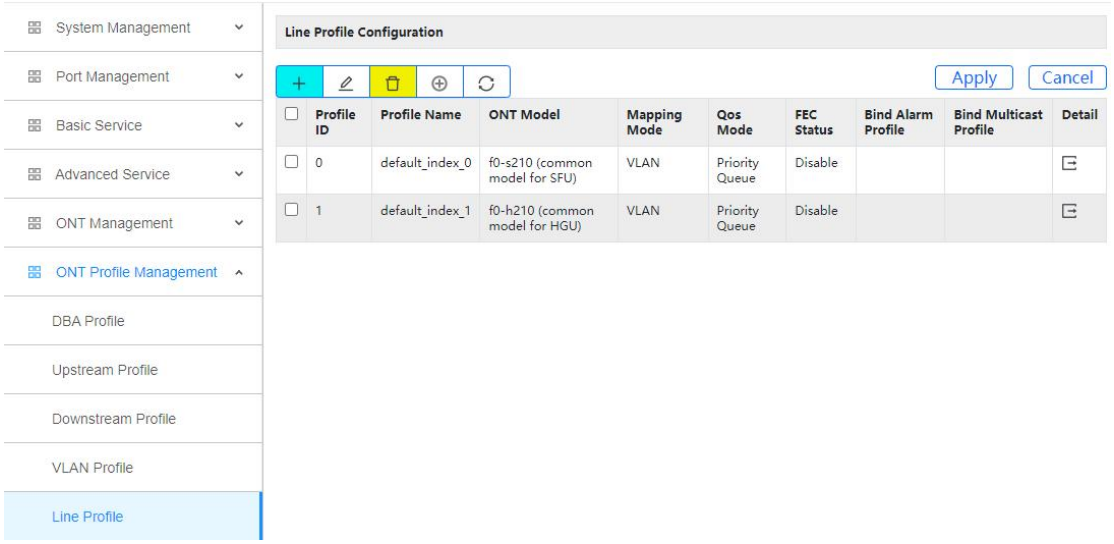


Figure 7-6

7.5.2 Configure T-CONT

1. Click Config->ONT Profile Management->Line Profile->Detail->T-CONT Configuration
2. This page configures the T-CONT and bind DBA profile.

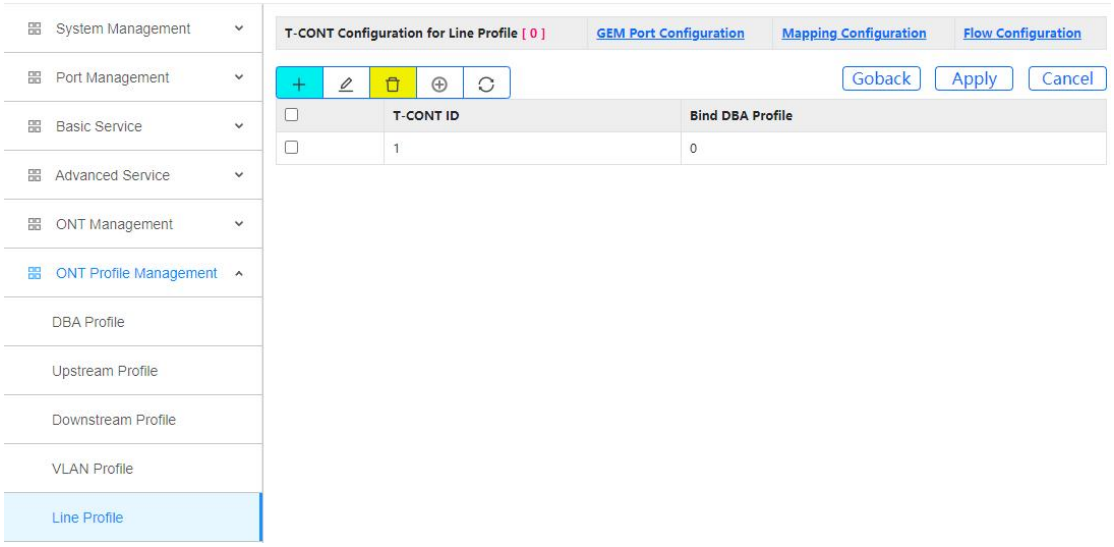


Figure 7-7

7.5.3 Configure GEMPORT

1. Click Config->ONT Profile Management->Line Profile->Detail->GEM Port Configuration
2. This page configures the GEM port and bind T-CONT.

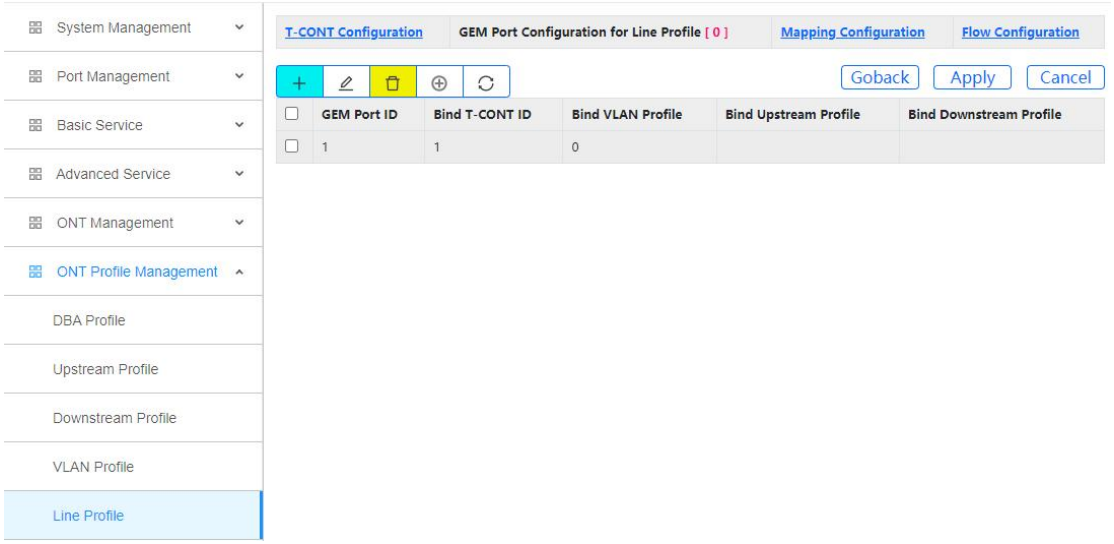


Figure 7-8

7.5.4 Mapping Configuration

1. Click Config->ONT Profile Management->Line Profile->Detail->Mapping Configuration
2. This page configures the GEM port mapping.

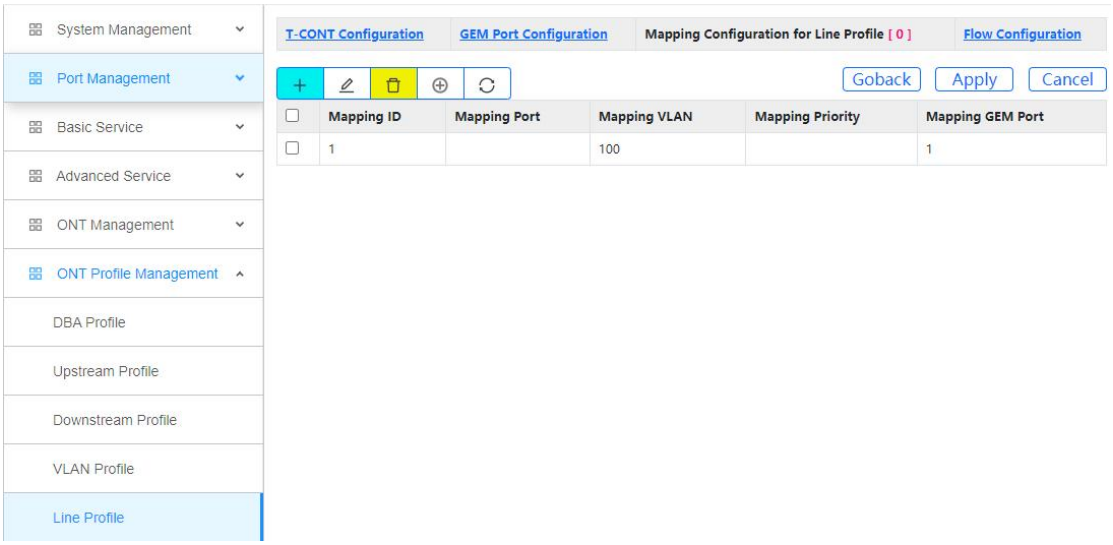


Figure 7-9

7.5.5 Configure Flow

1. Click Config->ONT Profile Management->Line Profile->Detail->Flow Configuration
2. This page configures the ONT ethernet flow.

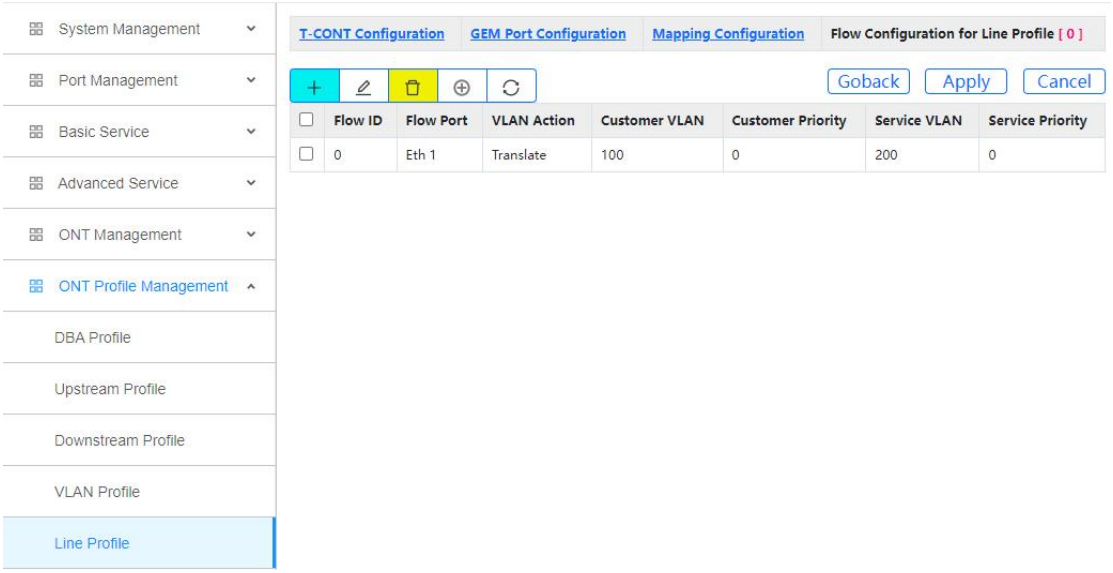


Figure 7-10

7.6 Rule Profile

1. Click Config->ONT Profile Management->Rule Profile
2. This page configures add, modify, and delete rule profile.

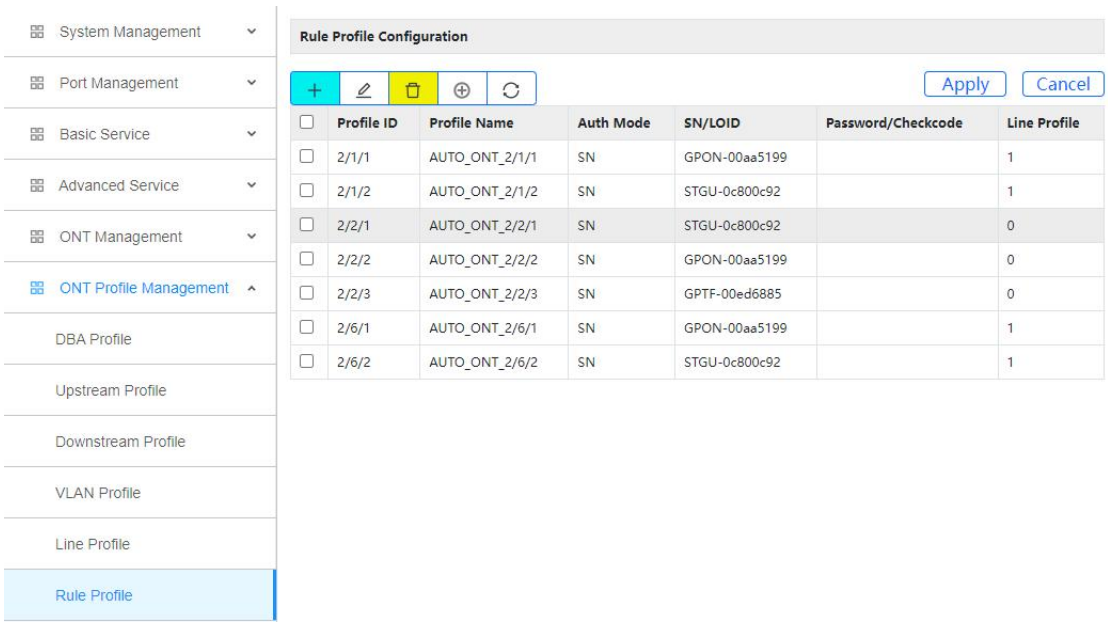


Figure 7-11

7.7 Specific Profile

1. Click Config->ONT Profile Management->Specific Profile
2. This page is used to create a specific profile, which can be directly bound to an alarm profile and a multicast profile (when a specific profile conflicts with the configuration in the service profile, the specific profile takes precedence).

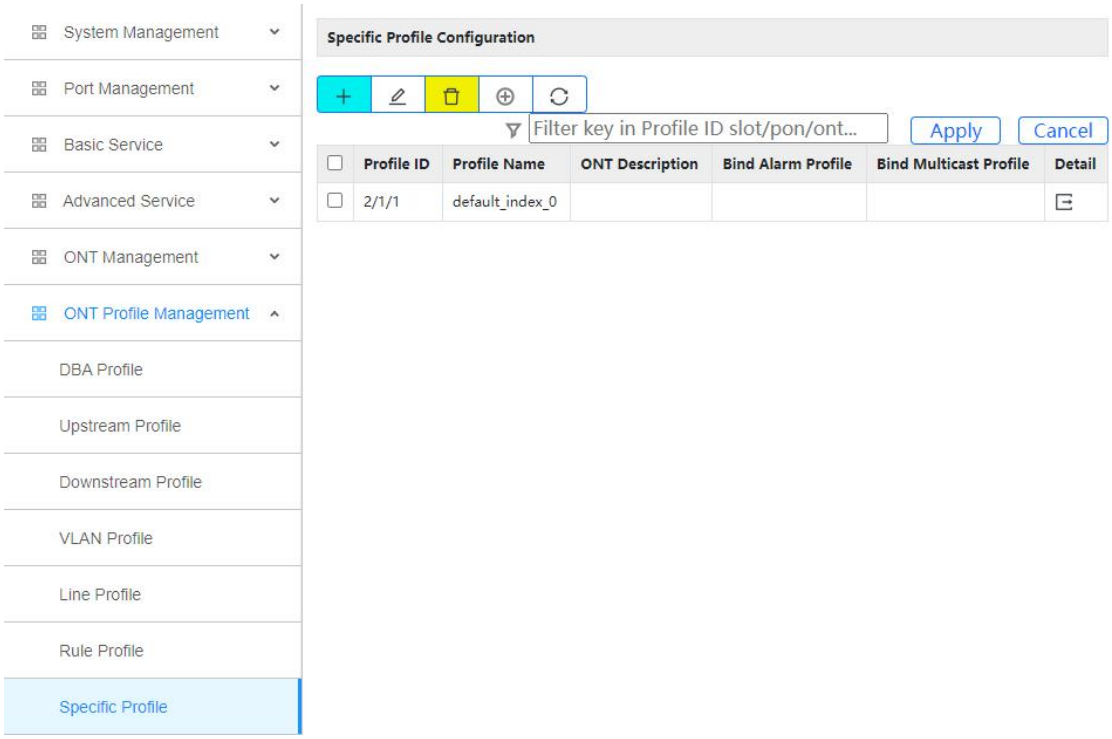


Figure 7-12

7.7.1 T-CONT

1. Click Config->ONT Profile Management->Specific Profile->Detail->T-CONT
2. This page is used to configure t-cont binding DBA profile.

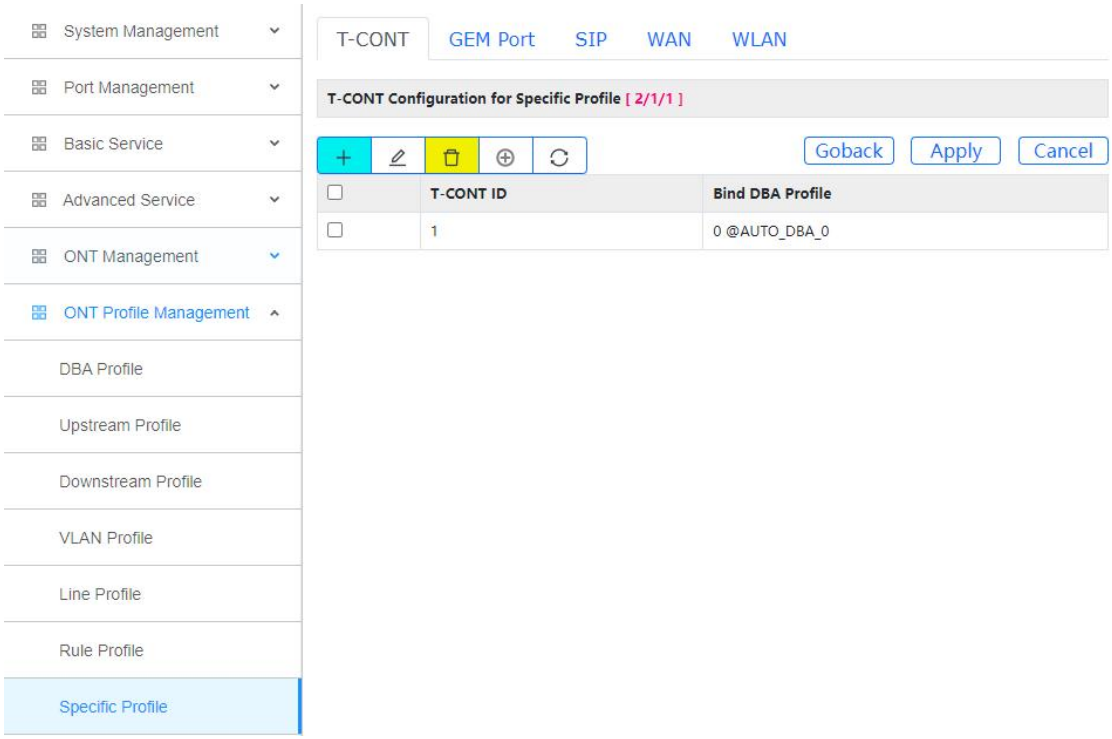


Figure 7-13

7.7.2 GEM Port

1. Click Config->ONT Profile Management->Specific Profile->Detail->GEM Port
2. This page is used to configure gemport binding VLAN profiles and upstream and downstream profiles.

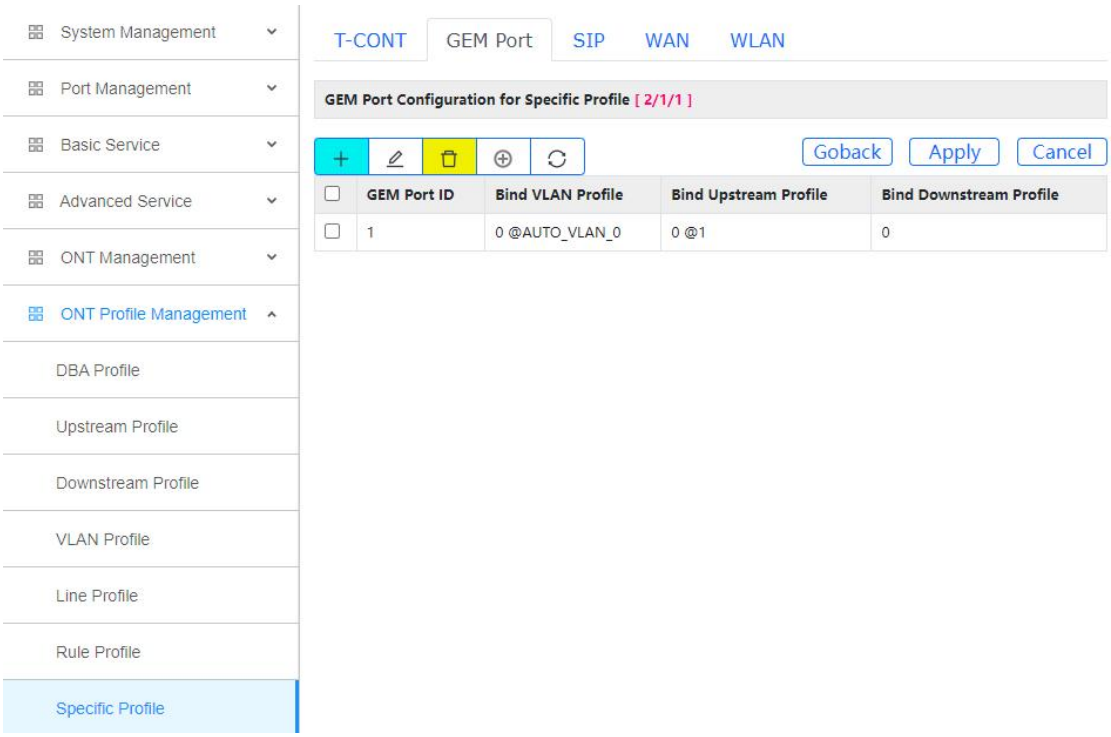


Figure 7-14

7.7.3 SIP

7.7.3.1 SIP Agent

1. Click Config->ONT Profile Management->Specific Profile->Detail->SIP->SIP Agent
2. This page is used to configure the address of the SIP proxy server, the default port number is 5060.

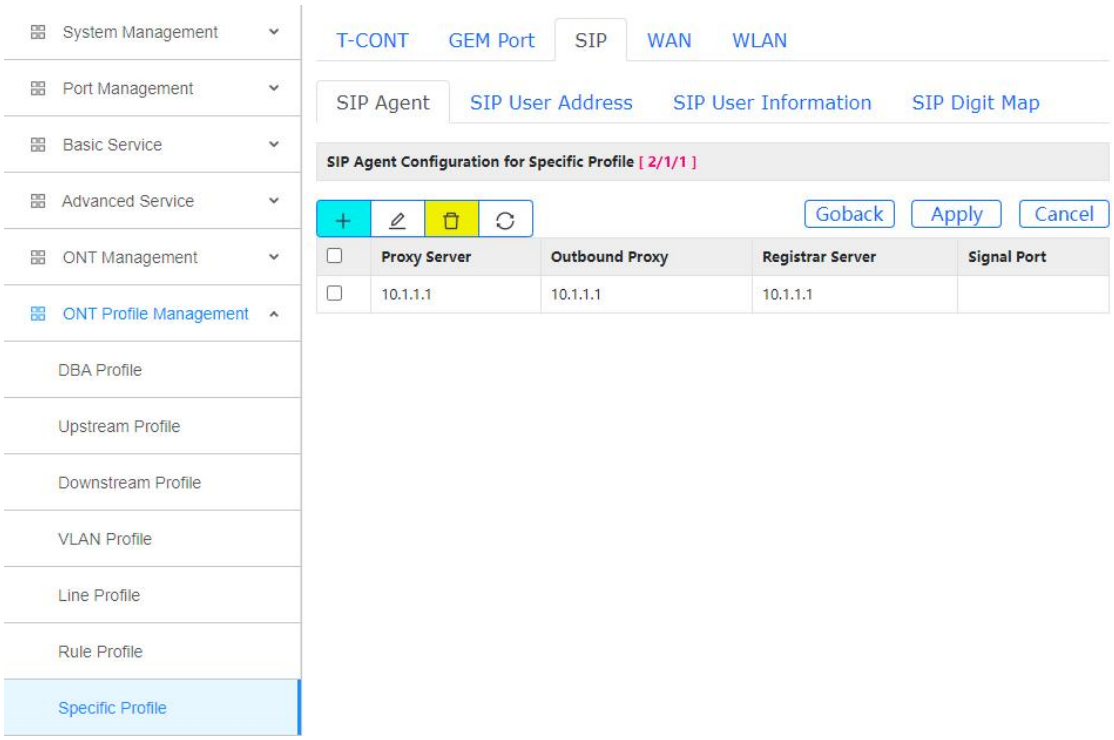


Figure 7-15

7.7.3.2 SIP User Address

1. Click Config->ONT Profile Management->Specific Profile->Detail->SIP->SIP User Address
2. This page is used to configure SIP user address, optional DHCP or static address.

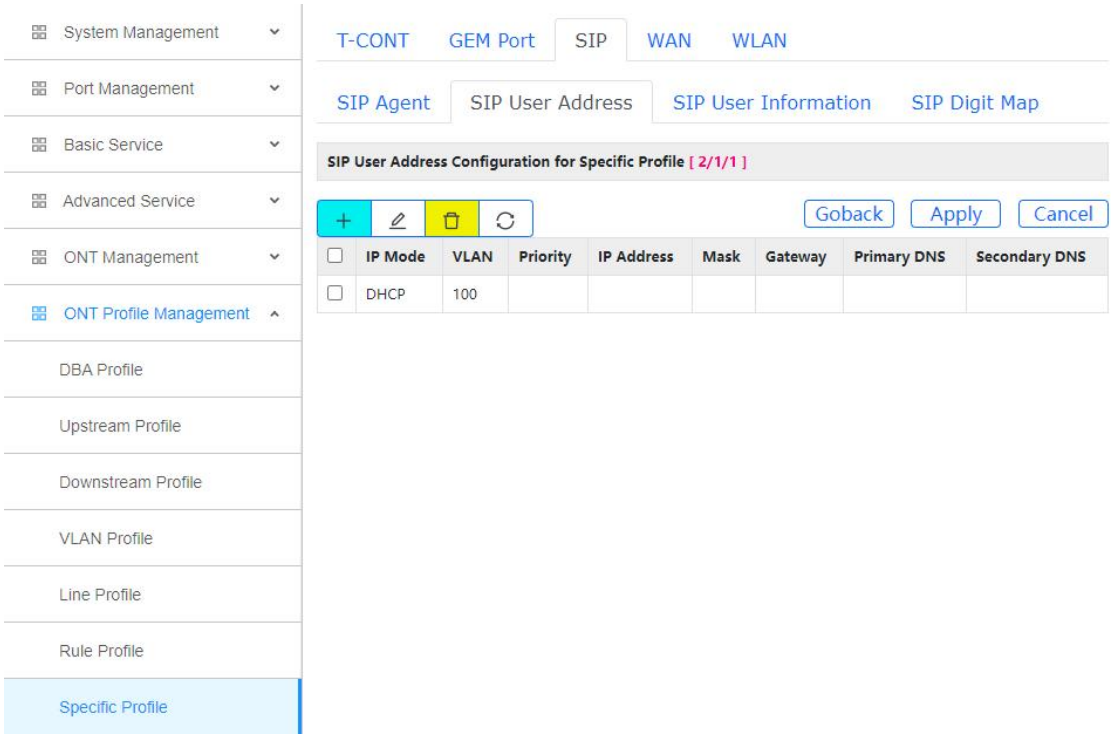


Figure 7-16

7.7.3.3 SIP User Information

1. Click Config->ONT Profile Management->Specific Profile->Detail->SIP->SIP User Information
2. This page is used to configure SIP user account and password.

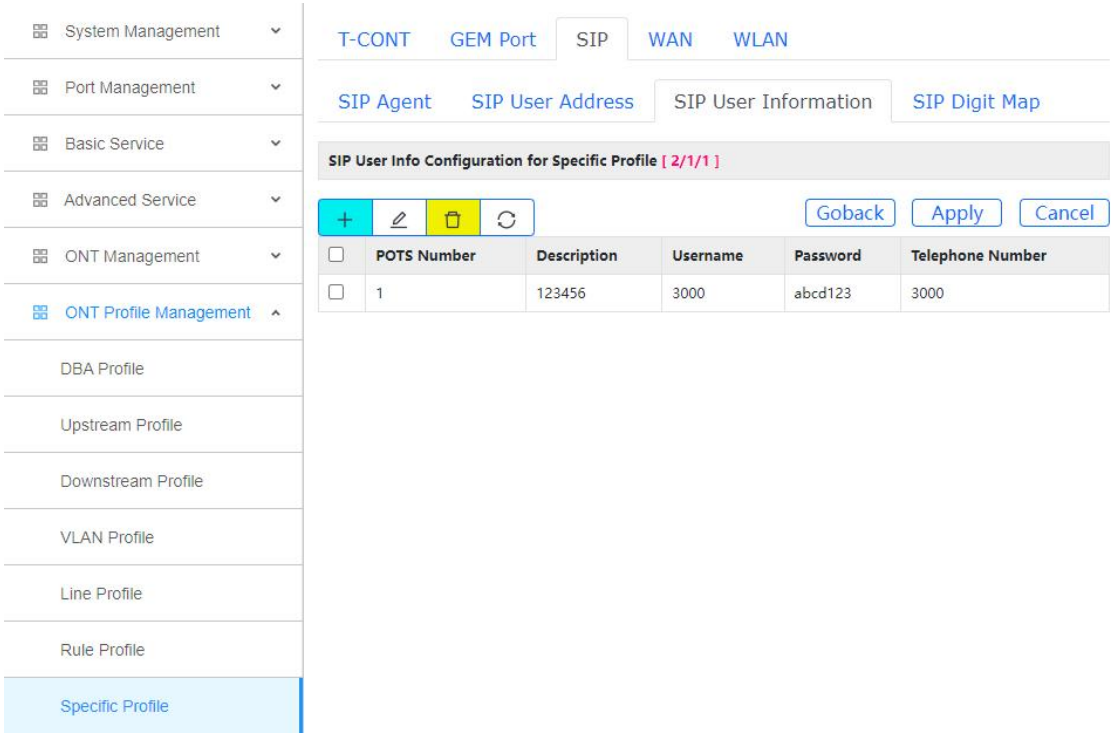


Figure 7-17

7.7.3.4 SIP Digit Map

1. Click Config->ONT Profile Management->Specific Profile->Detail->SIP->SIP Digit Map
2. This page is used to configure SIP digit map.

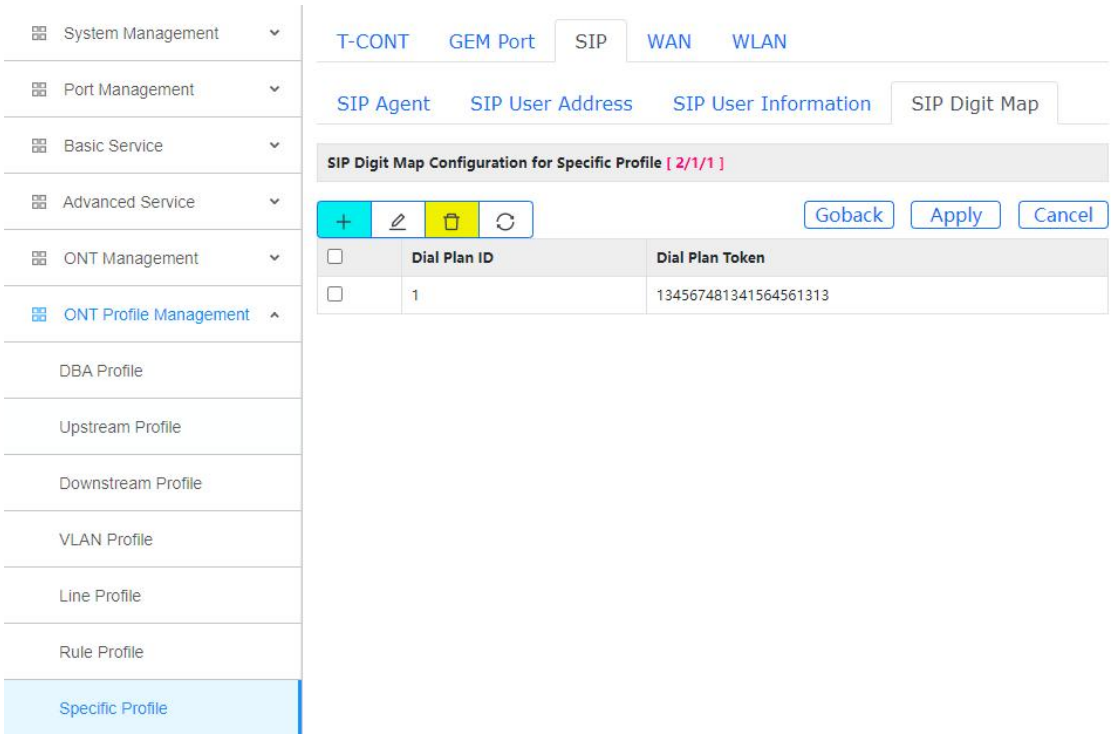


Figure 7-18

7.7.4 WAN

1. Click Config->ONT Profile Management->Specific Profile->Detail->WAN
2. This page is used to configure the WAN of the ONU, up to four.

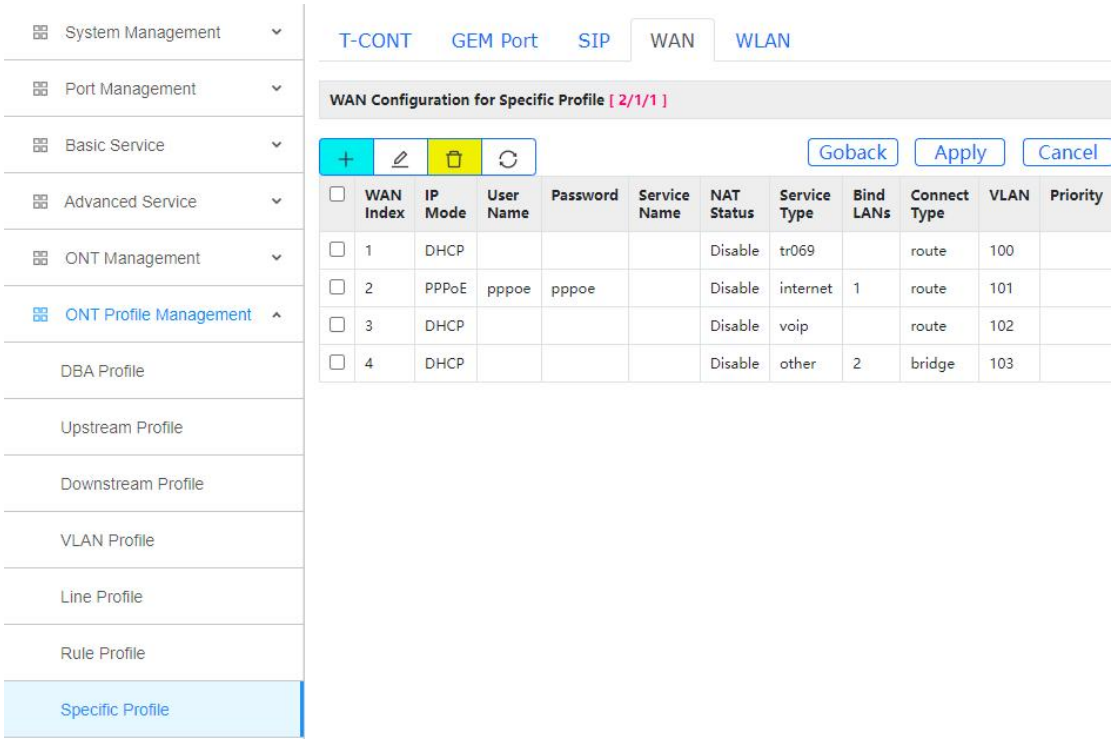


Figure 7-19

7.7.5 WLAN

1. Click Config->ONT Profile Management->Specific Profile->Detail->WLAN
2. This page is used to configure WIFI password and bind WIFI profile。

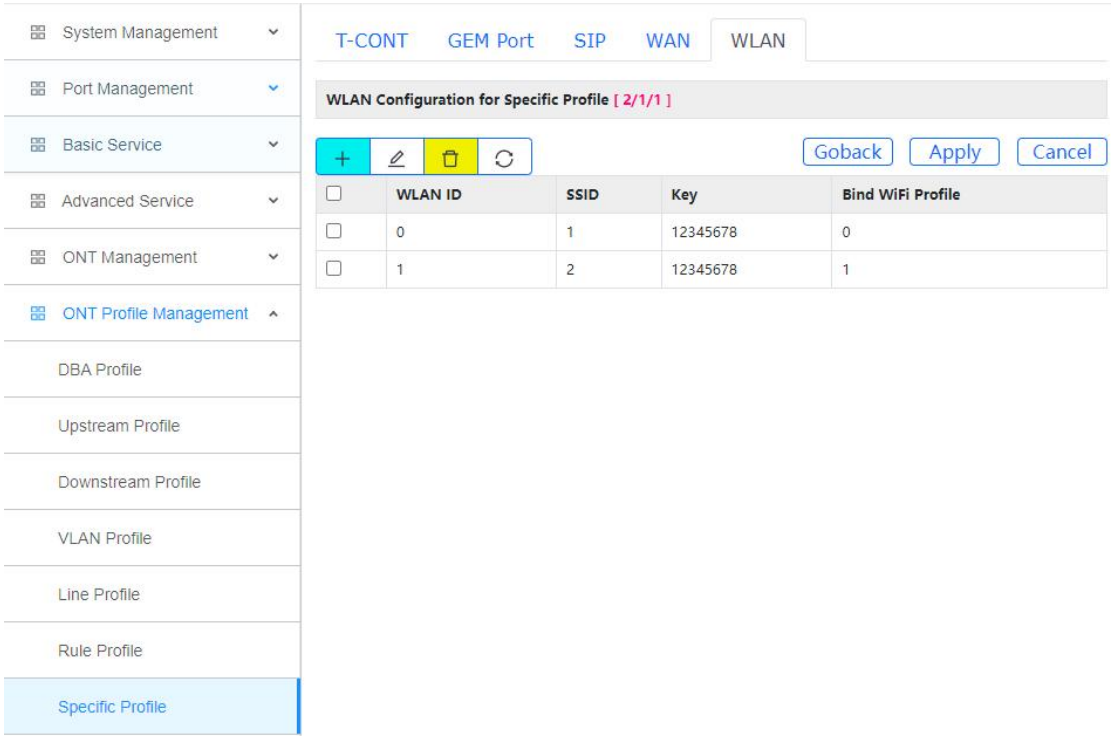


Figure 7-20

7.7.6 TR069

OLT issues TR069 server configuration to ONT through the private OMCI protocol, which requires ONT support.

7.7.6.1 TR069 STUN

1. Click on Config->ONT Profile Management->Specific Profile->Detail->TR069->TR069 STUN
2. This page is used to configure the TR069 server address, account, and password. This part belongs to a private protocol and requires ONT support.

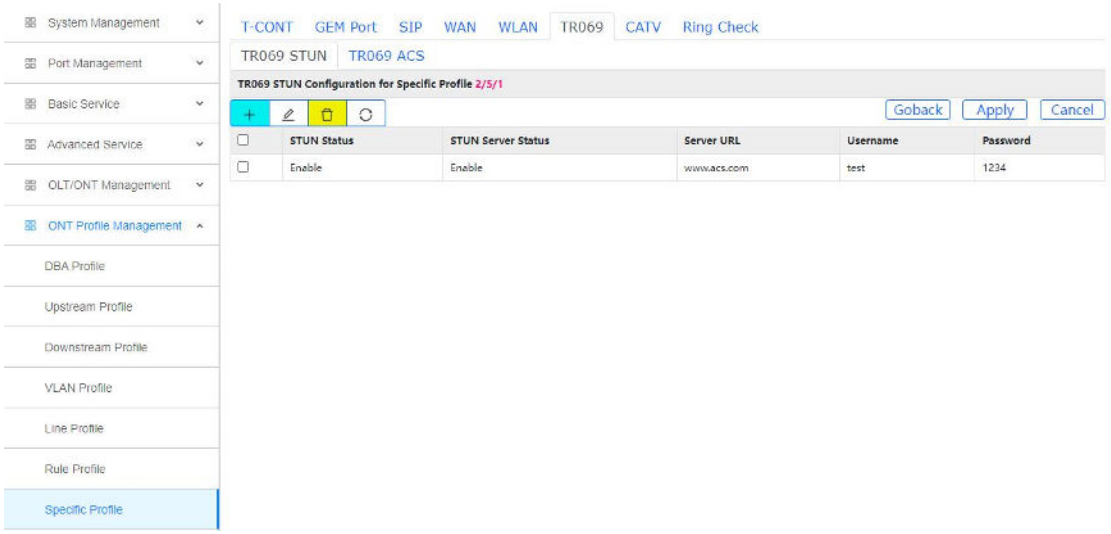


Figure 7-21

7.7.6.2 TR069 ACS

1. Click on Config->ONT Profile Management->Specific Profile->Detail->TR069->TR069 ACS
2. This page is used to configure the TR069 ACS server address, account, and password. This part belongs to a private protocol and requires ONT support.

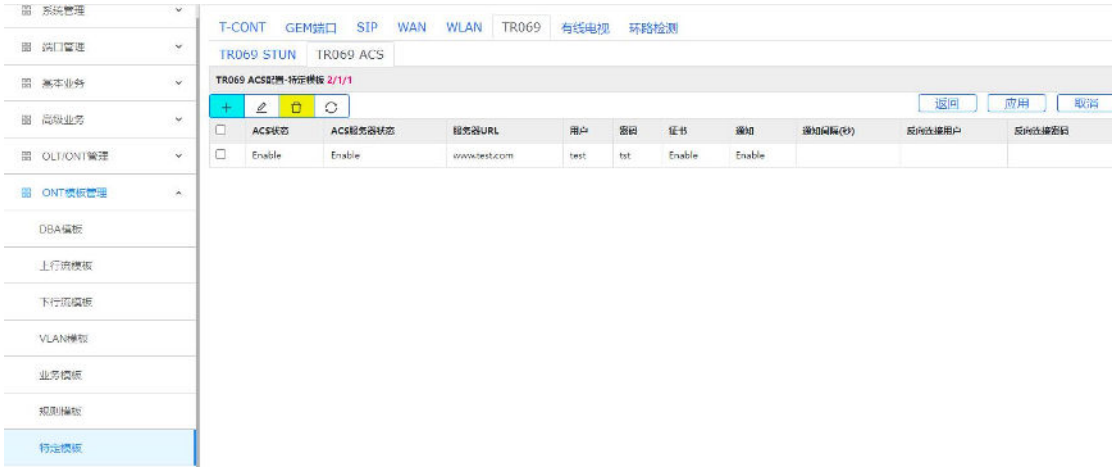


Figure 7-22

7.7.7 CATV

1. Click on Config->ONT Profile Management->Specific Profile->Detail->CATV
2. This page is used to configure the CATV related parameters of ONU. This part belongs to a private protocol and requires ONT support.

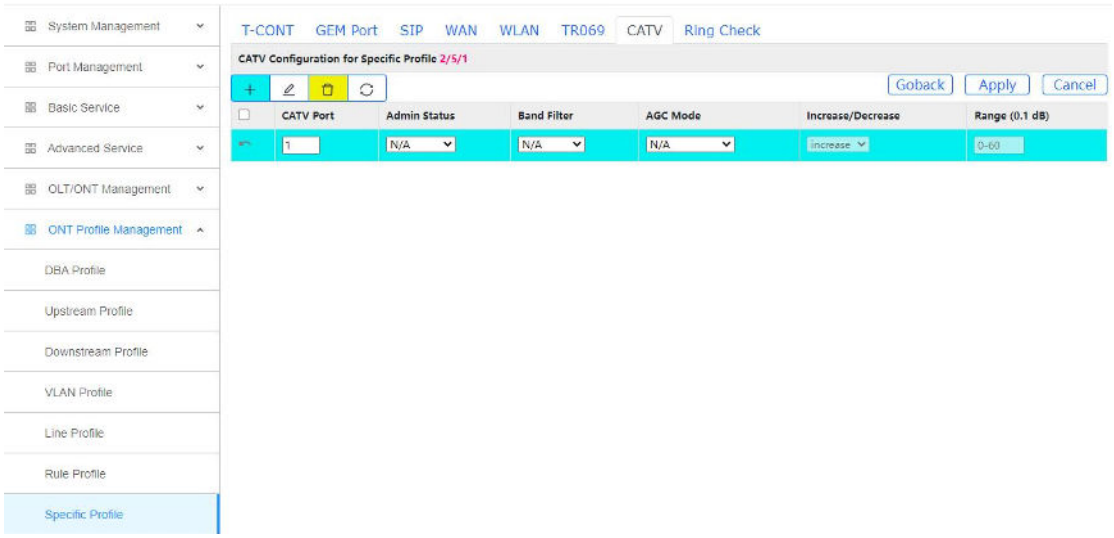


Figure 7-23

7.7.8 Ring Check

1. Click on Config->ONT Profile Management->Specific Profile->Detail->Ring Check
2. This page is used to configure the loop detection related parameters of ONU.

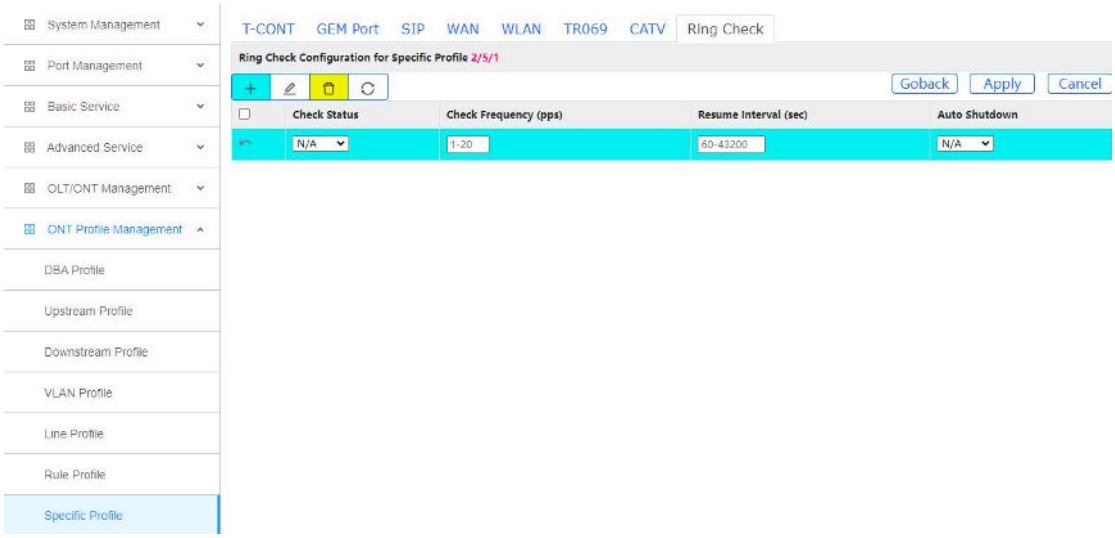


Figure 7-24

7.8 Alarm Profile

1. Click Config->ONT Profile Management->Alarm Profile
2. This page is used to configure the optical power alarm profile. The alarm profile needs to be bound and used in the line profile.

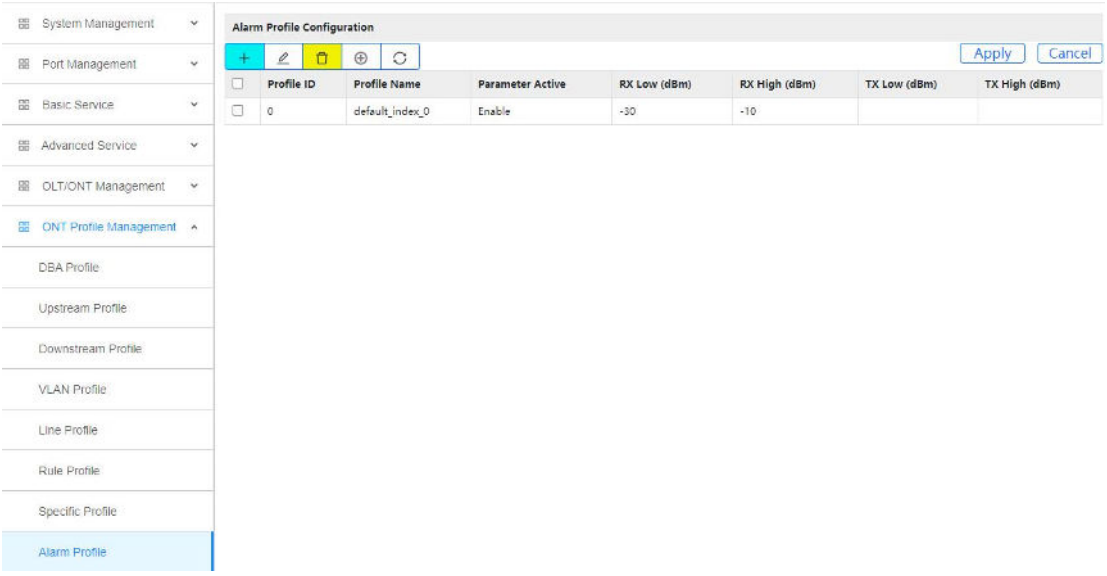


Figure 7-25

7.9 Multicast Profile

7.9.1 Create Multicast Profile

1. Click Config->ONT Profile Management->Multicast Profile
2. This page is used to create a multicast profile. Multicast profile needs to be bound and used in the line profile.



Figure 7-26

7.9.2 Configure Multicast Profile Configuration

1. Click Config->ONT Profile Management->Multicast Profile->Detail
2. This page is used to configure the multicast profile.



Figure 7-27

Chapter 8 Maintain

8.1 Software Upgrading

1. Click Maintain->Software Upgrading
2. This page upgrades the OLT version. You can choose to upgrade the boot and host files. After the upgrade, restart the OLT to take effect.

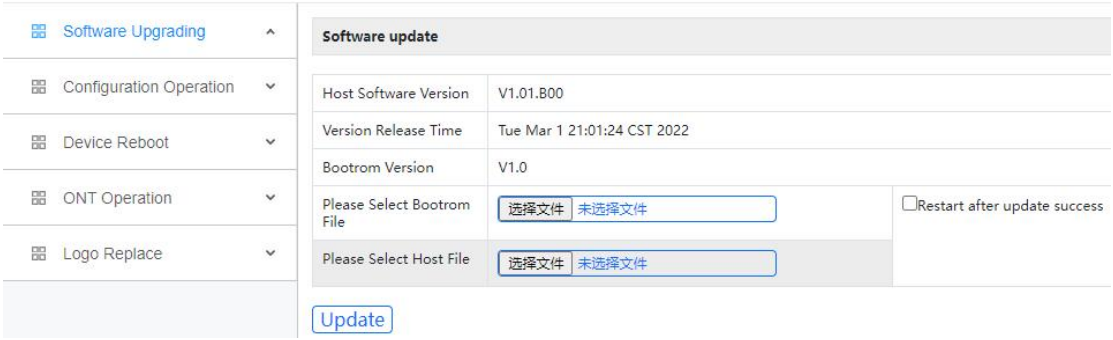


Figure 8-1

8.2 Configuration Operation

Configuration operations include upload, download and save configuration.

8.2.1 Configuration Update

1. Click Maintain->Configuration Operation->Configuration Update
2. This page uploads the configuration file to the OLT and saves the configuration file from the device to the PC.

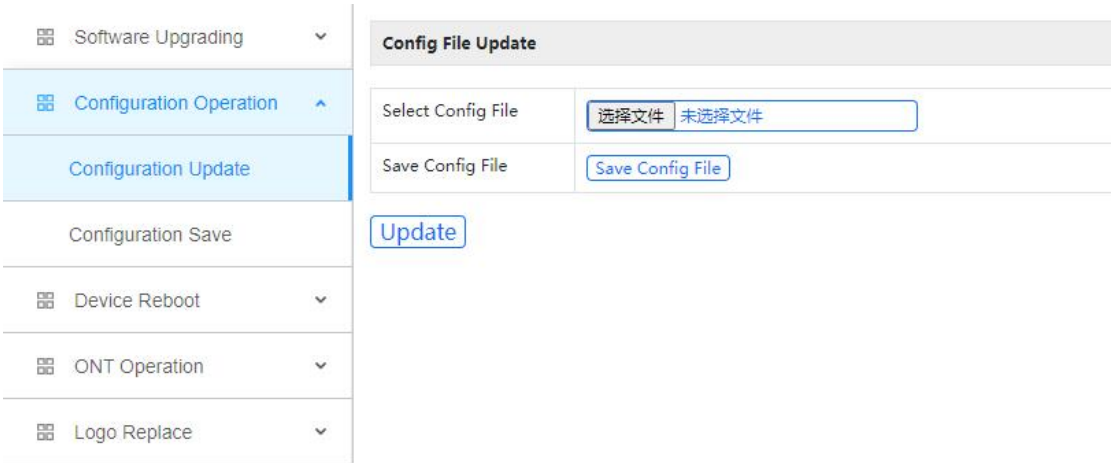


Figure 8-2

8.2.2 Configuration Save

1. Click Maintain->Configuration Operation->Configuration Save
2. This page saves the OLT configuration file to the flash.

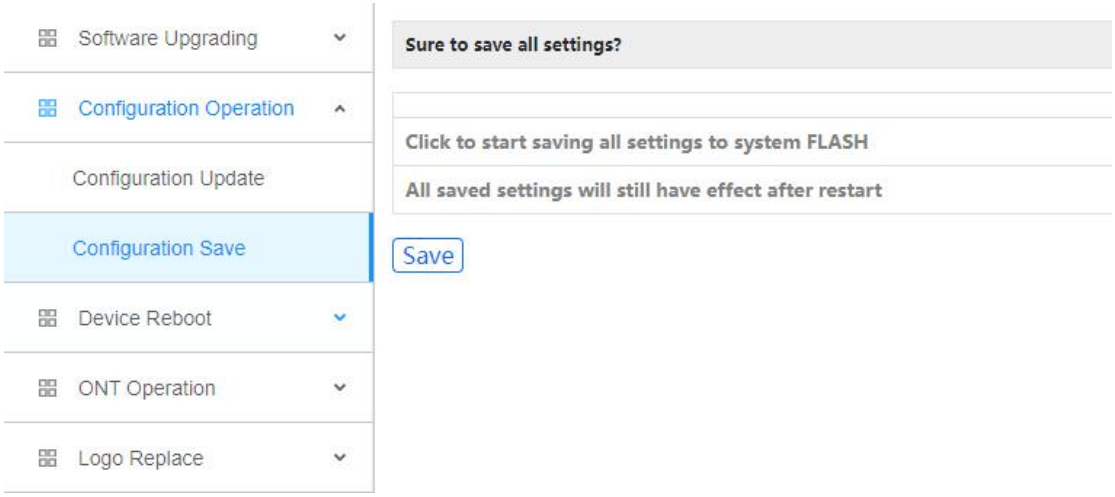


Figure 8-3

8.3 Device Reboot

1. Click Maintain->Device Reboot
2. This page restarts the OLT.

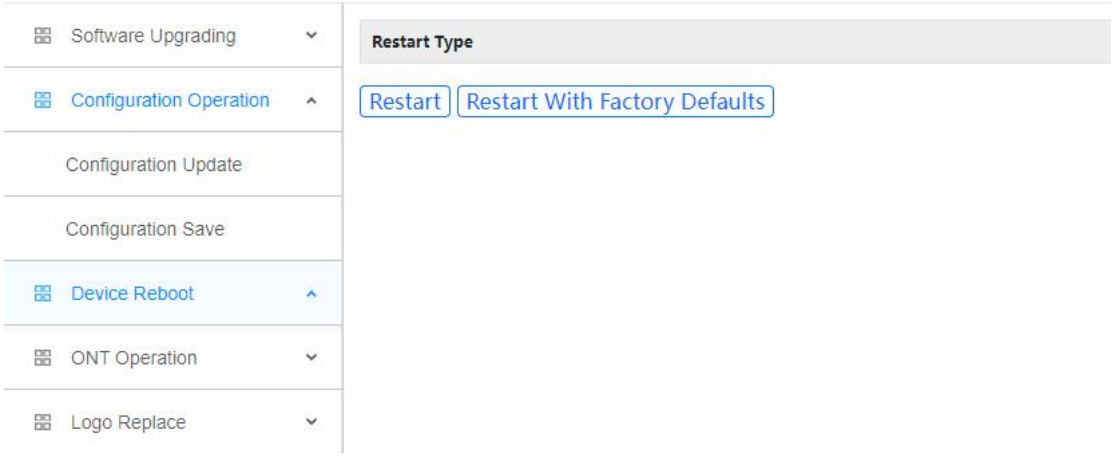


Figure 8-4

8.4 ONT Operation

ONU operations include upgrade the ONT and restart the ONT.

8.4.1 Software Upgrade

1. Click Maintain->ONT Operation->Software Upgrade
2. This page configures ONT batch upgrade. The ONT upgrade file must be uploaded to the OLT, and then the matching ONT will be upgraded by the OLT.

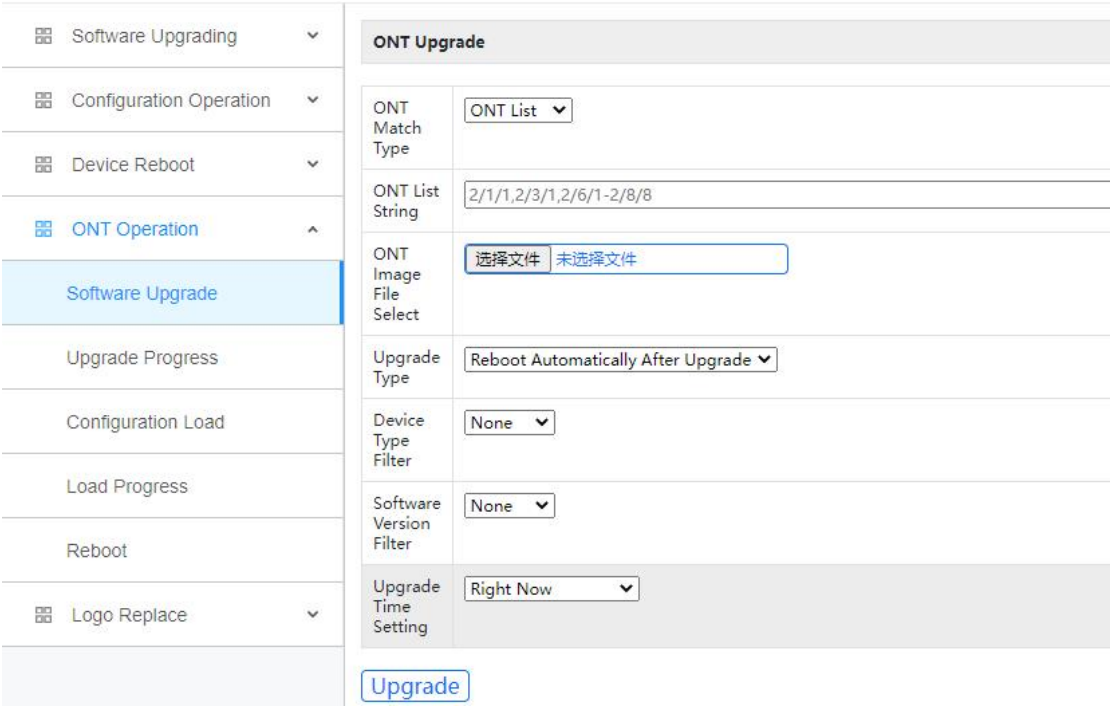


Figure 8-5

8.4.2 Upgrade Progress

1. Click Maintain->ONT Operation->Upgrade Progress
2. This page displays the upgrade progress of all ONTs.

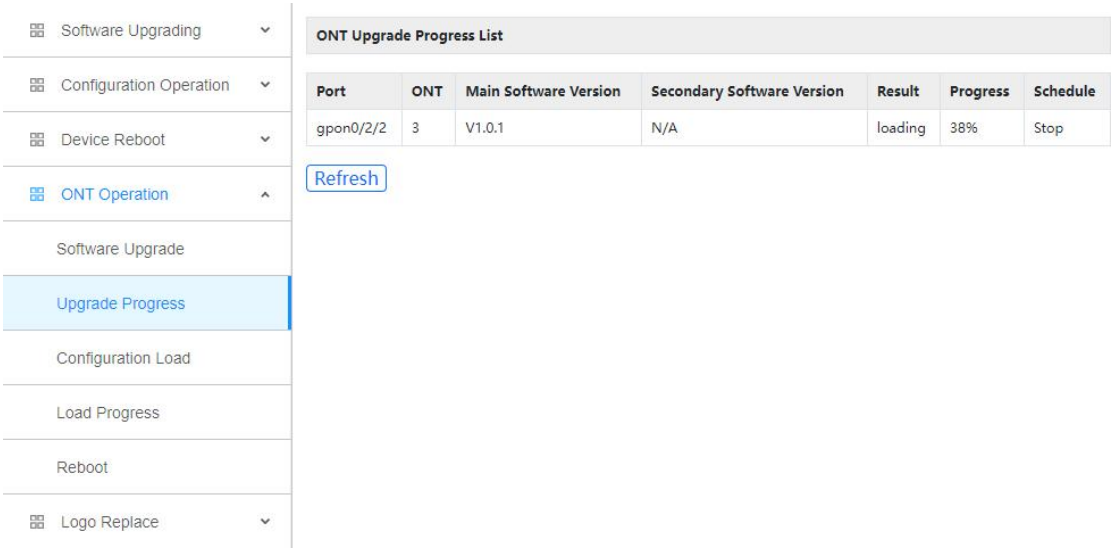


Figure 8-6

8.4.3 Configuration Load

1. Click Maintain->ONT Operation->Configuration Load
2. This page configures ONT XML configuration file load. The information is defined in a vendor-specific deployment descriptor.

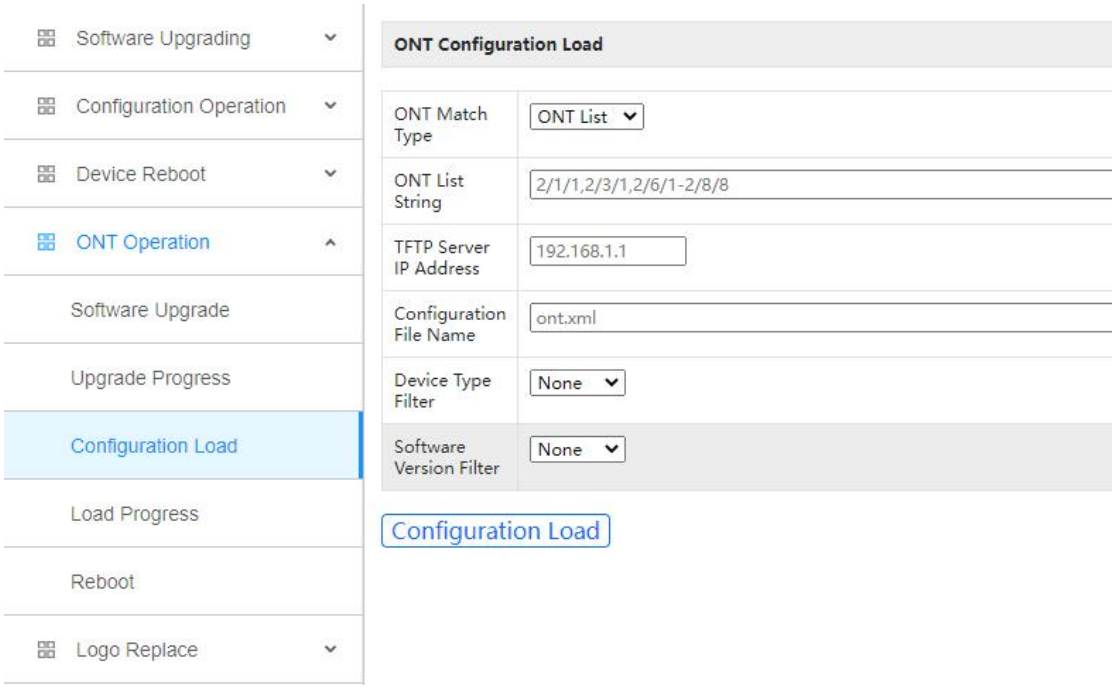


Figure 8-7

8.4.4 Load Progress

1. Click Maintain->ONT Operation->Load Progress
2. This page displays the XML configuration file load progress of all ONTs.

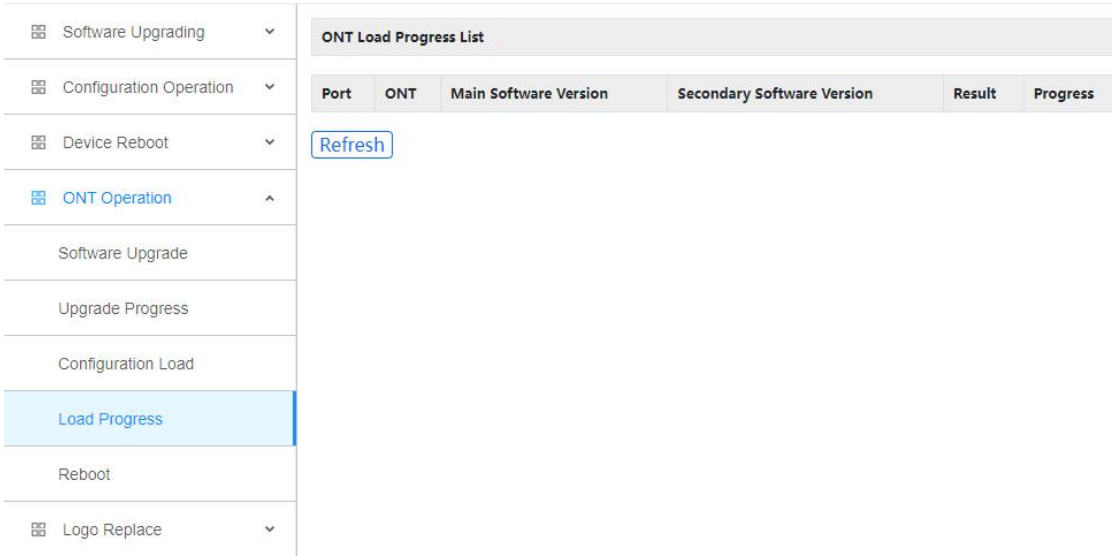


Figure 8-8

8.4.5 ONT Reboot

1. Click Maintain->ONT Operation->Reboot
2. This page restarts a single ONT or batches of ONTs.

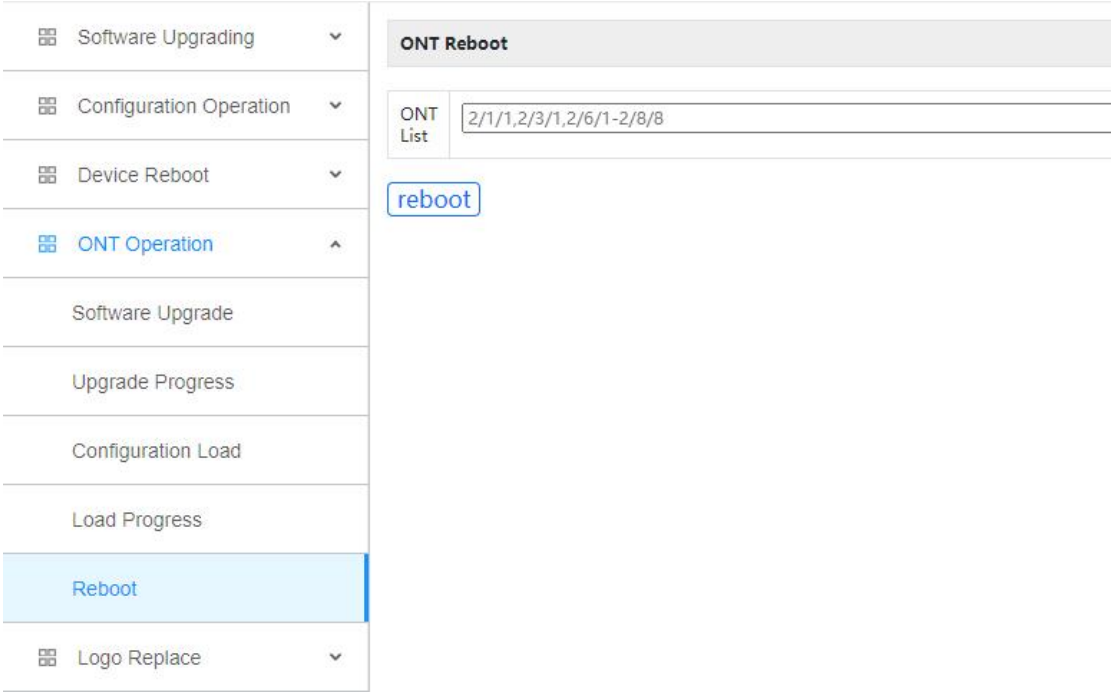


Figure 8-9

8.4.6 ONT Auto Reboot

1. Click Maintain->ONT Operation->ONT Auto Reboot
2. This page is used to schedule reboot ONT..

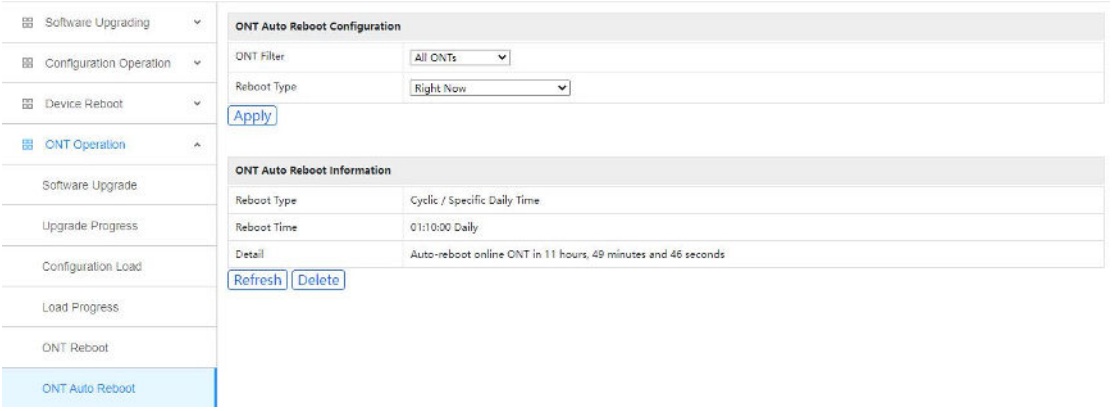


Figure 8-10

8.5 Diagnose Operation

Diagnostic operations include PING testing and TRACERT testing.

8.5.1 PING Test

1. Maintain->Diagnose Operation->PING Test
2. This page is used for PING testing.

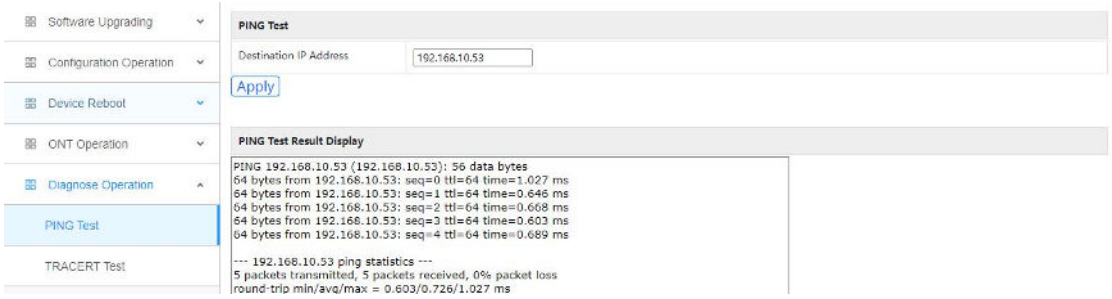


Figure 8-11

8.5.2 TRACERT Test

1. Maintain->Diagnose Operation->TRACERT Test
2. This page is used for TRACERT testing.



Figure 8-12